



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

LANE MEDICAL LIBRARY STAMFORD
L81 .W76 5 STOR
The home medical library / by Kenneth Win



24503336625

LANE



GIFT
Dr. Carl Schaupp

AMERICAN BOOK NOTE CO. LITHO.

*The Home Medical
Library*

The Home Medical Library

By

KENELM WINSLOW, B.A.S., M.D.

Formerly Assistant Professor Comparative Therapeutics, Harvard University; Late Surgeon to the Newton Hospital; Fellow of the Massachusetts Medical Society, etc.

With the Coöperation of Many Medical
Advising Editors and Special Contributors

IN SIX VOLUMES

*First Aid :: Family Medicines :: Nose, Throat, Lungs,
Eye, and Ear :: Stomach and Bowels :: Tumors and
Skin Diseases :: Rheumatism :: Germ Diseases
Nervous Diseases :: Insanity :: Sexual Hygiene
Woman and Child :: Heart, Blood, and Digestion :: Personal Hygiene :: Indoor Exercise
Diet and Conduct for Long Life :: Practical Kitchen Science :: Nervousness
and Outdoor Life :: Nurse and Patient :: Camping Comfort :: Sanitation of the Household :: Pure
Water Supply :: Pure Food
Stable and Kennel*

NEW YORK

The Review of Reviews Company

1909

Medical Advising Editors

Managing Editor

ALBERT WARREN FERRIS, A.M., M.D.

Former Assistant in Neurology, Columbia University; Former Chairman, Section on Neurology and Psychiatry, New York Academy of Medicine; Assistant in Medicine, University and Bellevue Hospital Medical College; Medical Editor, New International Encyclopedia.

Nervous Diseases

CHARLES E. ATWOOD, M.D.

Assistant in Neurology, Columbia University; Former Physician, Utica State Hospital and Bloomingdale Hospital for Insane Patients; Former Clinical Assistant to Sir William Gowers, National Hospital, London.

Pregnancy

RUSSELL BELLAMY, M.D.

Assistant in Obstetrics and Gynecology, Cornell University Medical College Dispensary; Captain and Assistant Surgeon (in charge), Squadron A, New York Cavalry; Assistant in Surgery, New York Polyclinic.

Germ Diseases

HERMANN MICHAEL BIGGS, M.D.

General Medical Officer and Director of Bacteriological Laboratories, New York City Department of Health; Professor of Clinical Medicine in University and Bellevue Hospital Medical College; Visiting Physician to Bellevue, St. Vincent's, Willard Parker, and Riverside Hospitals.

The Eye and Ear

J. HERBERT CLAIBORNE, M.D.

Clinical Instructor in Ophthalmology, Cornell University Medical College; Former Adjunct Professor of Ophthalmology, New York Polyclinic; Former Instructor in Ophthalmology in Columbia University; Surgeon, New Amsterdam Eye and Ear Hospital.

Sanitation

THOMAS DARLINGTON, M.D.

Health Commissioner of New York City; Former President Medical Board, New York Foundling Hospital; Consulting Physician, French Hospital; Attending Physician, St. John's Riverside Hospital, Yonkers; Surgeon to New Croton Aqueduct and other Public Works, to Copper Queen Consolidated Mining Company of Arizona, and Arizona and Southeastern Railroad Hospital; Author of Medical and Climatological Works.

Menstruation

AUSTIN FLINT, JR., M.D.

Professor of Obstetrics and Clinical Gynecology, New York University and Bellevue Hospital Medical College; Visiting Physician, Bellevue Hospital; Consulting Obstetrician, New York Maternity Hospital; Attending Physician, Hospital for Ruptured and Crippled, Manhattan Maternity and Emergency Hospitals.

v76
v.5
1909

Heart and Blood

JOHN BESSNER HUBER, A.M., M.D.

Assistant in Medicine, University and Bellevue Hospital Medical College; Visiting Physician to St. Joseph's Home for Consumptives; Author of "Consumption: Its Relation to Man and His Civilization; Its Prevention and Cure."

Skin Diseases

JAMES C. JOHNSTON, A.B., M.D.

Instructor in Pathology and Chief of Clinic, Department of Dermatology, Cornell University Medical College.

Diseases of Children

CHARLES GILMORE KERLEY, M.D.

Professor of Pediatrics, New York Polyclinic Medical School and Hospital; Attending Physician, New York Infant Asylum, Children's Department of Sydenham Hospital, and Babies' Hospital, N. Y.; Consulting Physician, Home for Crippled Children.

Bites and Stings

GEORGE GIBIER RAMBAUD, M.D.

President, New York Pasteur Institute.

Headache

ALONZO D. ROCKWELL, A.M., M.D.

Former Professor Electro-Therapeutics and Neurology at New York Post-Graduate Medical School; Neurologist and Electro-Therapeutist to the Flushing Hospital; Former Electro-Therapeutist to the Woman's Hospital in the State of New York; Author of Works on Medical and Surgical Uses of Electricity, Nervous Exhaustion (Neurasthenia), etc.

Poisons

E. ELLSWORTH SMITH, M.D.

Pathologist, St. John's Hospital, Yonkers; Somerset Hospital, Somerville, N. J.; Trinity Hospital, St. Bartholomew's Clinic, and the New York West Side German Dispensary.

Catarrh

SAMUEL WOOD THURBER, M.D.

Chief of Clinic and Instructor in Laryngology, Columbia University; Laryngologist to the Orphan's Home and Hospital.

Care of Infants

HERBERT B. WILCOX, M.D.

Assistant in Diseases of Children, Columbia University.

Special Contributors

Food Adulteration

S. JOSEPHINE BAKER, M.D.

Medical Inspector, New York City Department of Health.

Pure Water Supply

WILLIAM PAUL GERHARD, C.E.

Consulting Engineer for Sanitary Works; Member of American Public Health Association; Member, American Society Mechanical Engineers; Corresponding Member of American Institute of Architects, etc.; Author of "House Drainage," etc.

Care of Food

JANET MCKENZIE HILL

Editor, Boston Cooking School Magazine.

Nerves and Outdoor Life

S. WEIR MITCHELL, M.D., LL.D.

LL.D. (Harvard, Edinburgh, Princeton); Former President, Phi Beta Kappa College of Physicians; Member, National Academy of Sciences, Association of American Physicians, etc.; Author of essays: "Injuries to Nerves," "Doctor and Patient," "Fat and Blood," etc.; of scientific works: "Researches Upon the Venom of the Rattlesnake," etc.; of novels: "Hugh Wynne," "Characteristics," "Constance Trescott," "The Adventures of François," etc.

Sanitation

GEORGE M. PRICE, M.D.

Former Medical Sanitary Inspector, Department of Health, New York City; Inspector, New York Sanitary Aid Society of the 10th Ward, 1885; Manager, Model Tenement-houses of the New York Tenement-house Building Co., 1888; Inspector, New York State Tenement-house Commission, 1895; Author of "Tenement-house Inspection," "Handbook on Sanitation," etc.

Indoor Exercise

DUDLEY ALLEN SARGENT, M.D.

Director of Hemenway Gymnasium, Harvard University; Former President, American Physical Culture Society; Director, Normal School of Physical Training, Cambridge, Mass.; President, American Association for Promotion of Physical Education; Author of "Universal Test for Strength," "Health, Strength and Power," etc.

Long Life

SIR HENRY THOMPSON, Bart., F.R.C.S., M.B. (Lond.)

Surgeon Extraordinary to His Majesty the King of the Belgians; Consulting Surgeon to University College Hospital, London; Emeritus Professor of Clinical Surgery to University College, London, etc.

Camp Comfort

STEWART EDWARD WHITE

Author of "The Forest," "The Mountains," "The Silent Places," "The Blazed Trail," etc.



WALTER REED.

In the year 1900, Major Walter Reed, a surgeon in the United States Army, demonstrated, by experiments conducted in Cuba, that a mosquito of a single species, *Stegomyia fasciata*, which has sucked the blood of a yellow-fever patient, may transmit the disease by biting another person, but not until about twelve days have elapsed. He also proved, as described in Volume I, Part II, that the malady is not contagious. "With the exception of the discovery of anaesthesia," said Professor Welch, of Johns Hopkins University, "Dr. Reed's researches are the most valuable contributions to science ever made in this country." General Leonard Wood declared the discovery to be the "greatest medical work of modern times," which, in the words of President Roosevelt, "renders mankind his debtor." Major Reed died November 23, 1902.

The Home Medical Library

VOLUME V :: SANITATION

Edited by

THOMAS DARLINGTON, M.D.

Health Commissioner of New York City; Former President Medical Board, New York Foundling Hospital, etc.; Author of Medical and Climatological Works

WATER SUPPLY AND PURIFICATION

By **WILLIAM PAUL GERHARD, C.E.**

Consulting Engineer for Sanitary Works; Author of "House Drainage," "Sanitary Engineering," "Household Wastes," etc.

PURE FOOD FOR THE HOUSEKEEPER

By **S. JOSEPHINE BAKER, M.D.**

Medical Inspector, New York City Department of Health

THE HOUSE AND GROUNDS

By **GEORGE M. PRICE, M.D.**

Former Medical Sanitary Inspector, Department of Health, New York City; Author of "Tenement-House Inspection," "Handbook on Sanitation," etc.

NEW YORK

The Review of Reviews Company

1909

Copyright, 1907, by
THE REVIEW OF REVIEWS COMPANY

THE TROW PRESS, NEW YORK

Contents

PART I

CHAPTER		PAGE
I.	COUNTRY SOURCES OF WATER SUPPLY . Relation of Water to Health—Collection of Rain Water—Cisterns—Springs—Various Kinds of Wells—Laws Regulating Supply.	19
II.	APPLIANCES FOR DISTRIBUTING WATER . Pumping Machines—The Hydraulic Ram — Use of Windmills — Engines — Steam and Electric Pumps — Reservoirs and Tanks—Appliances for Country Houses.	39
III.	PURIFYING WATER BY COPPER SULPHATE Clear Water Often Dangerous—Pollution Due to Plants—Copper Sulphate Method— Directions for the Copper Cure.	52
IV.	RIDDING STAGNANT WATER OF MOSQUI- TOES Malaria Due to Mosquitoes—Cause of Yel- low Fever—Effect of a Mosquito Bite— Destruction of Larvæ—Best Preventive Measures—Use of Kerosene.	70

PART II

I.	HOW TO DETECT FOOD ADULTERATION . Definition of Adulteration—Food Laws—	87
----	--	----

Contents

CHAPTER	PAGE
Permissible Adulterants—How to Select Pure Food—Chemical Tests.	
II. MUSHROOM POISONING	112
Symptoms and Treatment—Coffee and Atropine the Best Antidotes—How to Tell the Edible Kind—"Horse," "Fairy-ring," and Other Varieties—Poisonous Species.	
PART III	
I. SOIL AND SITES	131
Constituents of the Soil—Influence on Health—Improving Defective Soil—Street Paving and Tree Planting—Proper Construction of Houses—Subsoil Drainage.	
II. VENTILATION	146
What is Meant by Ventilation—Quantity of Air Required—Natural Agents of Ventilation—Special Appliances.	
III. WARMING	160
Various Methods—Materials of Combustion—Chimneys—Fireplaces and Grates—Stoves—Hot-air Warming—Hot-water Systems—Principles of Steam Heating.	
IV. DISPOSAL OF SEWAGE	170
Refuse and Garbage—Discharge into Waters—Cremation—Precipitation—Intermittent Filtration—Immediate Disposal, etc.	

Contents

CHAPTER	PAGE
<p>V. SEWERS</p> <p style="padding-left: 2em;">Definition—Materials Used in Construction—Levels of Trenches—Joints of Pipes—The Fall and Flow of the Contents—Connections—Tide Valves—Sewer Gas.</p>	<p>182</p>
<p>VI. PLUMBING</p> <p style="padding-left: 2em;">Purposes and Requisites—Materials Used—Joints and Connections—Construction of Traps—Siphonage and Back Pressure—The Vent-pipe System.</p>	<p>189</p>
<p>VII. PLUMBING PIPES</p> <p style="padding-left: 2em;">Construction of House Drains—Fall, Position, and Connection—Main Traps—Extension of Vertical Pipes—Fresh-air Inlets—Soil and Waste Pipes—Branch Pipes, etc.</p>	<p>206</p>
<p>VIII. PLUMBING FIXTURES</p> <p style="padding-left: 2em;">Sinks—Washbasins—Washtubs—Bath-tubs—Refrigerators, etc.—Safes and Wastes—Pan, Valve, and Hopper Closets—Flush Tanks—Yard Closets—Drains.</p>	<p>216</p>
<p>IX. DEFECTS IN PLUMBING</p> <p style="padding-left: 2em;">Poor Work—Improper Conditions—How to Test Traps, Joints, and Connections—Detect Sewer Gas—Water-pressure, Smoke, and Scent Tests—Special Appliances.</p>	<p>231</p>

Contents

CHAPTER	PAGE
X. INFECTION AND DISINFECTION	238
Physical and Chemical Disinfectants— Use of Sulphur Dioxide—Formaldehyde —Hydrocyanic Acid—Chlorine—Carbolic Acid—Bichloride of Mercury—Formalin —Potassium Permanganate, etc.	
XI. COST OF CONVEYED HEATING SYSTEMS . .	254
Cost of Hot-air Systems—Cast-iron Hot- water Heater—Advantages and Disadvan- tages—Cost for a Ten-room House— Steam Heating—Cost of Equipment.	

The Editor's Preface

THE character and scope of this volume render it a most useful book for the home maker. The question of sanitation is one that closely affects the life of each individual, and many of its aspects are treated here in a lucid and comprehensive manner. Designed for wide distribution, these articles have been written to meet the needs of the dweller in the more densely populated communities, as well as those living in the less thickly settled portion of the country.

In large cities the water supply is a problem that is cared for by regularly constituted sanitary authorities. Pure water is a vital necessity, but the inhabitant of a city has no need to personally concern himself with the source of supply. In the country, however, the home builder must often decide the matter for himself, and it is the aim of this book to give him the needed directions for avoiding many errors and pitfalls that abound in this direction.

House construction, with its intricate problems, is also a more serious matter for the country dweller than for his city brother.

In the matter of food supply, the inhabitant of a country district is more fortunate. Fresh vegetables

The Editor's Preface

and dairy products are much more easily obtained, and their freshness and purity more dependable.

The article on water supply by Mr. Gerhard is authoritative, written, as it is, by a most eminent sanitarian. The publishers are to be congratulated upon the following valuable contribution to the same subject as regards the use of copper sulphate and the concise presentation of plans for mosquito extermination, while the extended work of Dr. Price and Dr. Baker's "Food Adulteration" are much to be commended. The two latter have been connected with the Department of Health of New York City, and have the advantage of experience in an organization which gives to the citizens of New York the protection to health that the wise use of science, knowledge, and money afford.

I trust that the notes I have added in the light of recent practice of the New York City Department of Health may make this material of the utmost practical value to the householder of to-day.

Through this Department of Health, New York City spent, during 1905, over \$1,500,000, and for 1906 it has appropriated over \$1,800,000. This vast sum of money is used for the sole purpose of safeguarding its citizens from disease. Sanitation in its varied branches is pursued as an almost exact science, and the efforts of trained minds are constantly employed in combating disease and promoting sanitation.

The cities care for their own, but the greater num-

The Editor's Preface

ber of the inhabitants of this country must rely upon their individual efforts. Therefore, any dissemination of knowledge regarding sanitation is most worthy. This book has a useful mission. It is pregnant with helpful suggestions, and I most heartily commend its purpose and its contents.

THOMAS DARLINGTON,

President of the Board of Health.

NEW YORK CITY.

CHAPTER I

Country Sources of Water Supply

THE writer was recently engaged to plan and install a water-supply system for a country house which had been erected and completed without any provision whatever having been made for supplying the buildings and grounds with water. The house had all the usual appointments for comfort and ample modern conveniences, but these could be used only with water borrowed from a neighbor. In all parts of the country there are numerous farm buildings which are without a proper water-supply installation. These facts are mentioned to emphasize the importance of a good water supply for the country home, and to point out that water is unquestionably the most indispensable requirement for such structures.

Adequate Water Supply Important

But the advantages of a water supply are not limited to the dwelling house, for it is equally useful on the farm, for irrigation, and in the garden, on the golf grounds and tennis courts, in the barns and stables;

Country Water Supply

it affords, besides, the best means for the much-desired fire protection. And, most important of all, an unstinted and adequate use of water promotes cleanliness and thereby furthers the cause of sanitation, in the country not less than in the city home.

The water supply for country houses has been so often discussed recently that the writer cannot hope to bring up any new points. This article should, therefore, be understood to offer simple suggestions as to how and where water can be obtained, what water is pure and fit for use, what water must be considered with suspicion, what water is dangerous to health, and how a source of supply, meeting the requirements of health, can be made available for convenient use.

Right here I wish to utter a warning against the frequent tendency of owners of country houses to play the rôle of amateur engineers. As a rule this leads to failure and disappointment. Much money uselessly spent can be saved if owners will, from the beginning, place the matter in experienced hands, or at least seek the advice of competent engineers, and adopt their suggestions and recommendations as a guide.

Points to be Borne in Mind

Many are the points to be borne in mind in the search for water. Science teaches us that all water comes from the clouds, the atmospheric precipitation being in the form of either rain, or dew, or snow.

William Paul Gerhard

After reaching the earth's surface, the water takes three different courses, and these are mentioned here because they serve to explain the different sources of supply and their varied character.

A part of the water runs off on the surface, forming brooks, streams, and lakes, and if it falls on roofs of houses or on prepared catchment areas, it can be collected in cisterns or tanks as rain water. Another part of the water soaks away into pervious strata of the subsoil, and constitutes underground water, which becomes available for supply either in springs or in wells. A third part is either absorbed by plants or else evaporated.

In our search for a source of supply, we should always bear in mind the essential requirements of the problem. Briefly stated, these are: the wholesomeness of the water, the adequateness and steadiness of the supply, its availability under a sufficient pressure, insuring a good flow, and the legal restrictions with which many water-supply problems are surrounded.

The first essential requirement is that of *wholesomeness*. The quality of a water supply is dependent upon physical properties and upon chemical and bacteriological characteristics. Water, to be suitable for drinking, must be neither too hard nor too soft; it should not contain too many suspended impurities, nor too much foreign matter in solution. Pure water is colorless and without odor. But it must be understood that the quality cannot be decided merely by

Country Water Supply

the color, appearance, taste, and odor. The chemical and bacteriological examinations, if taken together, form a much safer guide, and with these analyses should go hand in hand a detailed survey of the water source and its surroundings.

Relation of Water to Health

Any pronounced taste in the water renders it suspicious; an offensive smell points to organic contamination; turbidity indicates presence of suspended impurities, which may be either mineral or organic. But even bright and sparkling waters having a very good taste are sometimes found to be highly polluted. Hence, it should be remembered that neither bright appearance nor lack of bad taste warrants the belief that water is free from dangerous contamination.

It is a well-established fact now that there is a relation between the character of the water supply and the health of a community; and what is true of cities, villages, and towns, is, of course, equally true of the individual country house.

How Water Becomes Contaminated

There are numerous ways in which water may become polluted, either at the source or during storage or finally during distribution. Rain water, falling pure from the clouds, encounters dust, soot, decaying leaves

William Paul Gerhard

and other vegetable matters, and ordure of birds on the roofs; its quality is also affected by the roofing material, or else it is contaminated in the cisterns by leakage from drains or cesspools. Upland waters contain generally vegetable matter, while surface water from cultivated lands becomes polluted by animal manure. River water becomes befouled by the discharge into it of the sewers from settlements and towns located on its banks. Subsoil water is liable to infiltration of solid and liquid wastes emanating from the human system, from leaky drains, sewers, or cesspools, stables, or farmyards; and even deep well water may become contaminated by reason of defects in the construction of the well.

During storage, water becomes contaminated in open reservoirs by atmospheric impurities; a growth of vegetable organisms or algæ often causes trouble, bad taste, or odor; water in open house tanks and in cisterns is also liable to pollution. During distribution, water may become changed in quality, owing to the action of the water on the material of the pipes.

From what source shall good water be obtained? This is the problem which confronts many of those who decide to build in the country.

The usual sources, in their relative order of purity, are: deep springs and land or surface springs, located either above or below the house, but not too near to settlements; deep subterranean water, made available by boring or drilling a well; upland or mountain

Country Water Supply

to collect, store, and distribute the water ; finally, where a gravity supply is unavailable, the probable operating expenses of the water system, cost of pumping, etc.

Collection of Rain Water

The collection of rain water near extensive manufacturing establishments is not advisable, except where arrangements are provided for either filtering or distilling the water. In the country, rain water is pure and good, if the precaution is observed to allow the first wash from roofs to run to waste. The rain may be either caught on the roofs, which must always have a clean surface and clean gutters, or else on artificially prepared catchment areas. As an example, I quote: "All about the Bermuda Islands one sees great white scars on the hill slopes. These are dished spaces, where the soil has been scraped off and the coral rock exposed and glazed with hard whitewash. Some of these are a quarter acre in size. They catch and carry the rainfall to reservoirs, for the wells are few and poor, and there are no natural springs and no brooks." (Mark Twain, "Some Rambling Notes of an Idle Excursion.")

After the close of the Boer War the English sent about 7,000 Boer prisoners of war to Bermuda, where they were encamped on some of the smaller islands of the group, and the entire water supply for the encampment was obtained by building artificial catchment areas as described in the above quotation.

William Paul Gerhard

Sometimes, instead of building underground cisterns, rain water is caught and stored in barrels above ground; if so, these should always be well covered, not only to avoid pollution, but to prevent the barrels from becoming mosquito breeders. Cisterns should always be built with care and made water-tight and impervious. The walls should be lined with cemented brickwork. In soil consisting of hard pan, cisterns in some parts of the country are built without brick walls, the walls of the excavation being simply cemented. I do not approve of such cheap construction, particularly where the cistern is located near a privy or cesspool. Pollution of cistern water is often due to the cracking of the cement lining. Overflows of cisterns should never be connected with a drain, sewer, or cesspool. Run the overflow into some surface ditch and provide the mouth with a fine wire screen, to exclude small animals. It is not recommended to build cisterns in cellars of houses.

Quality of Water Obtained from Lakes

Lakes yield, as a rule, a supply of clear, bright, and soft water. This is particularly the case with mountain lakes, because they are at a distance from sources of contamination. The character of the water depends upon whether the lake is fed by brooks, that is, by the rain falling upon the watershed, or also by springs. In one case the water is surface water exclusively; in the other, it is surface and underground water

Country Water Supply

mixed. The purity also depends upon the depth of the lake and upon the character of its bottom.

Deep lakes furnish a better supply and clearer water than shallow ones. The solid matter brought into the lake by the brooks or rivers which feed it does not remain long in suspension, but soon settles at the bottom, and in this way some lakes acquire the wonderfully clear water and the beautiful bluish-green color for which they are far famed.

Strong Winds Dangerous on Lakes

Strong winds or currents at times stir up the mud from the bottom; hence, in locating the intake, the direction of the prevailing winds should be considered, if practicable. The suction pipe should always be placed in deep water, at a depth of at least fifteen to twenty feet, for here the water is purer and always cooler.

Settlements on the shores of a lake imply danger of sewage contamination, but the larger the lake, the less is the danger of a marked or serious pollution, if the houses are scattered and few.

Pools and stagnant ponds are not to be recommended as a source of supply. In artificially made lakes there is sometimes danger of vegetable pollution, and trouble with growth of algæ. The bottom of such lakes should always be cleared from all dead vegetation.

William Paul Gerhard

Surface water may be obtained from brooks flowing through uninhabited upland or from mountain streams. Such water is very pure and limpid, particularly where the stream in its downward course tumbles over rocks or forms waterfalls. But, even then, the watershed of the stream should be guarded to prevent subsequent contamination. Larger creeks or rivers are not desirable as a source of supply, for settlements of human habitations, hamlets, villages, and even towns are apt to be located on the banks of the river, which is quite generally used—wrong as it is—as an outlet for the liquid wastes of the community, thus becoming in time grossly polluted. Down-stream neighbors are sure to suffer from a pollution of the stream, which the law should prevent.

The Water of Springs

The water of springs is subterranean, or ground water, which for geological reasons has found a natural outlet on the surface. We distinguish two kinds of springs, namely, land or surface springs, and deep springs. The former furnish water which originally fell as rain upon a permeable stratum of sand or gravel, underlaid by an impervious one of either clay or rock. Such water soaks away underground until it meets some obstacle causing it to crop out on the surface. Such spring water is not under pressure and therefore cannot again rise. Water from

Country Water Supply

deep springs is rain water fallen on the surface of a porous stratum on a high level, and which passes under an impermeable stratum, and thus, being under pressure, rises again where an opening is encountered in the impervious stratum; these latter springs are really artesian in character.

Deep-spring water is less apt to be polluted than water from surface or land springs, for it has a chance in its flow through the veins of the earth to become filtered. Land springs always require careful watching, particularly in inhabited regions, to prevent surface contamination.

Not all Spring Water Pure

It is a popular fallacy that all spring water is absolutely pure and healthful. The above explanation will be helpful in pointing out how, in some cases, spring water may be nothing but contaminated ground water. Land springs in uncultivated and uninhabited regions, particularly in the mountains, yield a good and pure supply. But it is always advisable, when tapping a spring for water supply, to study its probable source, and carefully to inspect its immediate surroundings. The spring should be protected by constructing a small basin, or reservoir, and by building a house over this. The basin will also serve to store the night flow of the spring. Before deciding upon a supply from a spring, its yield should be ascer-

William Paul Gerhard

tained by one of the well-known gauging methods. Springs are usually lowest in the months of October and November, though there is some difference in this respect between land springs and deep springs. The minimum yield of the spring determines whether it forms a supply to be relied upon at all times of the year.

If the spring is located higher than the grounds and buildings to be supplied, a simple gravity supply line may be carried from it, with pipes of good size, thus avoiding undue friction in the line, and stoppages. If lower than the house, the water from the spring must be raised by some pumping method.

All water found underground owes its origin to the rainfall. If concealed water is returned to the surface by *natural processes* it is called spring water, but if recovered by *artificial means* it is called well water.

Different Kinds of Wells

There are numerous kinds of wells, distinguished from one another by their mode of construction, by their depth from the surface, by the fact of their piercing an impervious stratum or merely tapping the first underground sheet of water, and by the height to which the water in them rises or flows. Thus we have shallow and deep wells, horizontal wells or infiltration galleries, open or dug wells, tube wells, non-flowing and flowing wells, bored, drilled, and driven wells, tile-lined and brick-lined wells, and combination dug-and-tubular wells.

Country Water Supply

When it is desired to provide a water supply by means of wells some knowledge of the geology of the region, of the character of the strata and of their direction and dip, will be very useful. In the case of deep wells, it is really essential. By making inquiries as to similar well operations in the neighborhood, one may gain some useful information, and thus, to some extent, avoid guesswork. When one must drill or bore through rock for a very deep well, which necessarily is expensive, much money, often uselessly spent, may be saved by consulting the reports of the State geologist, or the publications of the United States Geological Survey, or by engaging the services of an expert hydrogeologist.

"Water Finders"

It used to be a common practice to send for so-called "water finders," who being usually shrewd observers would locate by the aid of a hazel twig the exact spot where water could be found. In searching for water one sometimes runs across these men even to-day. The superstitious faith in the power of the forked twig or branch from the hazelnut bush to indicate by its twisting or turning the presence of underground water was at one time widespread, but only the very slightest foundation of fact exists for the belief in such supernatural powers.

In Europe, attention has again, during the past years, been called to this "method" of finding water,

William Paul Gerhard

and it has even received the indorsement of a very high German authority in hydraulic engineering, a man well up in years, with a very wide practical experience, and the author of the most up-to-date handbook on "Water Supply," but men of science have not failed to contradict his statements.

Definition of "Ground-water Level"

Water percolating through the soil passes downward by gravity until it reaches an impervious stratum. The surface of this underground sheet of water is technically called "water table" or ground-water level. The water is not at rest, but has a slow and well-defined motion, the rate of which depends upon the porosity of the soil and also upon the inclination or gradient of the water table. A shallow well may be either excavated or driven into this subsoil sheet of water. In populous districts, in villages, towns, but also near habitations, the soil from which water is obtained must, of necessity, be impregnated with organic waste matter. If, in such a surface well, the level of the water is lowered by pumping, the zone of pollution is extended laterally in all directions. Ordinary shallow well water should always be considered "suspicious water." There are two distinct ways in which surface wells are contaminated: one is by leakage from cesspools, sewers, privies, etc.; the other, just as important and no less dangerous, by direct contamination

Country Water Supply

from the surface. The latter danger is particularly great in wells which are open at the surface, and from which water is drawn in buckets or pails. A pump well is always the safer of the two. Frogs, mice, and other small animals are apt to fall into the water; dust and dirt settle into it; the wooden curb and the rotten cover also contribute to the pollution; even the draw-buckets add to it by reason of being often handled with unclean hands.

Always avoid, in the country, drinking water from farmers' wells located near cesspools or privies. Such shallow wells are particularly dangerous after a long-protracted drought. It is impossible to define by measurement the distance from a cesspool or manure pit at which a well can be located with safety, for this depends entirely upon local circumstances. Contamination of shallow wells may, in exceptional cases, be avoided by a proper location of the well with reference to the existing sources of impurity. A well should always be placed *above* the source of pollution, using the word "above" with reference to the direction in which the ground water flows.

Precautions Regarding Wells

Other precautions to be observed with reference to surface wells are the following:

Never dig a well near places where soil contamination has taken or is taking place. Line the sides of the

William Paul Gerhard

well with either brick, stone, or tile pipe, cemented in a water-tight manner to a depth of at least twenty feet from the surface, so that no water can enter except from the bottom, or at the sides near the bottom.

Raise the surface at the top of the well above the grade; arrange it so as to slope away on all sides from the well; cover it with a flagstone, and cement the same to prevent foreign matters from dropping into the well; make sure that no surface water can pass directly into the well; make some provision to carry away waste water and drippings from the well.

Shallow wells made by driving iron tubes with well points into the subsoil water are preferable to dug wells. Use a draw-pump in preference to draw buckets.

When a well is sunk through an impervious stratum to tap the larger supply of water in the deeper strata, we obtain a "deep well." Water so secured is usually of great purity, for the impurities have been filtered and strained out by the passage of the water through the soil. Moreover, the nature of the construction of deep wells is such that they are more efficiently protected against contamination, the sides being made impervious by an iron-pipe casing. In some rare cases, even deep wells show pollution due to careless jointing of the lining, or water follows the outside of the well casing until it reaches the deeper water sheet. Deep wells usually yield more water than shallow driven wells, and the supply increases perceptibly when the water level in the well is lowered

Country Water Supply

by pumping. While surface wells draw upon the rainfall percolating in their immediate vicinity, deep wells are supplied by the rainfall from more remote districts. Deep wells are either non-flowing or flowing wells. When the hydrostatic pressure under which the water stands is sufficient to make it flow freely out on the surface or at the mouth of the well, we have a flowing, or true artesian well.

Character of Water From Deep Wells

Water from deep wells is of a cool and even temperature. It is usually very pure, but in some cases made hard by mineral salts in the water. Sulphur is also at times present, and some wells on the southern Atlantic coast yield water impregnated with sulphur gases, which, however, readily pass off, leaving the water in good condition for all uses. In many cases the water has a taste of iron. No general rule can be quoted as to the exact amount of water which any given well will yield, for this depends upon a number of factors. Increasing the diameter of very deep wells does not seem to have any marked effect in increasing the supply. Thus, a two-foot well gives only from fifteen to thirty per cent more water than a three-inch-pipe well. This rule does not seem to apply to shallow wells of large diameter, for here we find that the yield is about in proportion to the diameter of the well.

It is interesting to note the fact that wells located

William Paul Gerhard

near the seashore, within the influence of the tide, vary in the hourly flow. According to Dr. Honda, of the University of Tokio, there is "a remarkable concordance between the daily variations in the level of the tides and the water level in wells." The water in wells one mile from the seashore was found to stand highest at high tide. The daily variation amounted to sixteen centimeters, or a little over six inches. A similar variation was observed by the writer in some flowing wells located on the north shore of Long Island. Dr. Honda found also that the water level in wells varied with the state of the barometer, the water level being lowered with a rise in the barometer.

Where a large supply is wanted a series of wells may be driven, and, as the expense involved is considerable, it is always advisable to begin by sinking a smaller test well to find out whether water may be had.

Ground water may also be recovered from water-bearing strata by arranging horizontal collecting galleries with loose-jointed sides through which the water percolates. Such infiltration galleries have been used in some instances for the supply of towns and of manufacturing establishments, but they are not common for the supply of country houses.

Laws Regulating Appropriation of Water

Persons contemplating the establishment of a system of water supply in the country should bear in mind that the taking of water for supply purposes is,

Country Water Supply

in nearly all States, hemmed in by legal restrictions. The law makes a distinction between subterranean waters, surface waters flowing in a well-defined channel and within definite banks, and surface waters merely spread over the ground or accumulated in natural depressions, pools, or in swamps. There are separate and distinct laws governing each kind of water. It is advisable, where a water-supply problem presents itself, to look up these laws, or to consult a lawyer well versed in the law of water courses.

If it is the intention to take water from a lake, the property owner should make sure that he owns the right to take such water, and that the deed of his property does not read "to high-water mark only." The owner of a property not abutting on a lake has no legal right to abstract some of the water from the lake by building an infiltration gallery, or a vertical well of large diameter intended for the same purpose. On the other hand, an owner may take subterranean water by driving or digging a well on his own property, and it does not matter, from the law's point of view, whether by so doing he intercepts partly or wholly the flow of water in a neighboring well. But, if it can be shown that the subterranean water flows in a well-defined channel, he is not permitted to do this. The water from a stream cannot be appropriated or diverted for supply or irrigation purposes by a single property holder without the consent of the other riparian owners, and without compensation to them.

CHAPTER II

Appliances for Distributing Water

WE have so far discussed only the various sources of potable water. We must now turn our attention to the mechanical means for making it available for use, which comprise appliances for lifting, storing, conveying, distributing, and purifying the water.

The location of the source of supply with reference to the buildings and grounds decides generally the question whether a gravity supply is feasible or whether water must be pumped. The former is desirable because its operating expenses are almost nothing, but it is not always cheapest in first cost. Rather than have a very long line of conduit, it may be cheaper to pump water, particularly if wind or water power, costing nothing, can be used.

Machines for Pumping

When it becomes necessary to pump water, there are numerous machines from which to choose; only the more important ones will be considered. We may use pumps operated by manual labor, those run by ani-

Appliances for Water Distribution

mal power, pumping machinery using the power of the wind or that of falling or running water; then there are hot-air, steam, and electric pumps, besides several forms of internal-combustion engines, such as gas, gasoline, and oil engines. Each has advantages in certain locations and under certain conditions.

Of appliances utilizing the forces of Nature, perhaps the simplest efficient machine is the hydraulic ram. While other machines for lifting water are composed of two parts, namely, a motor and a pump, the ram combines both in one apparatus. It is a self-acting pump of the impulse type, in which force is suddenly applied and discontinued, these periodical applications resulting in the lifting of water. Single-acting rams pump the water which operates them; double-acting rams utilize an impure supply to lift a pure supply from a different source.

The advantages of the ram are: it works continuously, day and night, summer and winter, with but very little attendance; no lubrication is required, repairs are few, the first cost of installation is small. Frost protection, however, is essential. The disadvantages are that a ram can be used only where a large volume of water is available. The correct setting up is important, also the proper proportioning in size and length of drive and discharge pipes. The continual jarring tends to strain the pipes, joints, and valves; hence, heavy piping and fittings are necessary. A ram of the improved type raises water from twenty-

William Paul Gerhard

five to thirty feet for every foot of fall in the drive pipe, and its efficiency is from seventy to eighty per cent.

Running water is a most convenient and cheap power, which is often utilized in water wheels and turbines. These supply power to run a pump; the water to be raised may come from any source, and the pump may be placed at some distance from the water wheel. Where sufficient fall is available—at least three feet—the overshot wheel is used. In California and some other Western States an impulse water wheel is much used, which is especially adapted to high heads.

Windmills Used for Driving Pumps

The power of the wind applied to a windmill is much used for driving pumps. It is a long step forward from the ancient and picturesque Dutch form of windmill, consisting of only four arms with cloth sails, to the modern improved forms of wheels constructed in wood and in iron, with a large number of impulse blades, and provided with devices regulating the speed, turning the wheel out of the wind during a gale, and stopping it automatically when the storage tank is filled. The useful power developed by windmills when pumping water in a moderate wind, say of sixteen miles an hour velocity, is not very high, ranging from one twenty-fifth horse-power for an eight and one-half foot wheel to one and one-half horse-

Appliances for Water Distribution

power for a twenty-five foot wheel. The claims of some makers of windmills as to the power developed should be accepted with caution.

The chief advantage is that, like a ram, the windmill may work night and day, with but slight attention to lubrication, so long as the wind blows. But there are also drawbacks; it requires very large storage tanks to provide for periods of calm; the wheel must be placed sufficiently exposed to receive the full wind force, either on a tower or on a high hill, and usually this is not the best place to find water. Besides, a windmill tower, at least the modern one, is not an ornamental feature in the landscape. It is expensive when built sufficiently strong to withstand severe winter gales. During the hot months of the year, when the farmer, the gardener, and the coachman require most water, the wind is apt to fail entirely for days in succession.

The Use of Engines

If water is not available, and wind is considered too unreliable, pumping must be accomplished by using an engine which, no matter of what form or type, derives its energy from the combustion of fuel, be the same coal, wood, charcoal, petroleum or kerosene, gas, gasoline, or naphtha. The use of such pumping engines implies a constant expense for fuel, operation, maintenance, and repairs. In some modern forms of engines this expense is small, notably so in the oil engine,

William Paul Gerhard

and also in the gasoline engine; hence these types have become favorites.

Advantages of Pumping Engines

An advantage common to all pumping engines is that they can be run at any time, not like the windmill, which does not operate in a light breeze, nor like the ram, which fails when the brook runs low. Domestic pumping engines are built as simple as possible, so that the gardener, a farm hand, or the domestic help may run them. Skill is not required to operate them, and they are constructed so as to be safe, provided ordinary intelligence is applied.

In using a fuel engine it is desirable, because of the attendance required, to take a machine of such capacity and size that the water supply required for two or three days may be pumped to the storage tank in a few hours.

Expansive Force of Heated Air Utilized

A favorite and extensively used type of domestic pump is the hot-air engine, in which the expansive force of heated air is used to do useful work. Among the types are simple and safe machines which do not easily get out of order. They are started by hand by giving the fly wheel one or more revolutions. If properly taken care of they are durable and do not require expensive repairs.

Appliances for Water Distribution

Gas and Gasoline Engines

In gas engines power is derived from the explosion of a mixture of gas and air. Where a gas supply is available, such engines are very convenient, for, once started, they will run for hours without attention. They are economical in the consumption of gas, and give trouble only where the quality of gas varies.

Owing to the unavailability of gas on the farm and in country houses, two other forms of pumping engines have been devised which are becoming exceedingly popular. One is the gasoline, the other is the oil engine. Both resemble the gas engine, but differ from it in using a liquid fuel which is volatilized by a sprayer. Gasoline engines are now brought to a high state of perfection.

Kerosene or Crude Oil as Fuel

In recent years, internal-combustion engines which use heavy kerosene or crude oil as fuel have been introduced. These have two palpable advantages: first, they are safer than gasoline engines; second, they cost less to run, for crude oil and even refined kerosene are much cheaper than gasoline. Oil engines resemble the gas and gasoline engines, but they have larger cylinders, because the mean effective pressure evolved from the explosion is much less than that of the gasoline engines.

William Paul Gerhard

Oil engines for pumping water are particularly suitable in regions where coal and wood cannot be obtained except at exorbitant cost. Usually, the engine is so built as to be adapted for other farm work. It shares this advantage with the gasoline engine. Oil engines are simple, reliable, almost automatic, compact, and reasonable in first cost and in cost of repairs. There are many forms of such engines in the market. To be successful from a commercial point of view, an oil engine should be so designed and built that any unskilled attendant can run, adjust, and clean it. The cost of operating them, at eight cents per gallon for kerosene, is only one cent per hour per horse-power; or one-half of this when ordinary crude oil is used. The only attention required when running is periodical lubrication and occasional replenishing of the oil reservoir. The noise of the exhaust, common to all engines using an explosive force, can be largely done away with by using a muffler or a silencer. The smell of oil from the exhaust likewise forms an objection, but can be overcome by the use of an exhaust washer.

Steam and Electric Pumps

The well-known forms of steam-pumping engines need not be considered in detail, because high-pressure steam is not often available in country houses. Where electric current is brought to the building, or generated for lighting purposes, water may be pumped

Appliances for Water Distribution

by an electric pump. Electric motors are easy and convenient to run, very clean, but so far not very economical. Electric pumps may be arranged so as to start and stop entirely automatically. Water may be pumped, where electricity forms the power, either by triplex plunger pumps or by rotary, screw, or centrifugal pumps.

Pumps Worked by Hand

Space forbids giving a description of the many simpler devices used for lifting water. In small farm-houses lift and force pumps worked by hand are now introduced, and the old-fashioned, moss-covered draw-bucket, which is neither convenient nor sanitary, is becoming a relic of past times.

Reservoirs and Storage Tanks

The water pumped is stored either in small masonry or earth reservoirs, or else in storage tanks of either wood, iron, or steel, placed on a wood or steel tower. Wooden tanks are cheap but unsightly, require frequent renewal of the paint, and give trouble by leaking, freezing, and corrosion of hoops. In recent years elevated tanks are supplanted by pressure tanks. Several such systems, differing but little from one another, are becoming quite well known. In these water is stored under suitable pressure in air-tight tanks, filled partly with water and partly with air.

William Paul Gerhard

A Simple Pressure System

One system consists of a circular, wrought-steel, closed tank, made air- and water-tight, a force pump for pumping water into the tank, and pipe connections. The tank is placed either horizontally or vertically in the basement or cellar, or else placed outdoors in the ground at a depth below freezing. Water is pumped into the bottom of the tank, whereby its air acquires sufficient pressure to force water to the upper floors.


This simple system has some marked advantages over the outside or the attic tank. In these, water gets warm in summer and freezes in winter. Vermin and dust get into the tank, and the water stagnates. In the pressure tank, water is kept aërated, cool, and clean.

Another pressure tank has an automatic valve, controlled by a float and connected with suction of pump. It prevents the tank from becoming water-logged by maintaining the correct amount of air inside.

An Ideal System for a Country House

Still another system using pressure tanks is more complete than either of the others, comprising engine, pump, air compressor, a water tank, and also an air tank. It is best described by a recent example constructed from plans and under the direction of the writer. The buildings supplied with water comprise the mansion, the stable, the cottage, and a dairy, and

Appliances for Water Distribution

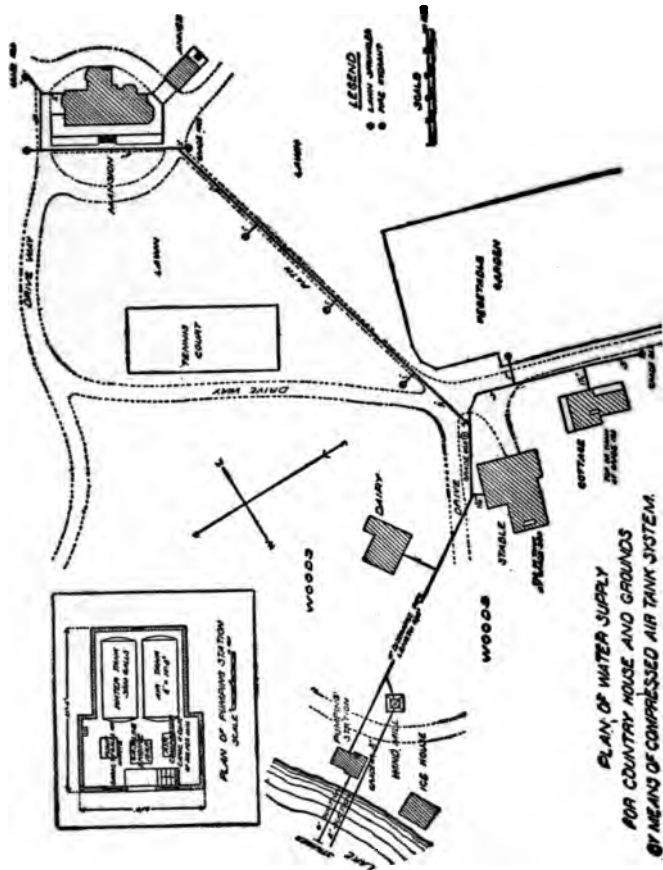

William Paul Gerhard

the pumping station is placed near the shore of the lake from which the supply is taken. See Figs. 1 and 2.

The pump house is about 20 feet by 27 feet, and

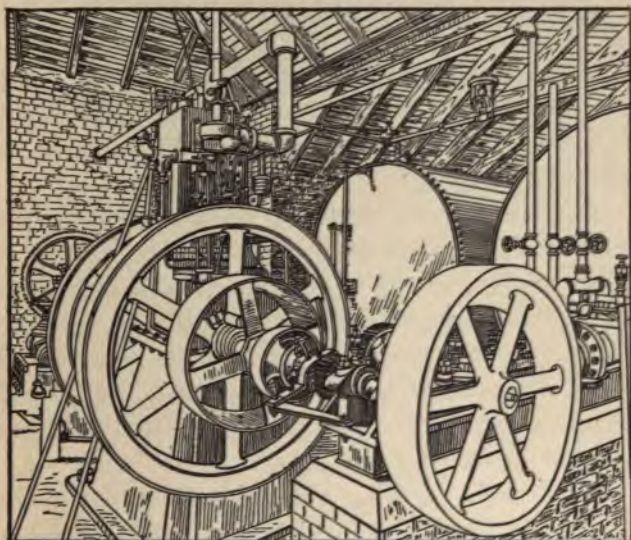


FIG. 2.

PRESSURE-TANK PUMPING STATION.

Interior view of pumping station of compressed air-tank system (see plan on opposite page) showing 3,000 gallon water tank, air tank of 150 pounds pressure and 10 horse-power gasoline engine.

contains a water-storage tank 6 feet in diameter and $13\frac{1}{2}$ feet long, of a capacity of 3,000 gallons; an air tank of same dimensions as the water tank, holding air under 150 pounds pressure; a 10 horse-power gasoline engine, direct-connected, by means of friction clutch,

Appliances for Water Distribution

with an air compressor and also with a triplex pump of 75 gallons capacity per minute.

The water in the tank is kept under 75 pounds pressure, and at the hydrant near the house, located about 100 feet above the pumping station, there is an available pressure of 33 pounds. The last drop of water flows from the water tank under the full pressure of 75 pounds at the pumping station. The suction pipe into the lake is 4 inches and is provided with well strainers to prevent clogging.

The cost of pumping water by this system is quite reasonable. The gasoline engine requires per horsepower per hour about $1\frac{1}{4}$ gallons of gasoline, and at sixteen cents per gallon this makes the cost for 1,000 gallons pumped about five cents. To this expense should, however, be added the cost of lubricating oil, repairs, amount for depreciation, and the small cost for labor in running the engine.

Water pipes forming a distribution system should always be chosen generous in diameter, in order to avoid undue loss of pressure by friction. Where fire hydrants are provided, the size of the water main should not be below four inches. All branches should be controlled by shut-offs, for which the full-way gate valves are used in preference to globe valves. Pipe-line material is usually galvanized, screw-jointed wrought iron for sizes up to four inches.

In conclusion, a word about water purification. Where the quality of the water supply is not above

William Paul Gerhard

suspicion it may be improved by filtration. A filter should never be installed without the advice of a qualified expert, for there are numerous worthless devices and few really efficient ones. Where a filter is not available, the water used for drinking should be boiled or sterilized if there is the slightest doubt as to its wholesomeness.

CHAPTER III

Purifying Water by Copper Sulphate

FROM the standpoint of the health of the community, the most vital problem is to get pure water. Almost equally important, when comfort and peace of mind is considered, is the procuring of sweet water. The wise owner of a country home looks to the water supply upon which his family is dependent. The careful farmer is particular about the water his stock, as well as his family, must drink. But careless persons constitute the large majority. Most people in the city and in the country pay no attention to their drinking water so long as it "tastes all right."

Clear Water Often Dangerous

Some years ago the inhabitants of Ithaca, N. Y., furnished a pitiful example of this foolhardy spirit. For a year previous to the breaking out of the typhoid epidemic, the public was warned, through the local and the metropolitan press, of the dangerous condition of Ithaca's water supply. Professors of Cornell College joined in these warnings. But the people gave no heed, probably because the water was *clear* and its taste sweet and agreeable. As was the case in this instance,

Use of Copper Sulphate

bacteria are tolerated indefinitely, and it is only an alarming increase in the death rate that makes people careful. Then they begin to boil the water—when it is too late for some of them.

Bad-Tasting Water not Always Poisonous

But let the taste become bad and the odor repulsive, and a scare is easily started. "There must be dead things in the water, or it wouldn't taste so horrible," is the common verdict. Some newspaper seizes upon the trouble and makes of it a sensation. The ubiquitous reporter writes of one of "the animals" that it "looks like a wagon wheel and tastes like a fish." With such a remarkable organism contaminating one's drink no wonder there is fear of some dread disease. The water is believed to be full of "germs"; whereas the pollution is entirely due to the presence of algæ—never poisonous to mankind, in some cases acting as purifying agents, but at certain seasons of the year imparting a taste and odor to the water that cannot be tolerated.

Algæ—what are they? They are aquatic plants. Algæ are not to be confounded with the water vegetation common to the eye and passing by the term weeds. Such plants include eelgrass, pickerel weed, water plantain, and "duckmeat"—all of which have roots and produce flowers. This vegetation does not lend a bad odor or taste to the water. In itself it is harm-

Purifying the Water Supply

less, although it sometimes affords a refuge for organisms of a virulent type.

But when the aquatic vegetation of the flowering variety is eliminated from consideration, there still remains a group of water plants called algæ. They comprise one-fifth of the known flowerless plants. They are the ancestors of the entire vegetable kingdom. Those whose habitat is the sea number the largest plants known in nature. Certain forms found in the Pacific are supposed to be 800 feet in length; others are reported to be 1,500 feet long. The marine variety are familiar as the brown kelps and the wracks, which are very common along our Northern coast.

Plants Which Pollute Drinking Water

The fresh-water algæ are usually grass green in color. This green variety is often seen as a spongy coating to the surface of stagnant pools, which goes by the name of "frog spawn" or "pond scum." One of this description, *Spirogyra*, has done thousands of dollars' worth of damage by smothering the life out of young water-cress plants in artificial beds constructed for winter propagation. When the cress is cut the plants are necessarily left in a weakened condition, and the algæ form a thick mat over the surface of the water, thus preventing the growth of the cress plants and oftentimes killing them. The absolute necessity of exterminating these algæ led to the perfection of the copper-purification process.

Use of Copper Sulphate

It is, however, a variety of algæ not easily detected that contaminates the water. So long as they are in a live, healthy condition they benefit drinking water by purifying it. Indeed, some scientists have attributed the so-called self-purification of a stream entirely to the activities of these plants. Of such, one form, *Chlamydomonas*, is bright grass green in appearance. But the largest group—the plants which have the worst reputation as polluters of drinking water—are popularly known as the “blue-green algæ” (*Schizophyceæ*). The common name tells the color of these plants, although there are exceptions in this respect, some of them showing shades of yellow, brown, olive, chocolate, and purplish red. This variety of algæ flourishes in the summer months, since a relatively high temperature and shallow stagnant water favor its germination. If the pond begins to dry up, the death of the organisms takes place, and the result is a most disagreeable, persistent odor which renders the water unfit for drinking purposes. This result is chemically due to the breaking down of highly organized compounds of sulphur and phosphorus in the presence of the large amount of nitrogen contained in these plants. Decomposition is not necessary for some of the blue greens to give off a bad odor, however. A number of them, on account of their oil-content, produce an odor when in a healthy condition that is sometimes likened to raw green corn or to nasturtiums, but usually it cannot be so pleasantly described.

Purifying the Water Supply

The Department of Agriculture has been able to solve the problem of exterminating algæ from water supplies.¹ The department has done more; for it has succeeded in perfecting a method by which a reservoir contaminated with typhoid or other pathogenic bacteria can be purified. The work was begun with an inquiry into the extent of the trouble from algal pollution. Letters were addressed to some five hundred engineers and superintendents of water companies scattered all over the United States. The replies, which came from almost every State in the Union, were burdened with one complaint—"Algæ are our worst pest"; and with one prayer—"Come over into Macedonia, and help us."

A Cheap and Available Remedy for Algæ

Convinced of the need of earnest work, extensive laboratory experiments were inaugurated. The problem presented was this: the remedy must not only be readily available, but it must be cheap, that advantage may be taken of it by the poorest communities, as well as by those owning large reservoirs. Above all, the remedy must be absolutely harmless to man; the poison used to exterminate algæ must not in any way affect the water drinkers. A large number of sub-

¹ For published reports of the work, see Bulletins 64 and 76, Bureau of Plant Industry, U. S. Department of Agriculture; reports prepared by Dr. George T. Moore and his assistant, Mr. Karl F. Kellerman.

Use of Copper Sulphate

stances were used in the experiments before the final decision rested with copper sulphate. This salt is very poisonous to algæ. On the other hand, copper in solution just strong enough to destroy algal growth could not possibly injure man; in fact, the temporary presence of such a small amount of copper in drinking water could not be detected.

A Practical Demonstration

The results in the laboratory being successful, the next step was to make a practical demonstration of the value of the method. This was first done in the fall of 1901. At Ben, Va., water cress is grown in large quantities during the winter, when it is a valuable market crop. Dams are constructed across a stream in such a manner as to enable the maintenance of a water level not too high for the growth of plants; when a freeze is threatened the plants can be flooded. In the cress beds selected for the experiments the water is obtained from a thermal spring whose temperature throughout the year is about 70° F. This temperature is particularly favorable to the growth of "frog spawn." After the cress was cut for market, the algæ frequently developed so rapidly as to smother the life out of the weakened plants. When this occurred, the practice was to rake out both water cress and algæ and reset the entire bed. This was not only expensive; half the time it failed to exterminate the pest. It was,

Purifying the Water Supply

therefore, most desirable to devise a method of ridding the bed of algal growth without injuring the cress.

The Copper-sulphate Method Tested

Here the copper-sulphate method was put to a practical test. At the outset a strong solution was sprayed on the algæ which coated the surface of the pond. This only killed the algal growth with which the particles of copper came in contact and left the main body of algæ unaffected. Then trial was made of dissolving the copper directly in the water, and the result was most satisfactory. The solution used was that of 1 part of copper to 50,000,000 parts of water.

Growers need have no trouble in the future. They need have no fear of employing the method, as the copper solution required for killing the algæ could not possibly injure water cress, provided ordinary care is used in the work. As to the frequency of treatment required, one or two applications a year will generally be found sufficient, as this letter, received from the manager of the Virginia company, goes to show :

"The 'moss' has given me no trouble at all this winter; in fact, I have for six months had to resort to the copper sulphate only once. . . . All the conditions were favorable last fall and early winter for a riot of 'moss,' but it did not appear at all until just a few days ago, and then yielded to treatment much more readily than it did when I first began to use the

Use of Copper Sulphate

copper." This letter was written over three years after Dr. Moore made his experiment in these cress beds.

Satisfied with the results attained in exterminating algal growth in water-cress beds, attention was next given to reservoirs. Some fifty water supplies were treated during the summer of 1904, and in every case success attended the copper cure. In one respect the results were surprising. It was found that in practice the copper-sulphate method worked better than in theoretic experimentation; results in large reservoirs were more pronounced than in the laboratory. In fact, it developed that the solution necessary to kill algæ in the laboratory must contain from five to twenty times as much copper as that contained in a solution which will exterminate algal growth in its natural habitat. This is not easily explained, if it can be explained at all. The best reason advanced is that only the most resistant organisms stand transplanting to an artificial environment. But, after all, the important point is that the new method works better in practice than was expected.

A Prescription for the Copper Cure

Thus the department is able to announce that the process is no longer in the experimental stage, and also to say what conditions must be known in determining the proper quantity of copper sulphate for destroying algæ, together with a prescription for the copper cure.

Purifying the Water Supply

Here it is, for the benefit of careful persons who will use the method with proper intelligence: "The importance of knowing the temperature of the contaminated water is second only to the necessity of knowing the organism present. With increase of temperature the toxicity of a given dilution increases, and *vice versa*. Assuming that 59° F. is the average temperature of reservoirs during the seasons when treatment is demanded, the quantity of copper should be increased or decreased approximately 2.5 per cent for each degree below or above 59° F.

"Similar scales should be arranged for the organic content and the temporary hardness of the water. With the limited data at hand it is impracticable to determine these figures, but an increase of 2 per cent in the quantity of copper for each part per 100,000 of organic matter and an increase of 0.5 to 5 per cent in the proportion of copper for each part per 100,000 of temporary hardness will possibly be found correct. The proper variation in the increase due to hardness will depend upon the amount of dissolved carbon dioxide; if very small, 5 per cent increase is desirable; if large, 0.5 per cent is sufficient."

The information in this prescription is to be used in connection with a table¹ published by the Department of Agriculture. This table gives the number of parts of water to one part of copper sulphate necessary to kill the various forms of algæ which are listed. The

¹ See Bulletin No. 76, *supra*.

Use of Copper Sulphate

formulae vary from 1 part of copper to 100,000 parts of water, necessary to destroy the most resistant and very rare forms (three of these are listed), to 1 part of copper in 25,000,000 parts of water, which is a sufficiently strong solution to exterminate *Spirogyra*, the cress-bed pest. By far the majority of forms do not require a solution stronger than that of 1 part of copper to 1,000,000 parts of water.

What the Agricultural Department is Doing

It is true that the department is not now holding out, directly, a helping hand to the owner of a country place, or to the farmer, in this campaign of purifying drinking water. In the first place, the greatest good of the greatest number demands that large reservoirs, which supply a great number of people with drinking water, ought to be considered first. Such supplies, moreover, are most frequently contaminated. Where fifty reservoirs were treated last summer, ten times that number will be "cured" this summer. It will be readily seen, therefore, that in conducting such a large number of experiments—considering preliminary reports, prescribing for treatment, and keeping proper account of results—the department, with a limited force and limited facilities, has its hands more than full.

More important still, there is an absolute need of the services of some expert on the ground. While an

Purifying the Water Supply

algologist is a functionary not generally employed by water companies—in fact, a man trained in the physiology of algæ is difficult to find—nevertheless, it is highly important, as the department views it, to have the coöperation of an expert versed to some extent in the biological examination of drinking water. In other words, the copper cure is not a “patent medicine,” with printed directions which any person could follow. Intelligence and care are absolutely essential in the use of this treatment. Furthermore, each case must be treated as a distinct and separate case, as a physician would treat a patient.

Actual Purification Simple

Suppose, however, an owner of a country place, which is dependent upon a fresh-water pond for its water supply, finds that his drinking water is contaminated, that the taste and odor are such as to render the water unfit for use. There is no reason why he should not treat the supply, provided he is properly careful. When the nature of the polluting organism is definitely determined and the average temperature of the water observed, then the necessary formula can be decided upon. First, of course, the pond must be plotted, the depth found, and the capacity computed. the department will willingly furnish data for this purpose, together with blanks upon which to submit details as to contaminating organisms and water tem-

Use of Copper Sulphate

perature, to any applicant. Once the proper solution is determined upon, the actual work of purification is most simple. In the following directions the department outlines the most practicable method of introducing the copper sulphate into a water supply:

Directions for the Copper Cure

“Place the required number of pounds of copper sulphate in a coarse bag—gunny sack or some equally loose mesh—and, attaching this to the stern of a row-boat near the surface of the water, row slowly back and forth over the reservoir, on each trip keeping the boat within ten to twenty feet of the previous path. In this manner about a hundred pounds of copper sulphate can be distributed in one hour. By increasing the number of boats, and, in the case of deep reservoirs, hanging two or three bags to each boat, the treatment of even a large reservoir may be accomplished in from four to six hours. It is necessary, of course, to reduce as much as possible the time required for applying the copper, so that for immense supplies, with a capacity of several billion gallons, it would probably be desirable to use a launch, carrying long projecting spars to which could be attached bags containing several hundred pounds of copper sulphate.

“The substitution of wire netting for the gunny-sack bag allows a more rapid solution of the sulphate, and the time required for the introduction of the salt

Purifying the Water Supply

may thus be considerably reduced. It is best to select as warm a day for treatment as circumstances will permit."

Cost of the Treatment

Not difficult, one would say. No—when the proper solution is determined; to reach that determination is the difficulty. That the method can be tried "at home" is proved by the results obtained by the owner of a country home in the vicinity of New York. Tired of consulting engineers, who looked at his water supply, informed him that they could do nothing, and then charged him a big fee (to one he paid \$250), this owner resorted to the copper-sulphate treatment. The cure cost the man just \$2—but let his letter to the department tell the story:

"My place in the country is located at Water Mill, in the township of Southampton, in Long Island. I purchased it in April, 1902, and was largely influenced in selecting this piece of land by the beauty of a pond which bounds it on the east. This little body of water covers about two acres, is fed by numerous springs, and discharges into Mecox Bay, the southern boundary of the land. When I bought the place the pond was filled with clear water. About the middle of the following June algæ began to show, and in August the surface was almost entirely covered by the growth. The odor was offensive, and myriads of small insects hovered over the masses of algæ much of the time.

Use of Copper Sulphate

I consulted two engineers interested in the storage of water, and they told me that nothing could be done. The condition was so objectionable that I planned to plant a thick hedge of willows along the bank to shut off the view of the pond from the house. . . . I examined the pond on June 15th and found large masses of algæ covering an area several hundred feet in length and from twenty to forty feet in width. No microscopical examination was made of the growth, but I was informed that it seemed to be largely composed of filaments of *Spirogyra* and other *Conservæ*. On June 18th the treatment was begun. . . . In one week the growth had sunk and the pond was clear water. I examined the pond September 15th and found it still clear.

"The use of the sulphate of copper converted an offensive insect-breeding pond into a body of beautifully clear water. The pond was full of fish, but the copper did not seem to harm them."

Effect of Copper Sulphate on Fish

Native trout were not injured when the large reservoir at Cambridge, N. Y., was purified by the copper treatment. A slightly different result, in this respect, was reported from Elmira, N. Y., however. Part of the report is as follows:

"The effect of the copper-sulphate treatment on the different animal life was as follows: numerous 'polly-

Purifying the Water Supply

wogs' killed, but no frogs; numerous small (less than two inches long) black bass and two large ones (eight inches long) killed; about ten large 'bullheads' were killed, but no small ones; numerous small (less than two inches long) 'sunfish' were killed, but no large ones.

"The wind brought the dead fish to the corners of the reservoir, and it was very little trouble to remove them. No dead fish were seen twenty-four hours after completion of the treatment."

The injury done by copper sulphate to fish is a more serious matter than was at first supposed. Brook trout are, apparently, the least resistant to the salt. A Massachusetts trout pond stocked with eight-inch trout lost forty per cent as a result of the introduction of a strong solution of copper sulphate. The Bureau of Fisheries is working in conjunction with the Division of Plant Physiology in this matter, and it is hoped to secure reliable information. In the meantime, owners of ponds stocked with game fish would do well to take great care before resorting to the copper cure for algæ—that is, if they hesitate to lose a part of the fish.

Water May be Drunk During Treatment

When a pond or reservoir is treated with the proper amount of copper sulphate to remove algæ—except in the case of the few very resistant forms requiring a stronger solution than 1 part of copper to 1,000,000

Use of Copper Sulphate

parts of water—there is no need of discontinuing the use of the water supply during treatment; the water may be drunk with impunity. But when water known to be polluted with pathogenic bacteria is sterilized by means of copper sulphate in strong solution, it is just as well to discontinue the use of the water for drinking purposes for not more than twenty-four hours. Even then, this is an overcareful precaution rather than a necessity.

Experiments conducted with great care and thoroughness demonstrate that at room temperature, which is near the temperature of a reservoir in summer, a solution of 1 part of copper to 100,000 parts of water will destroy typhoid bacteria in from three to five hours. Similar experiments have proved that a copper solution of like strength is fatal to cholera germs in three hours, provided the temperature is above 20° F. As was the case with algæ, bacteria were found to be much more sensitive to copper when polluting water than when grown in artificial media.

The Use of Copper Tanks

The toxic effect of metallic copper upon typhoid bacteria in water gives some hints as to prevention of the disease by the use of copper tanks. This should not altogether take the place of the boiling of the water; it is useful in keeping it free from contamination, although water allowed to stand in copper re-

Purifying the Water Supply

ceptacles for a period of from twenty-four to forty-eight hours at room temperature would be effectively sterilized, no matter what its contamination and no matter how much matter it held in suspension. But in order to insure such results the copper must be kept thoroughly clean. This polishing is not, as was popularly supposed, to protect the consumer from "copper poisoning," but to prevent the metal from becoming so coated with foreign substances that there is no contact of the copper with the water, hence no antiseptic quality.

Dr. Henry Kreamer, of Philadelphia, proved that within four hours typhoid germs were completely destroyed by the introduction into the polluted water of copper foil.

- "Granting the efficiency of the boiling of water for domestic purposes, I believe that the copper-treated water is more natural and more healthful. . . . The intestinal bacteria, like colon and typhoid, are completely destroyed by placing clean copper foil in the water containing them.

"Pending the introduction of the copper treatment of water on a large scale, the householder may avail himself of a method for the purification of drinking water by the use of strips of copper foil about three and one-half inches square to each quart of water, this being allowed to stand overnight, or from six to eight hours at the ordinary temperature, and then the water drawn off or the copper foil removed."

Use of Copper Sulphate

Although a splendid antiseptic, copper in weak solution is not harmful, no more so than the old copper utensils used by our forefathers were harmful. Undoubtedly they were of benefit, and the use of them prevented the growth of typhoid and other bacteria. People of to-day might well go back to copper receptacles for drinking water.

CHAPTER IV

Ridding Stagnant Water of Mosquitoes

BECAUSE of the serious and often fatal injury it inflicts on man, the most dangerous animal known is the mosquito. Compared with the evil done by the insect pest, the cobra's death toll is small. This venomous serpent is found only in hot countries, particularly in India, while mosquitoes know no favorite land or clime—unless it be Jersey. Arctic explorers complain of them. In Alaska, it is recorded by a scientist that "mosquitoes existed in countless millions, driving us to the verge of suicide or insanity." A traveler on the north shore of Lake Superior, when the snow was several feet deep, and the ice on the lake five feet in thickness, relates that "mosquitoes appeared in swarms, literally blackening the banks of snow in sheltered places."

Mosquitoes Responsible for Yellow Fever

In the temperate zone this evil-breeding insect was, until recent years, considered more in the light of an exasperating pest. It is now known, however, that

Best Methods to Employ

malaria is due entirely to the bites of mosquitoes. But it is in the tropical countries that their deadliest work is done. There, it has been proved beyond question, the mosquitoes are responsible for the carriage of yellow fever. If, in a yellow-fever ridden region, one were to live entirely in an inclosure, carefully protected with proper screens—as certain entomologists did—there practically would be no danger from the dread disease, even if all other precautions were neglected.

Effect of a Mosquito Bite

The crime committed by the mosquito against its innocent victim, man, is more in the nature of manslaughter than of murder, according to the authorities. There is no *premeditated malice*. "A mosquito bites primarily to obtain food," says a leading entomologist; "there is neither malice nor venom in the intent, whatever there may be in the act." There isn't great comfort in the intelligence conveyed by the scientist, nor in his further observation:

"Theoretically, there would seem to be no reason why there should be any pain from the introduction of the minute lancets of the insects, and the small amount of bloodletting is usually a benefit rather than otherwise. Unfortunately, however, in its normal condition the human blood is too much inclined to clot to be taken unchanged into the mosquito stomach;

Ridding Stagnant Water of Mosquitoes

hence, when the insect bites, a minute droplet of poison is introduced, whose function it is to thin out the fluid and make it more suitable for mosquito digestion. It is this poison that sets up the inflammation and produces the irritation or swelling. . . . The pain is caused entirely by the action of the poison in breaking up the blood, and, as the first act of a biting mosquito is to introduce the poison into the wound, the pain and inflammation will be the same, whether the insect gets its meal or not. In fact, it has been said that if a mosquito be allowed to suck its fill and then fly, the bite will not itch, and there is just a basis of justification for this."

To make a scientific inquiry into the habits of the mosquito, and to do it patiently, one should be far from the maddening swarms, or at least effectively screened in. Then it would be possible to believe the statement of the Government's entomologist that not "one mosquito in a million" ever gets the opportunity to taste the blood of a warm-blooded animal. As proof of this there are, in this country, great tracts of marshy land never frequented by warm-blooded animals, and in which mosquitoes are breeding in countless numbers. The point is emphasized by the prevalence of mosquitoes in the arctic circle and other uninhabited regions.

If this gory insect does not live by blood alone, how is it nourished? Female mosquitoes are by nature vegetarians; they are plant feeders. Why they should

Best Methods to Employ

draw blood at all is a question which remains unsolved by entomologists—as well as by the suffering victims. The females have been observed sucking the nectar from flowers; obtaining nutriment from boiled potatoes, even from watermelon rinds, from which they extract the juice. As regards the blood habit, the male mosquito is a “teetotaler.” Just how this male insect lives, scientists have not determined. He may not take nourishment at all. At any rate, the mouth parts of the male are so different from those of the female that it is probable his food is obtained differently. The male is often seen sipping at drops of water, and a taste for molasses is ascribed to the male mosquito by one authority.

Presence of Mosquitoes Depends Upon Winds

A common remark heard along the Jersey shore, also on Long Island, is this: “When we have a sea breeze we are not troubled with mosquitoes, but when there comes a land breeze they are a pest.” While this observation is true, the reasons therefore entertained by the unscientific mind are erroneous. The matter of the absence or abundance of mosquitoes in varying winds is closely related to the inquiry which entomologists have made: how far will mosquitoes fly? Says one investigator:

“The migration of mosquitoes has been the source of much misapprehension on the part of the public.

Ridding Stagnant Water of Mosquitoes

The idea prevalent at our seaside resorts that a land breeze brings swarms of mosquitoes from far inland is based on the supposition that these insects are capable of long-sustained flight, and a certain amount of battling against the wind. This is an error. Mosquitoes are frail of wing; a light puff of breath will illustrate this by hurling the helpless creature away, and it will not venture on the wing again for some time after finding a safe harbor. The prevalence of mosquitoes during a land breeze is easily explained. It is usually only during the lulls in the wind that *Culex* can fly. Generally on our coast a sea breeze means a stiff breeze, and during these mosquitoes will be found hovering on the leeward side of houses, sand dunes, and thick foliage. . . . While the strong breezes last, they will stick closely to these friendly shelters, though a cluster of houses may be but a few rods off, filled with unsuspecting mortals who imagine their tormentors are far inland over the salt meadows. But if the wind dies down, as it usually does when veering, out come swarms upon swarms of females intent upon satisfying their depraved taste for blood. This explains why they appear on the field of action almost immediately after the cessation of the strong breeze; on the supposition that they were blown inland, this sudden reappearance would be unaccountable."

A sultry, rainy period of midsummer is commonly referred to as "good mosquito weather." The ac-

Best Methods to Employ

cepted idea is that mosquitoes are much more abundant at such times. This is true, and the explanation is simple. Mosquito larvæ, or wrigglers, as they are termed, require water for their development. A heavy shower leaves standing water, which, when the air is full of moisture, evaporates slowly. Then, too, the heat favors the growth of the microörganisms on which the larvæ feed; wrigglers found in the water forty-eight hours after their formation will have plenty of food, and adult mosquitoes will appear six to eight days after the eggs are laid. Clear weather, with quick evaporation, interferes with the development of the wrigglers, so that a season with plenty of rain, but with sunshiny, drying weather intervening, is not "good mosquito weather."

Destroy the Larvæ

Inasmuch as a generation of mosquitoes appear to torment man within ten days, at the longest, after the eggs are laid; as a batch laid by a female mosquito contains from two hundred to four hundred eggs; as from each egg may issue a larva or wriggler which in six days will be an adult mosquito on the wing—it is to the destruction of the larvæ that attention should be directed. The larva is a slender organism, white or gray in color, comprising eight segments. The last of these parts is in the form of a tube, through which the wriggler breathes. Although its habitat is the

Ridding Stagnant Water of Mosquitoes

water, it must come to the surface to breathe, therefore its natural position is head down and tail, or respiratory tube, up. Now, if oil is spread on the surface of a pool inhabited by mosquito larvæ, the wrigglers are denied access to the air which they must have. Therefore, they drown, just as any other air-breathing animal would drown under similar circumstances.

Best Preventive Measures

As to the best methods to employ in ridding a country place, or any other region, of mosquitoes, the directions furnished by Dr. L. O. Howard, the Government entomologist, who has been a careful student of the problem since 1867, are of great value:

"Altogether,¹ the most satisfactory ways of fighting mosquitoes are those which result in the destruction of the larvæ or the abolition of their breeding places. In not every locality are these measures feasible, but in many places there is absolutely no necessity for the mosquito annoyance. The three main preventive measures are the draining of breeding places, the introduction of small fish into fishless breeding places, and the treatment of such pools with kerosene. These are three alternatives, any one of which will be efficacious and any one of which may be used where there are reasons against the trial of the others.

¹ See Bulletin No. 25, U. S. Department of Agriculture, Division of Entomology.

Best Methods to Employ

Quantity of Kerosene to be Used

"The quantity of kerosene to be practically used, as shown by the writer's experiments, is approximately one ounce to fifteen square feet of water surface, and ordinarily the application need not be renewed for one month. . . . The writer is now advising the use of the grade known as lubricating oil, as the result of the extensive experiments made on Staten Island. It is much more persistent than the ordinary illuminating oils. . . . On ponds of any size the quickest and most perfect method of forming a film of kerosene will be to spray the oil over the surface of the water. . . . It is not, however, the great sea marshes along the coast, where mosquitoes breed in countless numbers, which we can expect to treat by this method, but the inland places, where the mosquito supply is derived from comparatively small swamps and circumscribed pools. In most localities people endure the torment or direct their remedies against the adult insect only, without the slightest attempt to investigate the source of the supply, when the very first step should be the undertaking of such an investigation.

"The remedy which depends upon draining breeding places needs no extended discussion. Naturally the draining off of the water of pools will prevent mosquitoes from breeding there, and the possibility of such draining and the means by which it may be done will vary with each individual case. The writer is in-

Ridding Stagnant Water of Mosquitoes

formed that an elaborate bit of work which has been done at Virginia Beach bears on this method. Behind the hotels at this place, the hotels themselves fronting upon the beach, was a large fresh-water lake, which, with its adjoining swamps, was a source of mosquito supply, and it was further feared that it made the neighborhood malarious. Two canals were cut from the lake to the ocean, and by means of machinery the water of the lake was changed from a body of fresh to a body of salt water. Water that is somewhat brackish will support mosquitoes, but water that is purely salt will destroy them.

Employing Fish to Destroy Larvæ

“The introduction of fish into fishless breeding places is another matter. It may be undesirable to treat certain breeding places with kerosene, as, for instance, water which is intended for drinking, although this has been done without harm in tanks where, as is customary, the drinking supply is drawn from the bottom of the tank. The value of most small fishes for the purpose of destroying mosquito larvæ was well indicated by an experience described to us by Mr. C. H. Russell, of Bridgeport, Conn. In this case a very high tide broke away a dike and flooded the salt meadows of Stratford, a small town a few miles from Bridgeport. The receding tide left two small lakes, nearly side by side and of the same size.

Best Methods to Employ

In one lake the tide left a dozen or more small fishes, while the other was fishless. An examination by Mr. Russell in the summer of 1891 showed that while the fishless lake contained tens of thousands of mosquito larvæ, that containing the fish had no larvæ. The use of carp for this purpose has been demonstrated, but most small fish will answer as well. The writer knows of none that will be better than either of the common little sticklebacks (*Gasterosteus aculeatus* or *Pygosteus pungitius*)."

Is mosquito fighting a success? This question is an all-important one, not only to the summer resident, but also to cities and towns contiguous to salt-water marshes, or to swampy lands, well suited for mosquito breeding. The answer is this: Mosquito control is possible; actual extermination impossible with an insect that develops so rapidly. The "Jersey mosquito," the unscientific name popularly given to an insect of huge size and ravenous appetite, has become famous. As a matter of fact, the species of mosquitoes found in New Jersey are no more rare or varied than those found on Staten Island or on Long Island. But until very recently the region lying between Jersey City and Newark has been particularly favorable to the development of mosquito larvæ. It has been announced in the press that mosquitoes have been driven out of the Newark meadows. This is an exaggeration, of course, but the work accomplished there is remarkable, and other infected regions may take heart from the

Ridding Stagnant Water of Mosquitoes

marked success which has attended the efforts of Dr. John B. Smith, Entomologist of the New Jersey State Agricultural Experiment Station.

Remarkable Work Accomplished

The salt marsh lying within the limits of the city of Newark covers an area of about 3,500 acres. It extends from a point on the Passaic River to the mouth of Bound Creek, where it empties into Newark Bay. Its length is about eight miles and it has an extreme width of three miles. The Newark marsh problem was a very complex one. The meadows are cut into many sections by the several traversing railroads and by creeks; this materially influences the drainage. The Peddie Street sewer crosses the marsh in a straight line of about three miles from the city to the bay. This sewer is twenty feet wide, and its banks are from three to four feet above the marsh land.

An experiment with machine ditching was made in 1903. The worst parts of the marsh were selected, and about 40,000 feet of ditches were cut. These ditches were six inches wide, two feet deep, and the drainage was perfect from the outset. The section of meadow thus drained became so dry in consequence that the grass growing there can now be cut by a machine in summer, whereas formerly the hay could be mown only in winter. The work was so successful that the Newark Common Council appropriated \$5,000

Best Methods to Employ

to complete the mosquito drainage of the marsh. Of the results obtained up to this spring, Dr. Smith says:

"This Newark marsh problem was an unusual one, and one that would not be likely to recur in the same way at any other point along the coast. Nevertheless, of the entire 3,500 acres of marsh, not 100 acres remain on which there is any breeding whatever, and that is dangerous only in a few places and under certain abnormal conditions. Including old ditches cleaned out, about 360,000 running feet of ditches have been dug on the Newark marshes, partly by machine and partly by hand, and if the work is not entirely successful, that is due to the defects which were not included in the drainage scheme. It is a safe prediction, I think, that Newark will have no early brood of mosquitoes in 1905, comparable with the invasions of 1903 and 1904."

This prophecy has proved true.

The Campaign on Long Island

The wealthy summer residents along the north shore of Long Island, keenly alive to the necessity of driving mosquitoes from the region where they spend so much of their time, have attacked the problem in a scientific, as well as an energetic way. The North Shore Improvement Association intrusted the work to Henry Clay Weeks, a sanitary engineer, with whom was associated, as entomologist, Prof. Charles B.

Ridding Stagnant Water of Mosquitoes

under resting mosquitoes the insects fall into the cup and are destroyed. Those possessed of less energy daub their faces and hands with camphor, or with the oil of pennyroyal, and bid defiance to the pests. With others it is, Slap! slap!—with irritation mental as well as physical; for the latter, entomologists recommend household ammonia.

Part II

**PURE FOOD FOR THE
HOUSEKEEPER**

BY

S. JOSEPHINE BAKER

CHAPTER I

How to Detect Food Adulteration

ADULTERATION when applied to foodstuffs is a broad, general term, and covers all classes of misrepresentation, substitution, deterioration, or addition of foreign substances; adulteration may be either intentional or accidental, but the housekeeper should be prepared to recognize it and so protect herself and her household.

Food is considered adulterated when it can be classified under any of the following headings:

DEFINITIONS OF ADULTERATION.—(1) If any substance has been mixed or packed with it so as to reduce or lower or injuriously affect its quality or strength.

(2) If any inferior substance has been substituted for it, wholly or in part.

(3) If any valuable constituent has been wholly or in part abstracted from it.

(4) If it consists wholly or in part of diseased or decomposed or putrid or rotten animal or vegetable substance, or any portion of an animal unfit for food, whether manufactured or not, or if it is the product

Adulteration of Food

of a diseased animal or one who has died otherwise than by slaughter.

(5) If it be colored or coated or polished or powdered, whereby damage is concealed or it is made to appear better than it really is.

(6) If it contains any added poisonous ingredient or any ingredient which may render such article injurious to health; or if it contains any antiseptic or preservative not evident or not known to the purchaser or consumer.

FOOD LAWS.—There is now in effect in the United States a rigid law against the offering for sale of any article intended for human consumption which is adulterated in any way, without the fact and nature of such adulteration being plainly stated on a label attached to the package containing the article. This law, however, applies only to articles of this nature which originate, or are produced, in one State and offered for sale in another. The purchaser is, therefore, in a great degree protected, but many foodstuffs or manufactured articles may have their origin within the State wherein they are sold, and in this case the only safeguards are those afforded by the laws of the State, city, or town immediately concerned. If these restraining laws do not exist or if they are not enforced the housekeeper must rely upon her own efforts to protect her family from adulterated food.

PERMISSIBLE ADULTERANTS.—In this class are included articles having a food value such as salt,

S. Josephine Baker

sugar, vinegar, spices, or smoke used as preservatives of meats; or starch when added to the salts composing baking powder, where a certain amount is permissible for the purpose of absorbing moisture.

GENERAL DIRECTIONS.—The ability to select fresh, wholesome meats, poultry, fish, fruits, and vegetables, to determine readily the purity of dairy products, and to detect adulteration or misrepresentation in all classes of foodstuffs must, in most instances, be acquired. Common sense and good reasoning powers are needed here as in every problem of life. While some adulterants can be detected only by trained chemists and by means of tests too difficult and involved for general use, the average housekeeper may amply protect herself from gross imposition by simply cultivating her powers of observation and by making use of a few simple tests well within her grasp and easily applied.

First—Sight, Taste, and Smell.—All are of prime importance in determining the freshness and wholesomeness of foods, especially meats, poultry, fish, vegetables, and fruits. Avoid all highly colored bottled or canned fruits or vegetables; pure preserved fruits, jams, jellies, or relishes may have a good bright color, but never have the brilliant reds and greens so often shown in the artificially colored products.¹ The same is

¹ The presence of aniline dyes may be detected by mixing a portion of the suspected sample with enough water to make a thin paste. Wet a piece of white wool cloth or yarn thoroughly with water and place it

Adulteration of Food

true of canned peas, beans, or Brussels sprouts; here the natural product is a dull, rather dingy green, and all bright green samples must be suspected. Foreign articles of this class are the worst offenders.

All food products should have a clean wholesome odor, characteristic of their particular class. The odor of decomposition can be readily detected; stale and musty odors are soon recognized.

It should be rarely necessary to use the sense of taste, but any food with a taste foreign to the known taste of a similar product of known purity should be discarded or at least suspected.

Second—Price.—Remember that the best and purest food, however high priced, is cheapest in the end. Its value in purity, cleanliness, food value, and strength gives a greater proportionate return than foods priced lower than one might legitimately expect from their supposed character. To cite a few instances: pure Java and Mocha coffee cannot be retailed at twenty cents per pound; therefore, when the housekeeper pays that price she must expect to get chicory mixed with the coffee; if it contains no other adulterant, she may consider herself fortunate. Cheap vanilla is not made from the vanilla bean. These beans sell at wholesale for from ten to fifteen dollars a pound, and the cheap

with the paste in an agate saucepan. Boil for ten minutes, stirring frequently. If a dye has been used the wool will be brightly colored; a brownish or pinkish color indicates the natural coloring matter of the fruit or vegetable.—EDITOR.

S. Josephine Baker

extracts are made from the Tonka bean or from a chemical product known as vanillin. These substances are not harmful, but they are not vanilla. Pure virgin olive oil is made from the flesh of olives after the stones and skin have been removed; cheaper grades are made from the stones themselves and have little food value, while the virgin oil is one of the most nutritious and wholesome of foods.

Such instances might be cited almost without end. Good, pure food demands a good price, and economy defeats its own purpose when it is practiced at the expense of one of the most vital necessities of health and life.

Third—Reliable Dealers.—Select your tradesmen with the same care you bestow in the choice of a physician. A grocer or butcher who has once sold stale, adulterated, or impure wares has forfeited his right to be trusted. A man who is honestly trying to build up a good trade must have the confidence of his customers and it is to his interest to sell only worthy goods; this confidence he can gain only by proving his trustworthiness. When you are convinced of your dealer's honesty give him your trade and do not be lured away by flashy advertisements and the promise of "something for nothing."

PREPARATION FOR CHEMICAL TESTS.—

Although the housekeeper will rarely need the use of any chemical tests for the purpose of determining the purity of food, the following directions must be kept

Adulteration of Food

in mind if such an expedient is deemed necessary. It will be wise, however, in the majority of cases when the presence of chemical preservatives and adulterants is suspected, to send the article to a chemist for analysis.

1. All refuse matter, such as shells, bones, bran, and skin, must be removed from the edible portion of the food to be tested.

2. If the sample is solid or semi-solid, divide it as finely as possible. All vegetables and meats may be minced in the common household chopping machine. Tea, coffee, whole spices, and the like may be ground or crushed in a mortar or in a spice mill.

3. Milk must be thoroughly stirred or shaken so that the cream is well mixed with the body of the milk.

FLESH FOODS—Meat.—Fresh, wholesome meat is neither pink nor purple; these colors indicate either that the animal was not slaughtered or that it was diseased. Good meat is firm and elastic and when dented with the finger does not retain the impression; it has the same consistency and color throughout; the flesh is marbled, due to the presence of fat distributed among the muscular fibers; it will hardly moisten the finger when touched; it has no disagreeable odor and has a slightly acid reaction so that red litmus paper applied to it should not turn blue.

Wet, sodden, or flabby meat with jellylike fat, a strong putrid odor, and alkaline reaction should be

S. Josephine Baker

avoided. These signs indicate advanced decomposition, and such meat is unfit for food.

Beef.—This meat should have a fine grain, be firm in texture, with rosy-red flesh and yellowish-white fat.

Lamb and Mutton should have a clear, hard, white fat with the lean part juicy, firm, and of rather light-red color. The flesh should be firm and close of grain.

Veal.—The meat should not be eaten unless the animal was at least six weeks old before slaughtering. The sale of this immature veal, or "bob veal" as it is sometimes called, is prohibited by law in many States. It is unwholesome and may be recognized by its soft, rather mushy consistency and bluish tinge. Good veal has a firm white fat with the lean of a pale-red color.

Pork.—This meat when fresh has a fat that is solid and pure white; if yellow and soft it should be rejected; the lean is pink and the skin like white translucent parchment.

Poultry.—Good poultry is firm to the touch, pink or yellowish in color, is fairly plump, and has a strong skin showing an unbroken surface. It has a fresh odor.

Stale poultry is flabby and shows a bluish color; it becomes green over the crop and abdomen, and the skin is already broken or easily pulled apart in handling. The odor of such a bird is disagreeable and may even be putrid.

Fish.—With the exception of the salted or preserved varieties fish should always be perfectly fresh

Adulteration of Food

when eaten. Probably no other article of food is more dangerous to health than fish when it shows even the slightest traces of decomposition. The ability to recognize the earliest signs of staleness is of the utmost importance. Fish deteriorate rapidly and should always be carefully inspected before purchasing.

Fresh fish are firm to the touch, the scales moist and bright, the gills red, and the eyes clear and slightly prominent. When held flat in the hand the fish should remain rigid and the head and tail droop slightly, if at all.

Stale fish are soft and flabby, the skin is dull and the eyes sunken and often covered with a film. The tendency of the head and tail to droop is marked and the fish has a characteristic disagreeable odor. This odor of decomposition is best detected in the gills.

Lobsters and Crabs.—These shellfish should always be alive when purchased. This condition is easily demonstrated by their movements, and the rule should never be disregarded.

Oysters and Clams.—Oysters should not be eaten during the months of May, June, July, and August; these are their breeding months and they are unwholesome during that period. That oysters sometimes contain the germs of typhoid fever is an assured fact; these germs are acquired not from the natural habitat of the oyster in salt water but from the fresh-water, so-called "fattening beds," where the oysters are placed for a season to remove the brackish and salty taste of

S. Josephine Baker

the sea and to render them more plump. These beds are frequently subject to pollution, and the housekeeper should only purchase oysters from reliable dealers where the purity of the source of the supply is unquestioned.

Clams are in season and may be eaten throughout the year.

All shellfish when fresh have an agreeable fresh odor. The shells should be firmly closed or should close when immersed in water and touched with the finger. If they have been removed from their shells when purchased, the flesh of the fish itself should be firm, clean in appearance and not covered with slime or scum; the odor should be fresh. The odor of dead or decomposed oysters and clams is pungent and disagreeable.

MEAT PRODUCTS—Canned or Potted Meats.—

The label on cans containing meat products should state clearly the exact nature of the contents. Deception as to the character of the meat is easy to practice and difficult to detect by any but a trained analyst. The presence of preservatives can also only be detected by chemical analysis. As these products are practically all put on the market by the large packing houses and designed for interstate commerce, they are subject to government inspection, and, therefore, if they bear the government stamp may be considered pure. The point that the housekeeper may consider is the length of time the meat has remained in the can. Put up under

Adulteration of Food

proper precautions these canned goods retain their wholesomeness for an almost indefinite period. The heads of the cans should always present a concave surface; if they are convex, it is a sign of decomposition of the contents. When the can is opened the meat should have a clean appearance, free from mold or greenish hue, and the odor should be fresh and not tainted.

Sausages.—If possible, sausages should be home-made, then one may be assured of their purity and freedom from adulteration.

Owing to the rapid color changes and early decomposition of fresh meat, artificial colors are often used to conceal the former, and preservatives like boric acid or saltpeter to retard the latter.

The artificial colors, such as carmine and aniline red, may be detected by observation or by warming the finely divided material on a water bath with a five per cent solution of sodium salicylate. This fluid will extract the color, if present.

Lard.—Good lard is white and granular and has a firm consistency. It has an agreeable characteristic odor and taste. The choicest leaf lard is made from the fat about the kidneys of the hog; the cheaper grades are made from the fat of the whole animal.

FRESH VEGETABLES AND FRUITS—Vegetables.—All green vegetables to be eaten uncooked should be carefully washed and examined for insects, dirt, and foreign matter generally. The ova or eggs

S. Josephine Baker

of the tapeworm may be ingested with improperly cleaned vegetables. Running water and a clean brush (kept for this purpose) should be used.

Green vegetables should have a fresh, unwilted appearance; any sign of staleness or decay should cause their rejection. Overripe or underripe vegetables are harmful.

Lettuce, celery, and all leaved or stemmed vegetables should be examined to see if the outer leaves have been removed; this may be determined by the distance of the leaves from the stem head. The general signs of disease in vegetables are softening, change of color, and mold.

The following characteristics indicate fresh and wholesome vegetables:

Asparagus.—Firm and white in the stalk with a green, compact tip.

Beans and Peas should have green, not yellow, pods, brittle, and easily snapped open. The vegetable itself should be tender, full and fleshy, not wrinkled or shrunken.

Cabbage, crisp and firm, with a well-rounded and compact head.

Carrots, light red or yellow, with a regular, conical shape, sweet and crisp.

Cauliflower, white, compact head; any tinge of yellow or green generally indicates an inferior quality.

Celery, nearly white in color; large, crisp, and solid stalks, nutty in flavor.

Adulteration of Food

Cucumbers, firm, crisp, with a smooth skin and white flesh.

Lettuce, the head close and compact; the leaves clean, crisp, and sweet. When it is too young or running to seed the taste is bitter. Pale patches on the leaves are caused by mildew and are a sign of decay.

Parsnips, buff in color, with unforked roots, sweet and crisp.

Potatoes, underripe, green potatoes are unfit for food; they contain a poisonous substance which renders them actually harmful. Good potatoes should have a smooth skin and few eyes; the flesh pale and of a uniform color and of a firm consistency. A rough skin, with little depressions, indicates a disease called "scab"; dark-brown patches on the skin are due to a disease called "smut." Potatoes with such diseases are of inferior quality. If green on one side, due to exposure to the sun when growing, the potatoes are unwholesome.

Fruits.—Underripe or green fruit should never be eaten. This condition may be easily detected by the color and consistency of the fruit. Diseased or decayed fruit is known by its change of color, softening, and external mold. Spots on fruit are often caused by a fungus which lowers its quality and renders it less wholesome.

CEREALS AND THEIR PRODUCTS—Cereals.
—Particularly when bought in original packages cereals are generally pure and unadulterated. When

S. Josephine Baker

bought in bulk there may be found dust, dirt, worms, insects, and excessive moisture. These may all be determined by careful inspection. The presence of an undue amount of moisture adds greatly to the weight of cereals and is therefore a fraud. Cereals should be dry to the touch and the individual kernels or particles separate and distinct.

Flour.—By this general term is meant the ordinary wheat flour. It should not be too moist, should have a fine white appearance, remain lumpy, or hold its form, on pressure, not show any particles which cannot be crushed, and when a handful is thrown against the wall, part of it should adhere. The odor and taste should be fresh and clean and not musty or moldy.

The common adulterants are corn and rice meal. If a sample of the flour be thrown on the surface of a glassful of water, the corn and rice, being heavier, will sink; grit and sand may be detected in the same way. If the flour has been adulterated with mineral substances it may be shown by burning a portion down to an ash; the ash of pure flour should not exceed two per cent of the total amount; if mineral substances are present the amount of ash will be greatly increased.

Alum is sometimes added to flour in order to give it a whiter appearance and to produce whiter and lighter bread; it is most unwholesome. It can be detected by the so-called "logwood" test, which is prepared and used as follows:

Adulteration of Food

Make two solutions. The first: a five per cent solution of logwood chips in alcohol. The second: a fifteen per cent solution of ammonium carbonate in water. Make a paste of one teaspoonful of the flour and an equal amount of water; mix with it one-quarter of a teaspoonful of the logwood solution; follow this immediately with one-quarter of a teaspoonful of the ammonium carbonate solution. If alum is present, the paste will show a lavender or blue color; if absent, the mass will become pink, fading to a dirty brown. If the result is doubtful, set the paste aside for several hours, when the colors will show more plainly.

Bread.—Bread should be well baked and not too light or too heavy; the crust should be light brown and adherent to the substance of the bread. The center should be of even consistency, spongy, and firm; it should not pit or be soggy or doughy. The pores or holes should be of practically the same size throughout.

Exceedingly white, light, or porous bread shows the presence of alum. It may be detected by means of the solutions already mentioned in the "logwood" test. Mix one teaspoonful of each solution and add three ounces (six tablespoonfuls) of water; pour this over a lump of bread, free from crust and about an inch square. After the bread has become thoroughly soaked, pour off the excess of liquid and dry the bread in the dish; if alum is present, the mass will show

S. Josephine Baker

a violet or blue tint, more marked on drying; if absent, a brownish color will appear.

Baking Powders.—Baking powders are of three classes, all having sodium bicarbonate (baking soda) as their alkaline salt. The first style is the commonly used and wholesome mixture of cream of tartar and baking soda; the second has calcium phosphate for the acid salt, and the third contains alum. All have a certain proportion of starch to absorb moisture. Of these the alum powders are the most harmful and should be avoided. Practically all of the well-known brands of baking powder are of the first-mentioned class and wholesome, and are rarely adulterated.

DAIRY PRODUCTS—Milk.—Pure milk should have a specific gravity of from 1.027 to 1.033. Its normal reaction is neutral or slightly acid; it should never be strongly acid. If it is strongly alkaline, i. e., turning red litmus paper blue, it is pretty certain that something in the way of a preservative has been added to it. When left standing for a few hours the cream should show as a slightly yellowish top layer, one-tenth or more of the whole amount; the milk below the cream should be lighter in color and with the slightest bluish tinge. If the color is of a yellowish tinge throughout, the addition of coloring matter must be suspected. "Annatto," a vegetable pigment, is used to give a "rich" tint to milk. To detect it, add one teaspoonful of baking soda to one quart of milk and immerse in it a strip of unglazed paper; in a few

Adulteration of Food

hours examine the paper; if annatto is present, it will have become an orange color.¹

If the whole milk has a blue and thin appearance, or if the cream is scant in quantity, it has probably been diluted with water. The popular idea that chalk is sometimes added to poor milk to make it appear of better quality is erroneous; chalk would always show as a precipitate, as it does not dissolve, and the presence of such a sediment would be a too obvious adulteration to be practiced.

Milk should always be kept at a temperature below 50° F.; above that temperature the bacteria in it multiply with great rapidity and render it unfit for use.

Milk may be preserved for several days if "pasteurized" or "sterilized." Pasteurization consists of heating milk to a temperature of about 167° F., and maintaining it at that degree for twenty minutes. Sterilization means keeping the milk at a temperature of 212° F. for two hours and a half. Immediately after either process the milk should be cooled, then placed in absolutely clean, covered bottles and kept on ice. These methods are not only harmless but actually beneficial in that they destroy any disease germs that might be present.

Chemical preservatives are occasionally found in

¹ A little vinegar added to heated cream or milk produces in the curd a distinct orange color if an aniline dye has been used to make the cream look "rich." The curd will be brown if annatto or caramel has been used. If pure, the curd will be white.—EDITOR.

S. Josephine Baker

milk. They may be suspected if the milk is alkaline in reaction and has a disguised taste. The ones most commonly used are boric and salicylic acids and formaldehyde; the two former can only be detected by chemical tests too delicate and intricate to be used by the housewife. Formaldehyde may be tested for by using a solution of one drop of a ten per cent solution of ferric chloride to one ounce of hydrochloric acid.¹ Fill a small porcelain dish one-third full of this solution; add an equal volume of milk and heat slowly over a flame nearly to the boiling point, giving the dish a rotary motion to break up the curd. If formaldehyde is present, the mass will show a violet color, varying in depth with the amount present; if it is absent, the mass turns brown.

Butter.—Good butter has a fresh, sweet odor and an agreeable taste. It should be of the same color and consistency throughout, easily cut and adherent and not crumbly when molded into shapes. Pure butter is very light in color; nearly all that is sold is colored, in order to meet the popular demand for “yellow” butter; annatto and other vegetable and mineral substances are sometimes employed for this purpose. These coloring matters are generally harmless but may be detected by dissolving a portion of the butter in alcohol; the natural color will dissolve, while foreign coloring will not. Butter should consist of eighty-five

¹ This acid must be used with great care; no portion of it should ever come in contact with the skin or clothing.

Adulteration of Food

per cent fat, with the remainder water, casein, and salt. The most common methods of adulteration consist in an excess of water and the addition of oleomargarine. If an excess of water has been added it may be shown by melting the butter; the water and fat will separate in two distinct layers. Oleomargarine has a distinctive meaty smell, like that of cooked meat, and lacks the characteristic odor of pure butter. If pure butter is melted in a spoon, it will not sputter; if oleomargarine is present, it will.

The preservatives sometimes used, namely, boric and salicylic acids and formaldehyde, can only be detected by chemical tests.

Eggs.—Two methods may be used to detect stale eggs. First: make a solution of one part of table salt to ten parts of water and immerse the suspected egg; if it sinks, it is perfectly fresh; if it remains in the water below the surface, it is at least three days old, and if it floats, it is five or more days old.

Second: hold the egg between a bright light and the eye. If it is fresh, it will show a rosy tint throughout, without dark spots, as the air chamber is small; if not fresh, it will look cloudy, with many dark spots present.

TEA AND COFFEE.—These substances are extensively adulterated, but the adulterants are almost without exception harmless.

Tea.—The commonest forms of adulteration of tea are as follows: (a) Exhausted tea leaves which have

S. Josephine Baker

already been used are dried and added. Their presence may be detected by the weakness of the infusion, made from a given quantity of the suspected tea, compared with a similar infusion made from tea known to be pure. (b) Leaves from other plants are sometimes dried and added; these are easily shown if an infusion is made and when the leaves are thoroughly wet unrolling and comparing them. (c) Green teas may be "faced" or colored with Prussian blue, indigo, French chalk, or sulphate of lime; black teas may be similarly treated with plumbago or "Dutch pink." If teas so treated are shaken up in cold water the coloring matter will wash off. (d) Sand and iron filings are occasionally added for weight; observation, and the fact that they sink when tea is thrown in water, will show their presence. Iron filings may be readily found by using a magnet. (e) The presence of starch may be shown by washing the tea in cold water, straining it, and testing the solution in the following manner: dissolve one-half teaspoonful of potassium iodide in three ounces of water and add as much iodine as the solution will dissolve; a few drops of this solution added to the suspected sample will give a blue color if starch is present.

Coffee.—Coffee should always be purchased in the bean, as ground coffee is much more frequently adulterated and the foreign substances are more difficult to detect.

The adulterants commonly used are: chicory, peas,

Adulteration of Food

beans, peanuts, and pellets of roasted wheat flour, rye, corn, or barley.

Fat globules are always present in pure coffee; their presence may be shown by the fact that imitation coffee sinks in water, while pure coffee floats.

Chicory is the most frequently used adulterant; it is added for flavor and to produce a darker infusion, thus giving the impression of greater strength. It is perfectly harmless and as a drink is actually preferred by some people. Its detection is comparatively easy. Chicory grains are dark, gummy, soft, and bitter; coffee grains are hard and brittle; a small amount put in the mouth will demonstrate the difference. Chicory will often adhere to the wheels of a coffee grinder, clogging them on account of its gummy consistency.

When a sample of adulterated coffee is thrown in water the pure coffee floats and leaves the water unstained; chicory sinks almost instantly, coloring the water, while peas and beans sink more slowly but also color the water.

Peas and beans are also detected by the polished appearance of the broken or crushed grains in marked contrast to the dull surface of crushed coffee.

The presence of peas, beans, rye, wheat, bread crumbs, and allied substances may be shown by the fact that they all contain starch.

Make a ten per cent infusion of the suspected coffee; filter it, and decolorize the solution by boiling it with a piece of animal charcoal. Test the decolorized solu-

S. Josephine Baker

tion by slowly adding a few drops of the "potassium-iodide-iodine solution," directions for preparing which were given under heading of "Tea." A resulting blue color will indicate the presence of starch.

COCOA AND CHOCOLATE.—The adulterants of these substances are generally harmless, as they usually consist of flavoring extracts, sugar, starch, flour, and animal fats. No tests other than flavor, consistency, and smoothness need be considered. Good cocoa and chocolate should be slightly bitter, with a pleasant characteristic odor and taste; they should have a smooth, even consistency and be free from grit or harsh particles.

CANNED AND BOTTLED VEGETABLES AND FRUITS.—In general, acid substances, such as tomatoes and fruits, should not be canned in tin, as the action of the acid tends to dissolve the tin. It is better, therefore, to purchase these articles in glass.

After opening the can the odor and appearance of the contents should be noted. The odor should be clean and fresh, and the slightest trace of any sour, musty, or disagreeable smell should cause the rejection of the food. The appearance should be clean, with no mold; the consistency and color of the fruit or vegetables should be uniform throughout. If the color is brighter than that of a similar article when canned at home, the presence of artificial coloring matter must be suspected. The brilliant green of some

Adulteration of Food

brands of peas, beans, or Brussels sprouts is produced by the addition of the salts of copper. This may be proved by leaving the blade of a penknife in the contents of the can for a short time; if copper is present it will be deposited on, and discolor, the blade.

Brightly colored fruits should excite suspicion; this same dictum applies to all brightly colored jams and jellies, as the colors are usually produced by the addition of carmine or aniline red.

The presence of preservatives, salicylic and boric acids, the benzoates, etc., can only be proved by delicate chemical tests.

SUGAR.—Pure granulated or powdered sugar is white and clean. The presence of glucose should be suspected in sugar sold below the market price; it is perfectly harmless, but has a sweetening power of only about two-thirds that of sugar and is added on account of its cheapness and to increase the bulk.

If sand, dirt, or flour are present they may be detected by observation, or by washing the suspected sample in water; flour will not dissolve, sand will sink, and dirt will discolor the water.

SPICES.—Spices should be bought whole and ground in a spice mill as needed; if this is done, there need be little fear of their impurity, for whole spices are difficult to simulate or adulterate. Ground spices may be adulterated with bark, flour, starches, or arrow-root; these adulterants are harmless, but are fraudulent,

S. Josephine Baker

as they increase the bulk and decrease the strength. Their actual presences can only be demonstrated by a microscopical or chemical examination.

Peppers.—Black pepper is made from the whole berry; white pepper is made from the same berry with the outer husk removed. The adulterants are usually inert and harmless substances, such as flour, mustard, or linseed oil; their presence is obviated by the use of the whole peppercorns, ground as needed.

Red Pepper.—This may be adulterated with red lead; when pure it will be entirely suspended in water; if a sediment falls it is probably red lead.

Mustard.—Practically all of the adulterants of mustard can only be detected by intricate chemical tests. The presence of turmeric may be detected by the appearance of an orange-red color when ammonia is added to a solution of the sample.

Tomato Catsup.—Artificial dyestuffs are common, giving a brilliant crimson or magenta color. Such catsup does not resemble the natural dull red or brown color of the homemade article.

Preservatives, such as boric, salicylic, or benzoic acids and their salts, are sometimes added. While their presence cannot be condoned, yet they are usually present in small amounts and therefore practically harmless.

Pickles.—These should be of a dull-green color. The bright emerald green sometimes observed is due to the presence of the salts of copper; this may be

Adulteration of Food

proved by dipping the blade of a penknife in the liquor, as described under the heading of "Canned Goods."

Alum is sometimes used as a preservative and in order to make the pickles crisp. Its presence may be demonstrated by means of the "logwood" test mentioned under the heading of "Flour."

VINEGAR.—Cider vinegar is of a brownish-yellow color and possesses a strong odor of apples.

Wine vinegar is light yellow if made from white wine, and red if made from red wine.

Malt vinegar is brown and has an odor suggestive of sour beer.

Glucose vinegar has the taste and odor of fermented sugar.

Molasses vinegar has the distinctive odor and taste of molasses.

OLIVE OIL.—Pure olive oil has a pleasant, bland taste and a distinctive and agreeable odor, unmistakable in character for that of any other oil. The finest virgin oil is pale green in color, the cheaper grades are light yellow.

The adulterants consist of cotton-seed, corn, mustard, and peanut oils.

When pure olive oil is shaken in a glass or porcelain dish with an equal quantity of concentrated nitric or sulphuric acid ¹ it turns from a pale to a dark green color in a few minutes; if under this treatment a red-

¹ These acids must be used with great care. They should never be allowed to come in contact with the skin or clothing.

S. Josephine Baker

dish to an orange or brown color is produced the presence of a foreign vegetable oil is to be suspected.

FLAVORING EXTRACTS—Vanilla.—This may be wholly or in part the extract of the Tonka bean or may be made from a chemical substance known as vanillin. The best practical working tests as to its purity are the price, taste, and odor. The distinctive odor and taste of vanilla are characteristic and cannot be mistaken.¹

Lemon.—This extract is often made from tartaric or citric acid. They may be tested for as follows: to a portion of the extract in a test tube add an equal volume of water to precipitate the oil; filter, and add one or two drops of the filtrate to a test tube full of cold, clear limewater; if tartaric acid is present a precipitate will fall to the bottom of the tube. Filter off this precipitate (if present) and heat the contents of the tube; if citric acid is present it will precipitate in the hot limewater.

¹ Add a little sugar-of-lead solution to the suspected extract; true vanilla extract will give a yellowish-brown precipitate and a pale, straw-colored liquid. If the extract is artificial, the addition of the lead solution will have little or no effect.—EDITOR.

FOOTNOTE.—Dr. Baker wishes to acknowledge her indebtedness to the following authorities and the volumes mentioned for many helpful suggestions. Pearman and Moore, "Aids to the Analysis of Foods and Drugs"; Albert E. Leach, "Food Inspection and Analysis"; Francis Vacher, "Food Inspector's Hand Book."

CHAPTER II

Mushroom Poisoning

Symptoms—Treatment—How to Tell Mushrooms—The Common Kind—Other Varieties—The Edible Puffball—Poisonous Mushrooms Frequently Mistaken.

MUSHROOM POISONING.—Vomiting, cramps, diarrhea, pains in legs; possibly confusion, as if drunk, stupidity, followed by excitement, and perhaps convulsions. Lips and face may be blue. Pulse may be weak.

First Aid Rule 1.—Rid the stomach and bowels of remaining poison. Give emetic of mustard, tablespoonful in three glasses of warm water, unless vomiting is already excessive. When vomiting ceases, give tablespoonful of castor oil, or compound cathartic pill. GIVE NO SALTS. Also empty bowels with injection of tablespoonful of glycerin in pint of warm soapsuds and water.

Rule 2.—Antidote the poison. Give a cup of strong coffee and fifteen drops of tincture of belladonna to adult. Repeat both once, after two hours have passed.

Winslow and Ferris

Rule 3.—Rest and stimulate. Put patient to bed. Give whisky, a tablespoonful in twice as much water. Give tincture of digitalis, ten drops every two hours, till two or three doses are taken by adult.

Symptoms.—Vomiting and diarrhea come on in a few hours to half a day, with cramps in the stomach and legs. The face and lips may grow blue. There is great prostration. In the case of poisoning by the *fly amanita*, stupor may appear early, the patient acting as if drunk, and difficult breathing may be a noticeable symptom. Afterwards the patient becomes excited and convulsions develop. The pulse becomes weak and slow. The patient may die in a few hours, or may linger for three or four days. If treatment be thorough, recovery may result.

Treatment.—Unless vomiting has already been excessive, the patient should receive a tablespoonful of mustard mixed with a glassful of tepid water. After the vomiting ceases he should receive a tablespoonful of castor oil, or any cathartic except salts. If the cathartic is vomited, he should receive an injection into the rectum of a tablespoonful of glycerin mixed with a pint of soapsuds and water. Coffee and atropine (or belladonna) are the best antidotes.

If a physician be secured, he will probably give a hypodermic injection of atropine. If a physician is not procurable, the patient should receive a cup of strong coffee, and a dose of ten or fifteen drops of tinc-

How to know Mushrooms

ture of belladonna in a tablespoonful of water, if an adult. This dose should be repeated once after the lapse of two hours. The patient should be kept in bed, a bedpan being used when the bowels move.

When the pulse begins to grow weak, two tablespoonfuls of whisky and ten drops of the tincture of digitalis should be given to an adult in quarter of a glass of hot water. The digitalis should be repeated every two hours till three or four doses have been taken. The patient must be kept warm with hot-water bottles and blankets.

HOW TO KNOW MUSHROOMS.—One-sixth of one of the poisonous mushrooms has caused death. It is, therefore, impossible to exert too much care in selecting them for food. A novice would much better learn all the characteristics of edible and poisonous mushrooms in the field from an expert before attempting to gather them himself, and should not trust to book descriptions, except in the case of the few edible species described hereafter. It is not safe for a novice to gather the immature or button mushrooms, because it is much more difficult to determine their characteristics than those of the full grown. As reference books, the reader is advised to procure Bulletin No. 15 of the United States Department of Agriculture, entitled "Some Edible and Poisonous Fungi," by Dr. W. G. Farlow, which will be sent without charge on request by the Agricultural Department at Washington; "Studies of American Fungi," by Atkinson, and Miss Mar-

Winslow and Ferris

shall's "Mushroom Book," all of which are fully illustrated, and will prove helpful to those interested in edible fungi.

There are no single tests by which one can distinguish edible from poisonous fungi, such as taste, odor, the blackening of a silver spoon, etc., although contrary statements have been made. Even when the proper mushrooms have been eaten, ill effects, death itself, may follow if the mushrooms have been kept too long, have been insufficiently cooked, have been eaten in too large a quantity (especially by children), or if the consumer is the possessor of an unhappy idiosyncrasy toward mushrooms.

No botanic distinction exists between toadstools and mushrooms; mushrooms may be regarded as edible toadstools. They are all, botanically speaking, edible or poisonous fungi. A description follows of the five kinds of fungi most commonly eaten, and the poisonous species which may be mistaken for them.

EDIBLE MUSHROOMS. — 1. The Common Mushroom (*Agaricus Campestris*).—The fungi called agarici are those which have gills, that is, little plates which look like knife blades on the under surface of the top of the mushroom, radiating outward from the stem like the spokes of a wheel. This is the species most frequently grown artificially, and sold in the markets. The top or cap of this mushroom is white, or of varying shades of brown, and measures from one and a half to three or even four inches in diameter. It



FIG. 35.

THE FIELD MUSHROOM.

(*Agaricus Campestris.*)

An edible variety; very common.

Winslow and Ferris

is found in the latter part of August, in September, and in October, growing in clusters on pastures, fields, and lawns.

The gills are pink or salmon colored in the newly expanded specimen; but as it grows older, or after it is picked, the gills turn dark purple, chestnut brown, or black. This is the important point to remember, since the poisonous species mistaken for it all have white gills. The gills end with abrupt upward curves at the center of the cap without being attached to the stem. In the young mushroom, when the cap is folded down about the stem, the gills are not noticeable, as they are covered by a veil or filmy membrane, a part of which remains attached to the stem (when the top expands), as a ring or collar about the stem a little more than halfway up from the ground. The stem is solid and not hollow, and there is no bulbous enlargement at the base of the stem, surrounded by scales or a collar, as occurs in the *fly amanita* and other poisonous species. Neither the *campestris* nor any other mushroom should be eaten when over a day old, since decomposition quickly sets in.

2. **Horse Mushroom** (*Agaricus Arvensis*).—This species may be considered with the foregoing, but it differs in being considerably larger (measuring four to ten inches across) and in having a more shiny cap, of a white or brown hue. The ring about the stem is noticeably wider and thicker, and is composed of two distinct layers. The gills are white at first, turning dark



FIG. 36.

THE HORSE MUSHROOM.

(*Agaricus Arvensis.*)

This variety is edible.

Winslow and Ferris

brown comparatively late, and the stem is a little hollow as it matures. In some localities it is more common than the *campestris* in fields and pastures, while in other places it is found only in rich gardens, about hot beds, or in cold frames. It is not distinguished from the *campestris* by market people, but is often sold with the latter.

3. **Shaggy Mane, Ink Cap, or Horsetail Fungus** (*Coprinus Comatus*).—This mushroom possesses the most marked characteristics of any of the edible species; it would seem impossible to mistake its identity from written descriptions and illustrations. It is considered by many superior in flavor to the *campestris*.

The top or cap does not expand in this mushroom, until it begins to turn black, but remains folded down about the stem like a closed umbrella. Mature specimens are usually three to five, occasionally from eight to ten, inches high. The stem is hollow. The inside of the cap or gills and the stem are snow white. The outer surface of the cap, which is white in young plants, becomes of a faint, yellow-brown or tawny color in mature specimens, and also darker at the top. Delicate scales often rolled up at their lower ends are seen on the exterior of the cap, more readily in mature mushrooms, hence the name "shaggy mane." There is a ring around the stem at the lower margin of the cap, and it is so loosely attached to either the cap or stem that it sometimes drops down to the base of the latter.

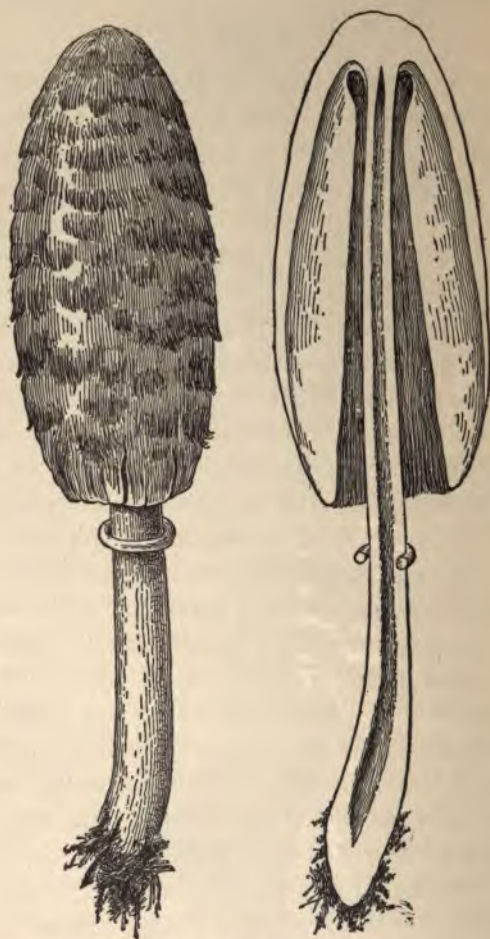


FIG. 37.

THE HORSE-TAIL FUNGUS.

(*Coprinus Comatus.*)

Edible; cut shows entire plant and section.

Winslow and Ferris

The most salient feature of shaggy mane is the change which occurs when it is about a day old; it turns black and dissolves away into an inky fluid, whence the other common name "ink cap." The mushroom should not be eaten when in this condition. The ink cap is usually found growing in autumn, rarely in summer, in richer earth than the common mushroom. One finds it in heaps of street scrapings, by roadsides, in rich lawns, in soils filled with decomposing wood and in low, shaded, moist grounds.

4. Fairy-ring Mushroom (*Marasmius Oreades*).

—This species usually grows on lawns, in clusters which form an imperfect circle or crescent. The ring increases in size each year as new fungi grow on the outside, while old ones toward the center of the circle perish. This mushroom is small and slender, and rarely exceeds two inches in breadth. The cap and the tough and tubular stem are buff, and the gills, few in number and bulging out in the middle, are of a lighter shade of the same color. There is no ring about the stem. Several crops of the fairy-ring mushroom are produced all through the season, but the most prolific growth appears after the late fall rains. There are other fungi forming rings, some of which are poisonous, and they may not be easily distinguished from the edible species; hence great care is essential in gathering them. The under surface of the cap is brown or blackish in the mature plants of poisonous species.

5. Edible Puffball (*Lycoperdon Cyathiforme*).—

Edible Mushrooms

Edible puffballs grow in open pastures, and on lawns and grassplots, often forming rings. They are spherical in form, generally from one and a half to two inches, oc-



FIG. 38.

THE FAIRY-RING MUSHROOM.

(*Marasmius Oreades*.)

An edible variety.

casionally six inches, in diameter, broad and somewhat flattened at the top, and tapering at the base, white or brown outside. They often present an irregularly checkered appearance, owing to the fact that the white interior shows between the dark raised parts. The

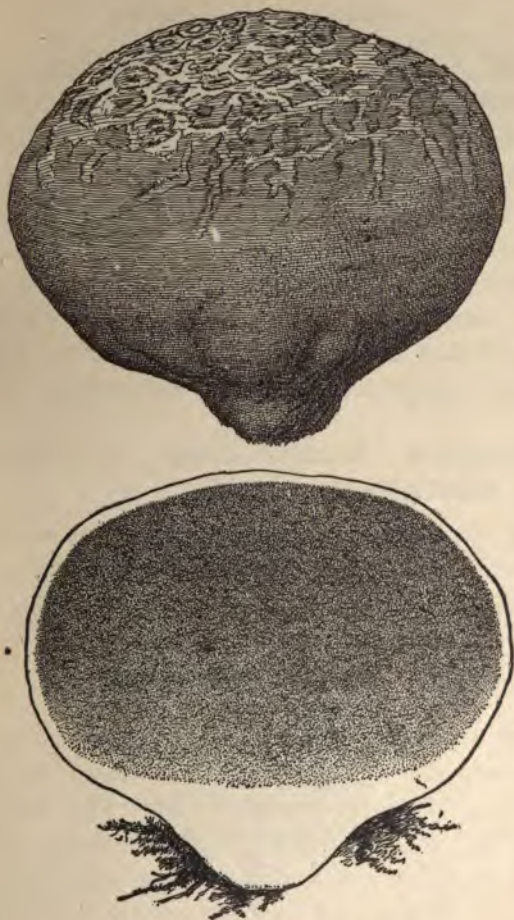


FIG. 39.

THE EDIBLE PUFFBALL.

(*Lycoperdon Cyathiforme.*)

Upper illustration shows entire plant; lower, a section.

Poisonous Mushrooms

interior is at first pure white and of solid consistency, but later becomes softer and yellowish, and then contains an amber-colored juice. After the puffball has matured, the contents change into a brown, dustlike mass, and the top falls off; and it is then inedible. All varieties of puffball with a pure white interior are harmless, if eaten before becoming crumbly and powdery. There is only one species thought to be poisonous, and that has a yellow-brown exterior, while the interior is purple-black, marbled with white.

POISONOUS MUSHROOMS FREQUENTLY MISTAKEN.

To escape eating poisonous mushrooms do not gather the buttons, and be suspicious of those growing in woods and shady spots that show any bright hue, or have a scaly or dotted cap, or white gills.¹ By so doing the following species will be avoided.

Fly Amanita (*Amanita Muscaria*).—Infusions of this mushroom made by boiling in water are used to kill flies. This species grows in woods and shady places, by roadsides, and along the borders of fields, and is much commoner than the *campestris* in some localities. It prefers a poor, gravelly soil, and is found in summer.

The stem is hollow and its gills are white. The

¹ The shaggy mane has white gills, but its other features are characteristic.



FIG. 40.

A POISONOUS FUNGUS.

(*Amanita Muscaria*.)

The Fly Agaric.



FIG. 41.

THE DEADLY AGARIC.

(*Amanita Phalloides*.)

This variety is very poisonous.

Winslow and Ferris

cap is variously colored, white, orange, yellow, or even brilliant red, and dotted over with corklike particles or warty scales which are easily rubbed off. There is a large, drooping collar about the upper part of the hollow, white stem, and the latter is scaly below with a bulbous enlargement at its base.

The young mushrooms, or buttons, do not exhibit the dotted cap, and the bulbous scaly base may be left in the ground when the mushroom is picked. The *fly amanita* is usually larger than the common mushroom.

Death Cup or Deadly Agaric (*Amanita Phalloides*).—This species is more fatal in its effects than the preceding. Its salient feature is a bulbous base surmounted and surrounded by a collar or cup out of which the stem grows. This is often buried beneath the ground, however, so that it may escape notice. The gills and stem are white like the preceding, but the cap is usually not dotted but glossy, white, greenish, or yellow. There is also a broad, noticeable ring about the stem, as in the *fly amanita*. This mushroom frequents moist, shady spots, also along the borders of fields. It occurs singly, and rarely in fields or pastures.



Part III

THE HOUSE AND GROUNDS

BY

GEORGE M. PRICE

Acknowledgment

WE beg to tender grateful acknowledgment to author and publisher for the use of Dr. George M. Price's valuable articles on sanitation. The following extracts are taken from Dr. Price's "Handbook on Sanitation," published by John Wiley & Son, and are covered by copyright.

CHAPTER I

Soil and Sites

Definition.—By the term “soil” we mean the superficial layer of the earth, a result of the geological disintegration of the primitive rock by the action of the elements upon it and of the decay of vegetable and animal life.

Composition.—Soil consists of solids, water, and air.

Solids.—The solid constituents of the soil are inorganic and organic in character.

The inorganic constituents are the various minerals and elements found alone, or in combination, in the earth, such as silica, aluminum, calcium, iron, carbon, sodium, chlorine, potassium, etc.

The characteristics of the soil depend upon its constituents, and upon the predominance of one or the other of its composing elements. The nature of the soil also depends upon its physical properties. When the disintegrated rock consists of quite large particles, the soil is called a *gravel soil*. A *sandy soil* is one in which the particles are very small. *Sandstone* is consolidated sand. *Clay* is soil consisting principally of

Soil and Sites

aluminum silicate; in *chalk*, soft calcium carbonate predominates.

The organic constituents of the soil are the result of vegetable and animal growth and decomposition in the soil.

Ground Water.—Ground water is that continuous body or sheet of water formed by the complete filling and saturation of the soil to a certain level by rain water; it is that stratum of subterranean lakes and rivers, filled up with alluvium, which we reach at a higher or lower level when we dig wells.

The level of the ground water depends upon the underlying strata, and also upon the movements of the subterranean water bed. The relative position of the impermeable underlying strata varies in its distance from the surface soil. In marshy land the ground water is at the surface; in other places it can be reached only by deep borings. The source of the ground water is the rainfall, part of which drains into the porous soil until it reaches an impermeable stratum, where it collects.

The movements of the ground water are in two directions—horizontal and vertical. The horizontal or lateral movement is toward the seas and adjacent water courses, and is determined by hydrostatic laws and topographical relations. The vertical motion of the ground water is to and from the surface, and is due to the amount of rainfall, the pressure of tides, and water courses into which the ground water drains. The

George M. Price

vertical variations of the ground water determine the distance of its surface level from the soil surface, and are divided into a persistently low-water level, about fifteen feet from the surface; a persistently high-water level, about five feet from the surface, and a fluctuating level, sometimes high, sometimes low.

Ground Air.—Except in the hardest granite rocks and in soil completely filled with water the interstices of the soil are filled with a continuation of atmospheric air, the amount depending on the degree of porosity of the soil. The nature of the ground air differs from that of the atmosphere only as it is influenced by its location. The principal constituents of the air—nitrogen, oxygen, and carbonic acid—are also found in the ground air, but in the latter the relative quantities of O and CO₂ are different.

AVERAGE COMPOSITION OF ATMOSPHERIC AIR IN 100 VOLUMES

Nitrogen	79.00 per cent.
Oxygen.....	20.96 “
Carbonic acid	0.04 “

AVERAGE COMPOSITION OF GROUND AIR

Nitrogen	79.00 per cent.
Oxygen	10.35 “
Carbonic acid	9.74 “

Of course, these quantities are not constant, but vary in different soils, and at different depths, times, etc. The greater quantity of CO₂ in ground air is due to the process of oxidation and decomposition taking place

Soil and Sites

in the soil. Ground air also contains a large quantity of bacterial and other organic matter found in the soil.

Ground air is in constant motion, its movements depending upon a great many factors, some among these being the winds and movements of the atmospheric air, the temperature of the soil, the surface temperature, the pressure from the ground water from below, and surface and rain water from above, etc.

Ground Moisture.—The interstices of the soil above the ground-water level are filled with air *only*, when the soil is absolutely dry; but as such a soil is very rare, all soils being more or less damp, soil usually contains a mixture of air and water, or what is called *ground moisture*.

Ground moisture is derived partly from the evaporation of the ground water and its capillary absorption by the surface soil, and partly by the retention of water from rains upon the surface. The power of the soil to absorb and retain moisture varies according to the physical and chemical, as well as the thermal, properties of the soil.

Loose sand may hold about 2 gallons of water per cubic foot; granite takes up about 4 per cent of moisture; chalk about 15 per cent; clay about 20 per cent; sandy loam 33 to 35 per cent; humus¹ about 40 per cent.

Ground Temperature.—The temperature of the soil is due to the direct rays of the sun, the physicochemi-

¹ Humus is vegetable mold; swamp muck; peat; etc.—EDITOR.

George M. Price

cal changes in its interior, and to the internal heat of the earth.

The ground temperature varies according to the annual and diurnal changes of the external temperature; also according to the character of the soil, its color, composition, depth, degree of organic oxidation, ground-water level, and degree of dampness. In hot weather the surface soil is cooler, and the subsurface soil still more so, than the surrounding air; in cold weather the opposite is the case. The contact of the cool soil with the warm surface air on summer evenings is what produces the condensation of air moisture which we call dew.

Bacteria.—Quite a large number of bacteria are found in the soil, especially near the surface, where chemical and organic changes are most active. From 200,000 to 1,000,000 bacteria have been found in 1 c.c. of earth. The ground bacteria are divided into two groups—saprophytic and pathogenic. The saprophytic bacteria are the bacteria of decay, putrefaction, and fermentation. It is to their benevolent action that vegetable and animal *débris* is decomposed, oxidized, and reduced to its elements. To these bacteria the soil owes its self-purifying capacity and the faculty of disintegrating animal and vegetable *débris*.

The pathogenic bacteria are either those formed during the process of organic decay, and which, introduced into the human system, are capable of producing various diseases, or those which become lodged in the

Soil and Sites

soil through the contamination of the latter by ground water and air, and which find in the soil a favorable lodging ground, until forced out of the soil by the movements of the ground water and air.

Contamination of the Soil.—The natural capacity of the soil to decompose and reduce organic matter is sometimes taxed to its utmost by the introduction into the soil of extraneous matters in quantities which the soil is unable to oxidize in a given period. This is called contamination or pollution of soil, and is due: (1) to surface pollution by refuse, garbage, animal and human excreta; (2) to interment of dead bodies of beasts and men; (3) to the introduction of foreign deleterious gases, etc.¹

Pollution by Surface Refuse and Sewage.—This occurs where a large number of people congregate, as in cities, towns, etc., and very seriously contaminates the ground by the surcharge of the surface soil with sewage matter, saturating the ground with it, polluting the ground water from which the drinking water is derived, and increasing the putrefactive changes taking place in the soil. Here the pathogenic bacteria abound, and, by multiplying, exert a very marked influence upon the health by the possible spread of infectious diseases. Sewage pollution of the soils and of the source of water supply is a matter of grave im-

¹ A leak in a gas main, allowing the gas to penetrate the soil, will destroy trees, shrubbery, or any other vegetation with which it comes in contact.—EDITOR.

George M. Price

portance, and is one of the chief factors of high mortality in cities and towns.

Interment of Bodies.—The second cause of soil contamination is also of great importance. Owing to the intense physicochemical and organic changes taking place within the soil, all dead animal matter interred therein is easily disposed of in a certain time, being reduced to the primary constituents, viz., ammonia, nitrous acid, carbonic acid, sulphureted and carbureted hydrogen, etc. But whenever the number of interred bodies is too great, and the products of decomposition are allowed to accumulate to a very great degree, until the capacity of the soil to absorb and oxidize them is overtaxed, the soil, and the air and water therein, are polluted by the noxious poisons produced by the processes of decomposition.

Introduction of Various Foreign Materials and Gases.—In cities and towns various pipes are laid in the ground for conducting certain substances, as illuminating gas, fuel, coal gas, etc.; the pipes at times are defective, allowing leakage therefrom, and permitting the saturation of the soil with poisonous gases which are frequently drawn up by the various currents of ground air into the open air and adjacent dwellings.

Influence of the Soil on Health.—The intimate relations existing between the soil upon which we live and our health, and the marked influence of the soil on the life and well-being of man, have been recognized from time immemorial.

Soil and Sites

The influence of the soil upon health is due to:

- (1) the physical and chemical character of the soil;
- (2) the ground-water level and degree of dampness;
- (3) the organic impurities and contamination of the soil.

The physical and chemical nature of the soil, irrespective of its water, moisture, and air, has been regarded by some authorities as having an effect on the health, growth, and constitution of man. The peculiar disease called cretinism, as well as goitre, has been attributed to a predominance of certain chemicals in the soil.

The ground-water level is of great importance to the well-being of man. Professor Pettenkofer claimed that a persistently low water level (about fifteen feet from the surface) is healthy, the mortality being the lowest in such places; a persistently high ground-water level (about five feet from the surface) is unhealthy; and a fluctuating level, varying from high to low, is the most unhealthy, and is dangerous to life and health. Many authorities have sought to demonstrate the intimate relations between a high water level in the soil and various diseases.

A damp soil, viz., a soil wherein the ground moisture is very great and persistent, has been found inimical to the health of the inhabitants, predisposing them to various diseases by the direct effects of the dampness itself, and by the greater proneness of damp ground to become contaminated with various patho-

George M. Price

genic bacteria and organisms which may be drawn into the dwellings by the movements of the ground air. As a rule, there is very little to hinder the ground air from penetrating the dwellings of man, air being drawn in through cellars by changes in temperature, and by the artificial heating of houses.

The organic impurities and bacteria found in the soil are especially abundant in large cities, and are a cause of the evil influence of soil upon health. The impurities are allowed to drain into the ground, to pollute the ground water and the source of water supply, and to poison the ground air, loading it with bacteria and products of putrefaction, thus contaminating the air and water so necessary to life.

Diseases Due to Soil.—A great many diseases have been thought to be due to the influence of the soil. An ætiological relation had been sought between soil and the following diseases: malaria, paroxysmal fevers, tuberculosis, neuralgias, cholera, yellow fever, bubonic plague, typhoid, dysentery, goiter and cretinism, tetanus, anthrax, malignant Œdema, septicæmia, etc.

Sites.—From what we have already learned about the soil, it is evident that it is a matter of great importance as to where the site for a human habitation is selected, for upon the proper selection of the site depend the health, well-being, and longevity of the inhabitants. The requisite characteristics of a healthy site for dwellings are: a dry, porous, permeable soil; a low and nonfluctuating ground-water level, and a

Soil and Sites

soil retaining very little dampness, free from organic impurities, and the ground water of which is well drained into distant water courses, while its ground air is uncontaminated by pathogenic bacteria. Exposure to sunlight, and free circulation of air, are also requisite.

According to Parkes, the soils in the order of their fitness for building purposes are as follows: (1) primitive rock; (2) gravel, with pervious soil; (3) sandstone; (4) limestone; (5) sandstone, with impervious subsoil; (6) clays and marls; (7) marshy land, and (8) made soils.

It is very seldom, however, that a soil can be secured having all the requisites of a healthy site. In smaller places, as well as in cities, commercial and other reasons frequently compel the acquisition of and building upon a site not fit for the purpose; it then becomes a sanitary problem how to remedy the defects and make the soil suitable for habitation.

Prevention of the Bad Effects of the Soil on Health.—The methods taught by sanitary science to improve a defective soil and to prepare a healthy site are the following:

- (1) Street paving and tree planting.
- (2) Proper construction of houses.
- (3) Subsoil drainage.

Street Paving serves a double sanitary purpose. It prevents street refuse and sewage from penetrating the ground and contaminating the surface soil, and it

George M. Price

acts as a barrier to the free ascension of deleterious ground air.¹

Tree Planting serves as a factor in absorbing the ground moisture and in oxidizing organic impurities.

The Proper Construction of the House has for its purpose the prevention of the entrance of ground moisture and air inside the house by building the foundations and cellar in such a manner as to entirely cut off communication between the ground and the dwelling. This is accomplished by putting under the foundation a solid bed of concrete, and under the foundation walls damp-proof courses.

The following are the methods recommended by the New York City Tenement House Department for the

¹ Town and village paving plans will benefit by knowledge of the recent satisfactory experience of New York City authorities in paving with wood blocks soaked in a preparation of creosote and resin. As compared with the other two general classes of paving, granite blocks, and asphalt, these wood blocks are now considered superior.

The granite blocks are now nearly discarded in New York because of their permeability, expense, and noise, being now used for heavy traffic only.

Asphalt is noiseless and impermeable (thereby serving the "double sanitary purpose" mentioned by Dr. Price).

But the wood possesses these qualities, and has in addition the advantage of inexpensiveness, since it is more durable, not cracking at winter cold and melting under summer heat like the asphalt; and there is but slight cost for repairs, which are easily made by taking out the separate blocks.

These "creo-resinate" wood blocks, recently used on lower Broadway, Park Place, and the congested side streets, are giving admirable results.—EDITOR.

Soil and Sites


water-proofing and damp-proofing of foundation walls and cellars:

Water-proofing and Damp-proofing of Foundation Walls.—"There shall be built in with the foundation walls, at a level of six (6) inches below the finished floor level, a course of damp-proofing consisting of not less than two (2) ply of tarred felt (not less than fifteen (15) pounds weight per one hundred (100) square feet), and one (1) ply of burlap, laid in alternate layers, having the burlap placed between the felt, and all laid in hot, heavy coal-tar pitch, or liquid asphalt, and projecting six (6) inches inside and six (6) inches outside of the walls.


"There shall be constructed on the outside surface of the walls a water-proofing lapping on to the damp-proof course in the foundation walls and extending up to the soil level. This water-proofing shall consist of not less than two (2) ply of tarred felt (of weight specified above), laid in hot, heavy coal-tar pitch, or liquid asphalt, finished with a flow of hot pitch of the same character. This water-proofing to be well stuck to the damp course in the foundation walls. The layers of felt must break joints.

Water-proofing and Damp-proofing of Cellar Floors.—"There shall be laid, above a suitable bed of rough concrete, a course of water-proofing consisting of not less than three (3) ply of tarred felt (not less than fifteen (15) pounds weight per one hundred (100) square feet), laid in hot, heavy coal-tar

George M. Price

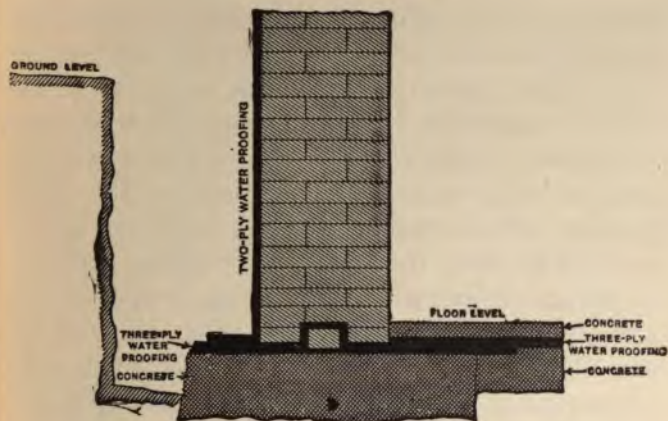

FOR BRICK WALL.

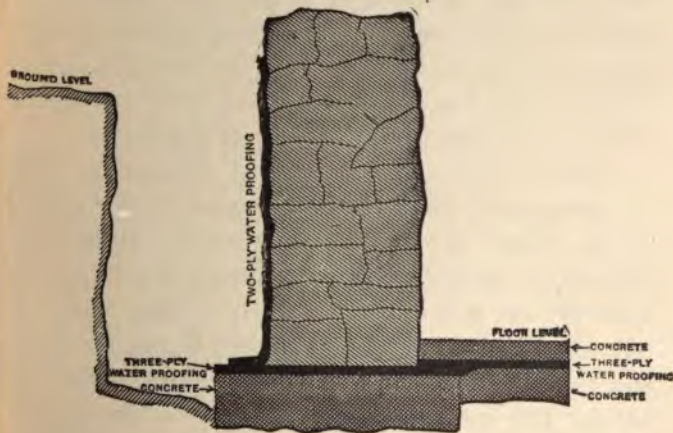

FOR STONE WALL.

FIG. 4.

CONCRETE FOUNDATION AND DAMP-PROOF COURSE.

CHAPTER II

Ventilation

Definition.—The air within an uninhabited room does not differ from that without. If the room is occupied by one or more individuals, however, then the air in the room soon deteriorates, until the impurities therein reach a certain degree incompatible with health. This is due to the fact that with each breath a certain quantity of CO_2 , organic impurities, and aqueous vapor is exhaled; and these products of respiration soon surcharge the air until it is rendered impure and unfit for breathing. In order to render the air pure in such a room, and make life possible, it is necessary to change the air by withdrawing the impure, and substituting pure air from the outside. This is *ventilation*.

Ventilation, therefore, is the maintenance of the air in a confined space in a condition conducive to health; in other words, “ventilation is the replacing of the impure air in a confined space by pure air from the outside.”

Quantity of Air Required.—What do we regard as impure air? What is the index of impurity? How much air is required to render pure an air in a given space, in a given time, for a given number of people?

George M. Price

How often can the change be safely made, and how? These are the problems of ventilation.

An increase in the quantity of CO_2 [carbon dioxide gas], and a proportionate increase of organic impurities, are the results of respiratory vitiation of the air; and it has been agreed to regard the relative quantity of CO_2 as the standard of impurity, its increase serving as an index of the condition of the air. The normal quantity of CO_2 in the air is 0.04 per cent, or 4 volumes in 10,000; and it has been determined that whenever the CO_2 reaches 0.06 per cent, or 6 parts per 10,000, the maximum of air vitiation is reached—a point beyond which the breathing of the air becomes dangerous to health.

We therefore know that an increase of 2 volumes of CO_2 in 10,000 of air constitutes the maximum of admissible impurity; the difference between 0.04 per cent and 0.06 per cent. Now, a healthy average adult at rest exhales in one hour 0.6 cubic foot of CO_2 . Having determined these two factors—the amount of CO_2 exhaled in one hour and the maximum of admissible impurity—we can find by dividing 0.6 by 0.0002 (or 0.02 per cent) the number of cubic feet of air needed for one hour, = 3,000.

Therefore, a room with a space of 3,000 cubic feet, occupied by one average adult at rest, will not reach its maximum of impurity (that is, the air in such a room will not be in need of a change) before one hour has elapsed.

Ventilation

The relative quantity of fresh air needed will differ for adults at work and at rest, for children, women, etc.; it will also differ according to the illuminant employed, whether oil, candle, gas, etc.—an ordinary 3-foot gas-burner requiring 1,800 cubic feet of air in one hour.

It is not necessary, however, to have 3,000 cubic feet of space for each individual in a room, for the air in the latter can safely be changed at least three times within one hour, thus reducing the air space needed to about 1,000 cubic feet. This change of air or ventilation of a room can be accomplished by mechanical means oftener than three times in an hour, but a natural change of more than three times in an hour will ordinarily create too strong a current of air, and may cause draughts and chills dangerous to health.

In determining the cubic space needed, the height of the room as well as the floor space must be taken into consideration. As a rule the height of a room ought to be in proportion to the floor space, and in ordinary rooms should not exceed fourteen feet, as a height beyond that is of very little advantage.¹

Forces of Ventilation.—We now come to the question of the various modes by which change in the air of a room is possible. Ventilation is natural or

¹ In cerebro-spinal meningitis, tuberculosis, and pneumonia, fresh air is curative. Any person, sick or well, cannot have too much fresh air. The windows of sleeping rooms should always be kept open at night.—EDITOR.

George M. Price

artificial according to whether artificial or mechanical devices are or are not used. Natural ventilation is only possible because our buildings and houses, their material and construction, are such that numerous apertures and crevices are left for air to come in; for it is evident that if a room were hermetically airtight, no natural ventilation would be possible.

The properties of air which render both natural and artificial ventilation possible are diffusion, motion, and gravity. These three forces are the natural agents of ventilation.

There is a constant diffusion of gases taking place in the air; this diffusion takes place even through stone and through brick walls. The more porous the material of which the building is constructed, the more readily does diffusion take place. Dampness, plastering, painting, and papering of walls diminish diffusion, however.

The second force in ventilation is the motion of air or winds. This is the most powerful agent of ventilation, for even a slight, imperceptible wind, traveling about two miles an hour, is capable, when the windows and doors of a room are open, of changing the air of a room 528 times in one hour. Air passes also through brick and stone walls. The objections to winds as a sole mode of ventilation are their inconstancy and irregularity. When the wind is very slight its ventilating influence is very small; on the other hand, when the wind is strong it cannot be

Ventilation

utilized as a means of ventilation on account of the air currents being too strong and capable of exerting deleterious effects on health.

The third, the most constant and reliable, and, in fact, principal agent of ventilation is the specific gravity of the air, and the variations in the gravity and consequent pressure which are results of the variations in temperature, humidity, etc. Whenever air is warmer in one place than in another, the warmer air being lighter and the colder air outside being heavier, the latter exerts pressure upon the air in the room, causing the lighter air in the room to escape and be displaced by the heavier air from the outside, thus changing the air in the room. This mode of ventilation is always constant and at work, as the very presence of living beings in the room warms the air therein, thus causing a difference from the outside air and effecting change of air from the outside to the inside of the room.

Methods of Ventilation.—The application of these principles of ventilation is said to be accomplished in a natural or an artificial way, according as mechanical means to utilize the forces and properties of air are used or not. But in reality natural ventilation can hardly be said to exist, since dwellings are so constructed as to guard against exposure and changes of temperature, and are usually equipped with numerous appliances for promoting change of air. Windows, doors, fireplaces, chimneys, shafts, courts, etc.

George M. Price

are all artificial methods of securing ventilation, although we usually regard them as means of natural ventilation.

Natural Ventilation.—The means employed for applying the properties of diffusion are the materials of construction. A porous material being favorable for diffusion, some such material is placed in several places within the wall, thus favoring change of air. Imperfect carpenter work is also a help, as the cracks and openings left are favorable for the escape and entrance of air.

Wind, or the motion of air, is utilized either directly, through windows, doors, and other openings; or indirectly, by producing a partial vacuum in passing over chimneys and shafts, causing suction of the air in them, and the consequent withdrawal of the air from the rooms.

The opening of windows and doors is possible only in warm weather; and as ventilation becomes a problem only in temperate and cold weather, the opening of windows and doors cannot very well be utilized without causing colds, etc. Various methods have therefore been proposed for using windows for the purposes of ventilation without producing forcible currents of air.

The part of the window best fitted for the introduction of air is the space between the two sashes, where they meet. The ingress of air is made possible whenever the lower sash is raised or the upper

Ventilation

one is lowered. In order to prevent cold air from without entering through the openings thus made, it has been proposed by Hinkes Bird to fit a block of wood

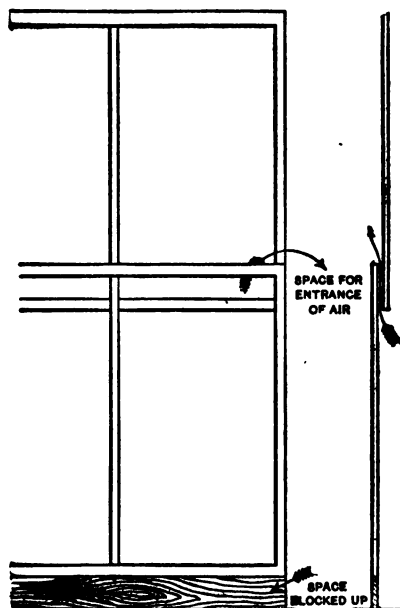


FIG. 5.

HINKES BIRD WINDOW. (TAYLOR.)

in the lower opening; or else, as in Dr. Keen's arrangement, a piece of paper or cloth is used to cover the space left by the lifting or lowering of either or both sashes. Louvers or inclined panes or parts of these may also be used. Parts or entire window panes

George M. Price

are sometimes wholly removed and replaced by tubes or perforated pieces of zinc, so that air may come in through the apertures. Again, apertures for inlets and outlets may be made directly in the walls of the rooms. These openings are filled in with porous bricks or with specially made bricks (like Ellison's conical bricks), or boxes provided with several openings. A very useful apparatus of this kind is the so-called Sherringham valve, which consists of an iron box fitted into the wall, the front of the box facing the room having an iron valve hinged along its lower edge,

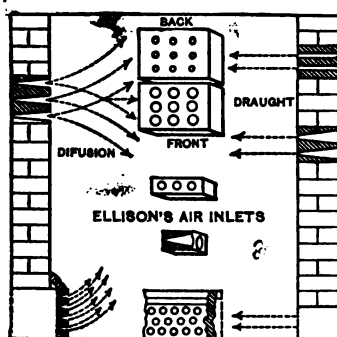



FIG. 6.

ELLISON'S AIR INLETS. (KNIGHT.)

and so constructed that it can be opened or be closed at will to let a current of air pass upward. Another very good apparatus of this kind is the Tobin ventilator, consisting of horizontal tubes let through the walls, the outer ends open to the air, but the inner

Ventilation

ends projecting into the room, where they are joined by vertical tubes carried up five feet or more from

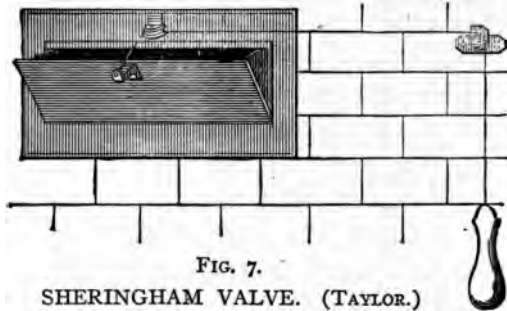

the floor, thus allowing the outside air to enter upwardly into the room. This plan is also adapted for

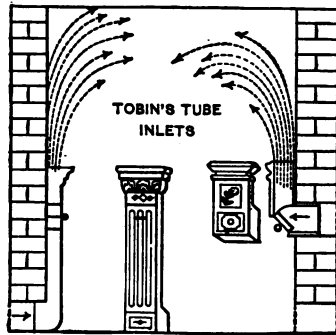


FIG. 8.
THE TOBIN VENTILATOR. (KNIGHT.)

filtering and cleaning the incoming air by placing cloth or other material across the lumen of the hori-

George M. Price

zontal tubes to intercept dust, etc. McKinnell's ventilator is also a useful method of ventilation, especially of underground rooms.

To assist the action of winds over the tops of shafts and chimneys, various cowls have been devised.

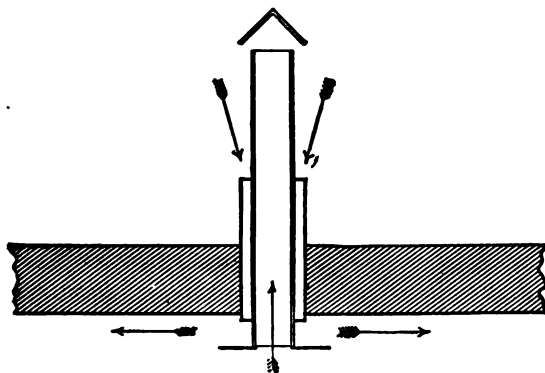


FIG. 9.

McKINNELL'S VENTILATOR. (TAYLOR.)

These cowls are arranged so as to help aspirate the air from the tubes and chimneys, and prevent a down draught.

The same inlets and outlets which are made to utilize winds may also be used for the ventilation effected by the motion of air due to difference in the specific gravity of outside and inside air. Any artificial warming of the air in the room, whether by illuminants or by the various methods of heating rooms, will aid in ventilating it, the chimneys acting

Ventilation

as powerful means of removal for the warmer air. Various methods have also been proposed for utilizing the chimney, even when no stoves, etc., are connected with it, by placing a gaslight within the chimney to cause an up draught and consequent aspiration of the air of the room through it.

The question of the number, relative size, and position of the inlets and outlets is a very important one,

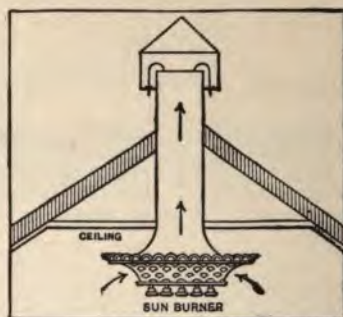


FIG. 10.

VENTILATING THROUGH CHIMNEY. (KNIGHT.)

but we can here give only an epitome of the requirements.

The inlet and outlet openings should be about twenty-four inches square per head. Inlet opening should be short, easily cleaned, sufficient in number to insure a proper distribution of air; should be protected from heat, provided with valves so as to regulate the inflow of air, and, if possible, should be placed

George M. Price

so as to allow the air passing through them to be warmed before entering the room.¹ Outlet openings should be placed near the ceiling, should be straight and smooth, and, if possible, should be heated so as to make the air therein warmer, thus preventing a

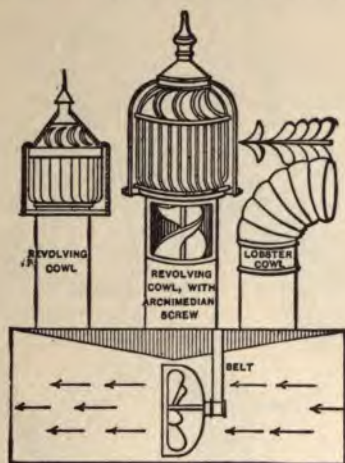


FIG. II.
COWL VENTILATOR. (KNIGHT.)

down draught, as is frequently the case when the outlets become inlets.

Artificial Ventilation.—Artificial ventilation is accomplished either by aspirating the air from the building, known as the vacuum or extraction method, or by

¹ These outlets may be placed close to a chimney or heating pipes. Warm air rises and thus will be forced out, allowing cool fresh air to enter at the inlets.—EDITOR.

Ventilation

forcing into the building air from without; this is known as the plenum or propulsion method.

The extraction of the air in a building is done by means of heat, by warming the air in chimneys or

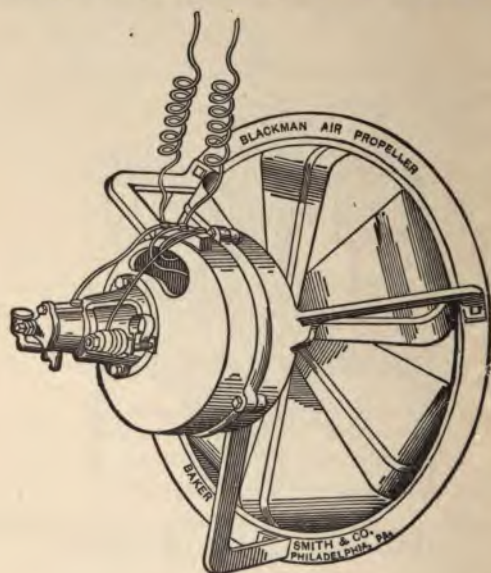


FIG. 12.

AN AIR PROPELLER.

special tubes, or by mechanical means with screws or fans run by steam or electricity; these screws or fans revolve and aspirate the air of the rooms, and thus cause pure air to enter.

The propelling method of ventilation is carried out

George M. Price

by mechanical means only, air being forced in from the outside by fans, screws, bellows, etc.

Artificial ventilation is applicable only where a large volume of air is needed, and for large spaces, such as theaters, churches, lecture rooms, etc. For the ordinary building the expense for mechanical contrivances is too high.

On the whole, ventilation without complex and cumbersome mechanisms is to be preferred.¹

¹ The ordinary dwelling house needs no artificial methods of ventilation. The opening and closing of windows will supply all necessary regulation in this regard. The temperature of living rooms should be kept, in general, at 70° F. Almost all rooms for the sick are unfortunately overheated. Cool, fresh air is one of the most potent means of curing disease. Overheated rooms are a menace to health.—EDITOR.

CHAPTER III

Warming

Ventilation and Heating.—The subject of the heating of our rooms and houses is very closely allied to that of ventilation, not only because both are a special necessity at the same time of the year, but also because we cannot heat a room without at the same time having to ventilate it by providing an egress for the products of combustion and introducing fresh air to replace the vitiated.

Need of Heating.—In a large part of the country, and during the greater period of the year, some mode of artificial heating of rooms is absolutely necessary for our comfort and health. The temperature of the body is 98° to 99° F., and there is a constant radiation of heat due to the cooling of the body surface. If the external temperature is very much below that of the body, and if the low temperature is prolonged, the radiation of heat from the body is too rapid, and colds, pneumonia, etc., result. The temperature essential for the individual varies according to age, constitution, health, environment, occupation, etc. A child, a sick person, or one at rest requires a relatively higher tem-

George M. Price

perature than a healthy adult at work. The mean temperature of a room most conducive to the health of the average person is from 65° to 75° F.

The Three Methods of Heating.—The heating of a room can be accomplished either *directly* by the rays of the sun or processes of combustion. We thus receive *radiant* heat, exemplified by that of open fires and grates.

Or, the heating of places can be accomplished by the heat of combustion being conducted through certain materials, like brick walls, tile, stone, and also iron; this is *conductive* heat, as afforded by stoves, etc.

Or, the heat is *conveyed* by means of air, water, or steam from one place to another, as in the hot-water, hot-air, and steam systems of heating; this we call *convected* heat.

There is no strict line of demarcation differentiating the three methods of heating, as it is possible that a radiant heat may at the same time be conductive as well as convective—as is the case in the Galton fireplace, etc.

Materials of Combustion.—The materials of combustion are air, wood, coal, oil, and gas. Air is indispensable, for, without oxygen, there can be no combustion. Wood is used in many places, but is too bulky and expensive. Oil is rarely used as a material of combustion, its principal use being for illumination. Coal is the best and cheapest material for combustion.

Warming

The chief objection against its use is the production of smoke, soot, and of various gases, as CO, CO₂, etc. Gas is a very good, in fact, the best material for heating, especially if, when used, it is connected with chimneys; otherwise, it is objectionable, as it burns up too much air, vitiates the atmosphere, and the products of combustion are deleterious; it is also quite expensive. The ideal means of heating is electricity.

Chimneys.—All materials used for combustion yield products more or less injurious to health. Every system of artificially heating houses must therefore have not only means of introducing fresh air to aid in the burning up of the materials, but also an outlet for the vitiated, warmed air, partly charged with the products of combustion. These outlets are provided by chimneys. Chimneys are hollow tubes or shafts built of brick and lined with earthen pipes or other material inside. These tubes begin at the lowest fire-place or connection, and are carried up several feet above the roof. The thickness of a chimney is from four to nine inches; the shape square, rectangular, or, preferably, circular. The diameter of the chimney depends upon the size of the house, the number of fire connections, etc. It should be neither too small nor too large. Square chimneys should be twelve to sixteen inches square; circular ones from six to eight inches in diameter for each fire connection. The chimney consists of a *shaft*, or vertical tube, and *cowls* placed over chimneys on the roof to prevent down

George M. Price

draughts and the falling in of foreign bodies. That part of the chimney opening into the fireplace is called the *throat*.

Smoky Chimneys.—A very frequent cause of complaint in a great many houses is the so-called “smoky chimney”; this is the case when smoke and coal gas escape from the chimney and enter the living rooms. The principal causes of this nuisance are:

(1) A too wide or too narrow diameter of the shafts. A shaft which is too narrow does not let all the smoke escape; one which is too wide lets the smoke go up only in a part of its diameter, and when the smoke meets a countercurrent of cold air it is liable to be forced back into the rooms.

(2) The throat of the chimney may be too wide, and will hold cold air, preventing the warming of the air in the chimneys and the consequent up draught.

(3) The cowls may be too low or too tight, preventing the escape of the smoke.

(4) The brickwork of the chimney may be loose, badly constructed, or broken into by nails, etc., thus allowing smoke to escape therefrom.

(5) The supply of air may be deficient, as when all doors and windows are tightly closed.

(6) The chimney may be obstructed by soot or some foreign material.

(7) The wind above the house may be so strong that its pressure will cause the smoke from the chimney to be forced back.

Warming

(8) If two chimneys rise together from the same house, and one is shorter than the other, the draught of the longer chimney may cause an inversion of the current of air in the lower chimney.

(9) Wet fuel when used will cause smoke by its incomplete combustion.

(10) A chimney without a fire may suck down the smoke from a neighboring chimney; or, if two fireplaces in different rooms are connected with the same chimney, the smoke from one room may be drawn into the other.

Methods of Heating. Open Fireplaces and Grates.

—Open fireplaces and fires in grates connected with chimneys, and using coal, wood, or gas, are very comfortable; nevertheless there are weighty objections to them. Firstly, but a very small part of the heat of the material burning is utilized, only about twelve per cent being radiated into the room, the rest going up the chimney. Secondly, the heat of grates and fireplaces is only local, being near the fires and warming only that part of the person exposed to it, leaving the other parts of the room and person cold. Thirdly, the burning of open fires necessitates a great supply of air, and causes powerful draughts.

The open fireplace can, however, be greatly improved by surrounding its back and sides by an air space, in which air can be warmed and conveyed into the upper part of the room; and if a special air inlet is provided for supplying the fire with fresh air to be

George M. Price

ed, we get a very valuable means of heating. The principles are embodied in the Franklin and Galton grates. A great many other grates have been tested, and put on the market, but the principal

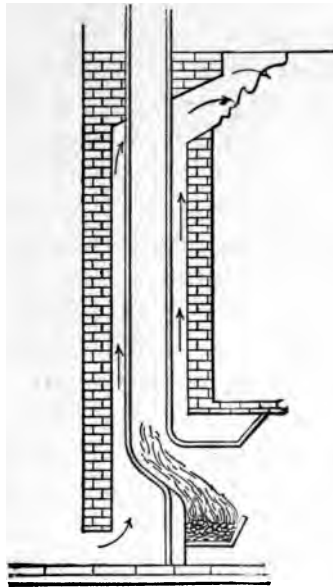


FIG. 13.

A GALTON GRATE. (TRACY.)

ion to them is their complexity and expense, making their use a luxury not attainable by the masses. **Stoves.**—Stoves are closed receptacles in which fuel is burned, and the heat produced is radiated toward persons, etc., near them, and also conducted,

Warming

through the iron or other materials of which the stoves are made, to surrounding objects. In stoves seventy-five per cent of the fuel burned is utilized. They are made of brick, tile, and cast or wrought iron.

Brick stoves, and stoves made of tile, are extensively used in some European countries, as Russia, Germany, Sweden, etc.; they are made of slow-conducting material, and give a very equable, efficient, and cheap heat, although their ventilating power is very small.

Iron is used very extensively because it is a very good conductor of heat, and can be made into very convenient forms. Iron stoves, however, often become superheated, dry up, and sometimes burn the air around them, and produce certain deleterious gases during combustion. When the fire is confined in a clay fire box, and the stove is not overheated, a good supply of fresh air being provided and a vessel of water placed on the stove to reduce the dryness of the air, iron stoves are quite efficient.

.Hot-air Warming.—In small houses the warming of the various rooms and halls can be accomplished by placing the stove or furnace in the cellar, heating a large quantity of air and conveying it through proper tubes to the rooms and places to be warmed. The points to be observed in a proper and efficient hot-air heating system are the following:

(1) The furnace must be of a proper size in proportion to the area of space to be warmed. (2) The

George M. Price

joints and parts of the furnace must be gas-tight. (3)
The furnace should be placed on the cold side of the

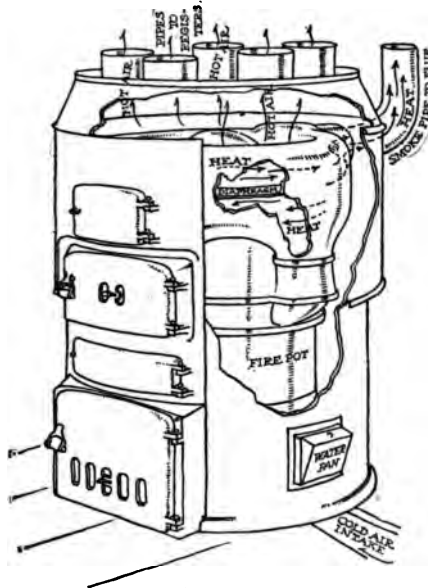


FIG. 14.

A HOT-AIR FURNACE.

The cold air from outside comes to the COLD-AIR INTAKE through the cold-air duct, enters the furnace from beneath, and is heated by passing around the FIRE POT and the annular combustion chamber above. It then goes through pipes to the various registers throughout the house. The coal is burnt in the fire pot, the gases are consumed in the combustion chamber above, while the heat eventually passes into the SMOKE FLUE. The WATER PAN supplies moisture to the air.

house, and provision made to prevent cellar air from being drawn up into the cold-air box of the furnace.
(4) The air for the supply of the furnace must be

Warming

gotten from outside, and the source must be pure, above the ground level, and free from contamination of any kind.¹ (5) The cold-air box and ducts must be clean, protected against the entrance of vermin, etc., and easily cleaned. (6) The air should not be overheated. (7) The hot-air flues or tubes must be short, direct, circular, and covered with asbestos or some other non-conducting material.

Hot-water System.—The principles of hot-water heating are very simple. Given a circuit of pipes filled with water, on heating the lower part of the circuit the water, becoming warmer, will rise, circulate, and heat the pipes in which it is contained, thus warming the air in contact with the pipes. The lower part of the circuit of pipe begins in the furnace or heater, and the other parts of the circuit are conducted through the various rooms and halls throughout the house to the uppermost story. The pipes need not be straight all through; hence, to secure a larger area for heating they are convoluted within the furnace, and also in the rooms, where the convoluted pipes are called *radiators*. The water may be warmed by the low- or high-pressure system; in the latter, pipes of small diameter may be employed; while in the former, pipes of a large diameter will be required. The character, etc., of the boilers, furnace, pipes, etc., cannot be gone into here.

¹ Great care should be taken that the air box is not placed in contaminated soil or where it may become filled with stagnant or polluted water.—EDITOR.

George M. Price

Steam-heating System.—The principle of steam heating does not differ from that of the hot-water system. Here the pressure is greater and steam is employed instead of water. The steam gives a greater degree of heat, but the pipes must be stronger and able to withstand the pressure. There are also combinations of steam and hot-water heating. For large houses either steam or hot-water heating is the best means of warming, and, if properly constructed and cared for, quite healthy.¹

¹ See chapter XI for practical notes on cost of installation of these three conveyed systems—hot-air, hot-water, and steam.—EDITOR.

CHAPTER IV

Disposal of Sewage

Waste Products.—There is a large amount of waste products in human and social economy. The products of combustion, such as ashes, cinders, etc.; the products of street sweepings and waste from houses, as dust, rubbish, paper, etc.; the waste from various trades; the waste from kitchens, e. g., scraps of food, etc.; the waste water from the cleansing processes of individuals, domestic animals, clothing, etc.; and, finally, the excreta—urine and fæces—of man and animals; all these are waste products that cannot be left undisposed of, more especially in cities, and wherever a large number of people congregate. All waste products are classified into three distinct groups: (1) refuse, (2) garbage, and (3) sewage.

The amount of *refuse* and *garbage* in cities is quite considerable; in Manhattan, alone, the dry refuse amounts to 1,000,000 tons a year, and that of garbage to 175,000 tons per year. A large percentage of the dry refuse and garbage is valuable from a commercial standpoint, and could be utilized, with proper facilities for collection and separation. The disposal of refuse and garbage has not as yet been satisfac-

George M. Price

torily dealt with. The modes of waste disposal in the United States are: (1) dumping into the sea; (2) filling in made land, or plowing into lands; (3) cremation and (4) reduction by various processes, and the products utilized.

Sewage.—By sewage we mean the waste and effete human matter and excreta—the urine and fæces of human beings and the urine of domestic animals (the fæces of horses, etc., has great commercial value, and is usually collected separately and disposed of for fertilizing purposes).

The amount of excreta per person has been estimated (Frankland) as 3 ounces of solid and 40 ounces of fluid per day, or about 30 tons of solid and 100,000 gallons of fluid for each 1,000 persons per year.

In sparsely populated districts the removal and ultimate disposal of sewage presents no difficulties; it is returned to the soil, which, as we know, is capable of purifying, disintegrating, and assimilating quite a large amount of organic matter. But when the number of inhabitants to the square mile increases, and the population becomes as dense as it is in some towns and cities, the disposal of the human waste products becomes a question of vast importance, and the proper, as well as the immediate and final, disposal of sewage becomes a serious sanitary problem.

It is evident that sewage must be removed in a

Disposal of Sewage

thorough manner, otherwise it would endanger the lives and health of the people.

The dangers of sewage to health are:

(1) From its offensive odors, which, while not always directly dangerous to health, often produce headaches, nausea, etc.

(2) The organic matter contained in sewage decomposes and eliminates gases and other products of decomposition.

(3) Sewage may contain a large number of pathogenic bacteria (typhoid, dysentery, cholera, etc.).

(4) Contamination of the soil, ground water, and air by percolation of sewage.

The problem of sewage disposal is twofold: (1) immediate, viz., the need of not allowing sewage to remain too long on the premises, and its immediate removal beyond the limits of the city; and (2) the final disposition of the sewage, after its removal from the cities, etc.

Modes of Ultimate Disposal of Sewage.—The chief constituents of sewage are organic matter, mineral salts, nitrogenous substances, potash, and phosphoric acid. Fresh-mixed excrementitious matter has an acid reaction, but within twelve to twenty hours it becomes alkaline, because of the free ammonia formed in it. Sewage rapidly decomposes, evolving organic and fetid matters, ammonium sulphide, sulphureted and carbureted hydrogen, etc., besides teeming with

George M. Price

animal and bacterial life. A great many of the substances contained in sewage are valuable as fertilizers of soil.

The systems of final disposal of sewage are as follows:

- (1) Discharge into seas, lakes, and rivers.
- (2) Cremation.
- (3) Physical and chemical precipitation.
- (4) Intermittent filtration.
- (5) Land irrigation.
- (6) "Bacterial" methods.

Discharge into Waters.—The easiest way to dispose of sewage is to let it flow into the sea or other running water course. The objections to sewage discharging into the rivers and lakes near cities, and especially such lakes and rivers as supply water to the municipalities, are obvious. But as water can purify a great amount of sewage, this method is still in vogue in certain places, although it is to be hoped that it will in the near future be superseded by more proper methods. The objection against discharging into seas is the operation of the tides, which cause a backflow and overflow of sewage from the pipes. This backflow is remedied by the following methods: (1) providing tidal flap valves, permitting the outflow of sewage, but preventing the inflow of sea water; (2) discharging the sewage intermittently, only during low tide; and (3) providing a constant outflow by means of steam-power pressure.

Disposal of Sewage

Cremation.—Another method of getting rid of the sewage without attempting to utilize it is by cremation. The liquid portion of the sewage is allowed to drain and discharge into water courses, and the more or less solid residues are collected and cremated in suitable crematories.

Precipitation.—This method consists in separating the solid matters from the sewage by precipitation by physical or chemical processes, the liquid being allowed to drain into rivers and other waters, and the precipitated solids utilized for certain purposes. The precipitation is done either by straining the sewage, collecting it into tanks, and letting it subside, when the liquid is drawn off and the solids remain at the bottom of the tanks, a rather unsatisfactory method; or, by chemical processes, precipitating the sewage by chemical means, and utilizing the products of such precipitation. The chemical agents by which precipitation is accomplished are many and various; among them are lime, alum, iron perchloride, phosphates, etc.

Intermittent Filtration.—Sewage may be purified mechanically and chemically by method of intermittent filtration by passing it through filter beds of gravel, sand, coke, cinders, or any such materials. Intermittent filtration has passed beyond the experimental stage and has been adopted already by a number of cities where such a method of sewage disposal seems to answer all purposes.

George M. Price

Land Irrigation.—In this method the organic and other useful portions of sewage are utilized for irrigating land, to improve garden and other vegetable growths by feeding the plants with the organic products of animal excretion. Flat land, with a gentle slope, is best suited for irrigation. The quantity of sewage disposed of will depend on the character of the soil, its porosity, the time of the year, temperature, intermittency of irrigation, etc. As a rule, one acre of land is sufficient to dispose of the sewage of 100 to 150 people.

Bacterial Methods.—The other biological methods, or the so-called “bacterial” sewage treatment, are but modifications of the filtration and irrigation methods of sewage disposal. Properly speaking the bacterial purification of sewage is the scientific application of the knowledge gained by the study of bacterial life and its action upon sewage.

In intermittent filtration the sewage is passed through filter beds of sands, etc., upon which filter beds the whole burden of the purification of the sewage rests. In the bacterial methods the work of purification is divided between the septic tanks where the sewage is first let into and where it undergoes the action of the anaërobic bacteria, and from these septic tanks the sewage is run to the contact beds of coke and cinders to further undergo the action of the aërobic bacteria, after the action of which the nitrified sewage is in a proper form to be utilized for

Disposal of Sewage

fertilization of land, etc. The septic tanks are but a modification of the common cesspool, and are constructed of masonry, brick, and concrete.

There are a number of special applications of the bacterial methods of sewage treatment, into which we cannot go here.

Sewage Disposal in the United States.—According to its location, position, etc., each city in the United States has its own method of final disposition of sewage. Either one or the other, or a combination of two of the above methods, is used.

The following cities discharge their sewage into the sea: Portland, Salem, Lynn, Gloucester, Boston, Providence, New York, Baltimore, Charleston, and Savannah.

The following cities discharge their sewage into rivers and lakes: Philadelphia, Cincinnati, St. Louis, Albany, Minneapolis, St. Paul, Washington, Buffalo, Detroit, Richmond, Chicago, Milwaukee, and Cleveland.

“Worcester uses chemical precipitation. In Atlanta a part of the soil is cremated, but the rest is deposited in pits 8 × 10 feet, and 5 feet deep. It is then thoroughly mixed with dry ashes from the crematory, and afterwards covered with either grain or grass. In Salt Lake City and in Woonsocket it is disposed of in the same way. In Indianapolis it is composted with marl and sawdust, and after some months used as a fertilizer. A portion of the sew-

George M. Price

age is cremated in Atlanta, Camden, Dayton, Evansville, Findlay, Ohio; Jacksonville, McKeesport, Pa.; Muncie, and New Brighton. In Atlanta, in 1898, there were cremated 2,362 loads of sewage. In Dayton, during 30 days, there were cremated 1,900 barrels of 300 pounds each." (*Chapin, Mun. San. in U. S.*)

The Immediate Disposal of Sewage.—The final disposition of sewage is only one part of the problem of sewage disposal; the other part is how to remove it from the house into the street, and from the street into the places from which it is finally disposed.

The immediate disposal of sewage is accomplished by two methods—the so-called *dry*, and the *water-carriage* methods. By the *dry method* we mean the removal of sewage without the aid of water, simply collecting the dry and liquid portions of excreta, storing it for some time, and then removing it for final disposal. By the *water-carriage method* is understood the system by which sewage, solid and liquid, is flushed out by means of water, through pipes or conduits called sewers, from the houses through the streets to the final destination.

The Dry Methods.—The dry or conservancy method of sewage disposal is a primitive method used by all ancient peoples, in China at the present time, and in all villages and sparsely populated districts; it has for its basic principle the return to mother earth of all excreta, to be used and worked over in its natural

Disposal of Sewage

laboratory. The excreta are simply left in the ground to undergo in the soil the various organic changes, the difference in methods being only as regards the vessels of collection and storage.

The methods are:

- (1) Cesspool and privy vault.
- (2) Pail system.
- (3) Pneumatic system.

The Privy Vault is the general mode of sewage disposal in villages, some towns, and even in some large cities, wherever sewers are not provided. In its primitive and unfortunately common form, the privy vault is nothing but a hole dug in the ground near or at some distance from the house; the hole is but a few feet deep, with a plank or rough seat over it, and an improvised shed over all. The privy is filled with the excreta; the liquids drain into the adjacent ground, which becomes saturated, and contaminates the nearest wells and water courses. The solid portion is left to accumulate until the hole is filled or the stench becomes unbearable, when the hole is either covered up and forgotten, or the excreta are removed and the hole used over again. This is the common privy as we so often find it near the cottages and mansions of our rural populace, and even in towns. A better and improved form of privy is that built in the ground, and made water-tight by being constructed of bricks set in cement, the privy being placed at a distance from the house, the shed

George M. Price

over it ventilated, and the contents of the privy removed regularly and at stated intervals, before they become a nuisance. At its best, however, the privy vault is an abomination, as it can scarcely be so well constructed as not to contaminate the surrounding soil, or so often cleaned as to prevent decomposition and the escape of poisonous gases.

The Pail System is an economic, simple, and, on the whole, very efficient method of removing fresh excreta. The excreta are passed directly into stone or metal water- and gas-tight pails, which, after filling, are hermetically covered and removed to the places for final disposal. This system is in use in Rochedale, Manchester, Glasgow, and other places in England.

The pails may also be filled with dried earth, ashes, etc., which are mixed with the excreta and convert it into a substance fit for fertilization.

The Pneumatic System is a rather complicated mechanical method invented by Captain Lieurneur, and is used extensively in some places. In this system the excreta are passed to certain pipes and receptacles, and from there aspirated by means of air exhausts.

The Water-carriage System.—We now come to the modern mode of using water to carry and flush all sewage material. This method is being adopted throughout the civilized world. For it is claimed a reduction of the mortality rate issues wherever it is

Disposal of Sewage

introduced. The water-carriage system presupposes the construction and existence of pipes from the house to and through the street to the place of final disposition. The pipes running from the house to the streets are called house sewers; and when in the streets, are called street sewers.

The Separate and Combined Systems.—Whenever the water-carriage system is used, it is either intended to carry only sewage proper, viz., solid and liquid excreta flushed by water, or rain water and other waste water from the household in addition. The water-carriage system is accordingly divided into two systems: *the combined*, by which all sewage and all waste and rain water are carried through the sewers, and the *separate* system, in which two groups of pipes are used—the sewers proper to carry sewage only, and the other pipes to dispose of rain water and other uncontaminated waste water. Each system has its advocates, its advantages and disadvantages. The advantages claimed for the separate system are as follows:

- (1) Sewers may be of small diameter, not more than six inches.
- (2) Constant, efficient flow and flushing of sewage.
- (3) The sewage gained is richer in fertilizing matter.
- (4) The sewers never overflow, as is frequently the case in the combined system.

George M. Price

(5) The sewers being small, no decomposition takes place therein.

(6) Sewers of small diameter need no special means of ventilation, or main traps on house drains, and can be ventilated through the house pipes.

On the other hand, the disadvantages of the separate system are:

(1) The need of two systems of sewers, for sewage and for rain water, and the expense attached thereto.

(2) The sewers used for sewage proper require some system for periodically flushing them, which, in the combined system, is done by the occasional rains.

(3) Small sewers cannot be as well cleaned or gotten at as larger ones.

The separate system has been used in Memphis and in Keene, N. H., for a number of years with complete satisfaction. Most cities, however, use the combined system.

CHAPTER V

Sewers

Definitions.—A sewer is a conduit or pipe intended for the passage of sewage, waste, and rain water.

A *House Sewer* is the branch sewer extending from a point two feet outside of the outer wall of the building to its connection with the street sewer, etc.

Materials.—The materials from which sewers are manufactured is earthenware “vitrified pipes.”

Iron is used only for pipes of small diameter; and as most of the sewers are of greater diameter than six inches, they are made of other material than iron.

Cement and brick sewers are frequently used, and, when properly constructed, are efficient, although the inner surface of such pipes is rough, which causes adherence of sewage matter.

The most common material of which sewers are manufactured is earthenware, “vitrified pipes.”

“Vitrified pipes” are manufactured from some kind of clay, and are salt-glazed inside. Good vitrified pipe must be circular and true in section, of a uniform thickness, perfectly straight, and free from cracks or other defects; they must be hard, tough,

George M. Price

not porous, and have a highly smooth surface. The thicknesses of vitrified pipes are as follows:

4 inches diameter.....	$\frac{1}{2}$ inch thick
6 " "	$1\frac{1}{8}$ " "
8 " "	$\frac{3}{4}$ " "
12 " "	1 " "

The pipes are made in two- and three-foot lengths, with spigot, and socket ends." (Gerhardt.)

Sewer pipes are laid in trenches at least three feet deep, to insure against the action of frosts.

Construction.—The level of the trenches in which sewers are laid should be accurate, and a hard bed must be secured, or prepared, for the pipes to lie on. If the ground is sandy and soft, a solid bed of concrete should be laid, and the places where the joints are should be hollowed out, and the latter embedded in cement.

Joints.—The joints of the various lengths must be gas-tight, and are made as follows: into the hub (the enlargement on one end of the pipe) the spigot end of the next length is inserted, and in the space left between the two a small piece, or gasket, of oakum is rammed in; the remaining space is filled in with a mixture of the best Portland cement and clean, sharp sand. The office of the oakum is to prevent the cement from getting on the inside of the pipe. The joint is then wiped around with additional cement.

Sewers

Fall.—In order that there should be a steady and certain flow of the contents of the sewer, the size and fall of the latter must be suitable; that is, the pipes must be laid with a steady, gradual inclination

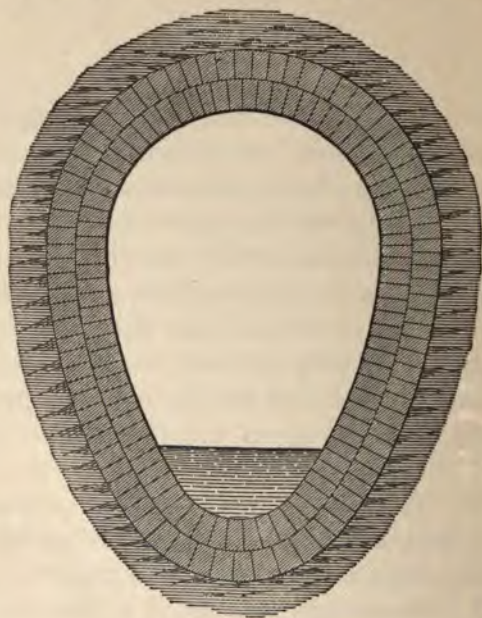


FIG. 15.
A BRICK SEWER.

or fall toward the exit. This fall must be even, without sudden changes, and not too great or too small.

The following has been determined to be about the right fall for the sizes stated:

George M. Price

4-inch pipe.....	1 foot in	40 feet
6 " "	1 " "	60 "
9 " "	1 " "	90 "
12 " "	1 " "	120 "

Flow.—The velocity of the flow in sewers depends on the volume of their contents, the size of the pipes, and the fall. The velocity should not be less than 120 feet in a minute, or the sewer will not be self-cleansing.

Size.—In order for the sewer to be self-cleansing, its size must be proportional to the work to be accomplished, so that it may be fully and thoroughly flushed and not permit stagnation and consequent decomposition of its contents. If the sewer be too small, it will not be adequate for its purpose, and will overflow, back up, etc.; if too large, the velocity of the flow will be too low, and stagnation will result. In the separate system, where there is a separate provision for rain water, the size of the sewer ought not to exceed six inches in diameter. In the combined system, however, when arrangements must be made for the disposal of large volumes of storm water, the size of the sewer must be larger, thus making it less self-cleansing.

Connections.—The connections of the branch sewers and the house sewers with the main sewer must be carefully made, so that there shall be no impediment to the flow of the contents, either of the branches or of the main pipe. The connections must

Sewers

be made gas-tight; not at right angles or by T branches, but by bends, curves, and Y branches, in the direction of the current of the main pipe, and not opposite other branch pipes; and the junction of the branch pipes and the main pipe must not be made at the crown or at the bottom of the sewer, but just within the water line.

Tide Valves.—Where sewers discharge their contents into the sea, the tide may exert pressure upon the contents of the sewer and cause “backing up,” blocking up the sewer, bursting open trap covers, and overflowing into streets and houses. To prevent this, there are constructed at the mouth of the street sewers, at the outlets to the sea, proper valves or tide flaps, so constructed as to permit the contents of the sewers to flow out, yet prevent sea water from backing up by immediately closing upon the slightest pressure from outside.

House Sewers.—Where the ground is “made,” or filled in, the house sewer must be made of cast iron, with the joints properly calked with lead. Where the soil consists of a natural bed of loam, sand, or rock, the house sewer may be of hard, salt-glazed, and cylindrical earthenware pipe, laid in a smooth bottom, free from projections of rock, and with the soil well rammed to prevent any settling of the pipe. Each section must be wetted before applying the cement, and the space between each hub and the small end of the next section must be completely and uniformly

George M. Price

filled with the best hydraulic cement. Care must be taken to prevent any cement being forced into the pipe to form an obstruction. No tempered-up cement should be used. A straight edge must be used inside the pipe, and the different sections must be laid in perfect line on the bottom and sides.

Connections of the house sewer (when of iron) with the house main pipe must be made by lead-calked joints; the connection of the iron house pipe with the earthenware house sewer must be made with cement, and should be gas-tight.

Sewer Air and Gas.—Sewer gas is not a gas at all. What is commonly understood by the term is the air of sewers, the ordinary atmospheric air, but charged and contaminated with the various products of organic decomposition taking place in sewers. Sewer air is a mixture of gases, the principal gases being carbonic acid; marsh gas; compounds of hydrogen and carbon; carbonate and sulphides of ammonium; ammonia; sulphureted hydrogen; carbonic oxide, volatile fetid matter; organic putrefactive matter, and may also contain some bacteria, saprophytic or pathogenic.

Any and all the above constituents may be contained in sewer air in larger or smaller doses, in minute or toxic doses.

It is evident that an habitual breathing of air in which even minute doses of toxic substances and gases are floating will in time impair the health of

Sewers

human beings, and that large doses of those substances may be directly toxic and dangerous to health. It is certainly an error to ascribe to sewer air death-dealing properties, but it would be a more serious mistake to undervalue the evil influence of bad sewer air upon health.

Ventilation.—To guard against the bad effects of sewer air, it is necessary to dilute, change, and ventilate the air in sewers. This is accomplished by the various openings left in the sewers, the so-called lamp and manholes which ventilate by diluting the sewer air with the street air. In some places, chemical methods of disinfecting the contents of sewers have been undertaken with a view to killing the disease germs and deodorizing the sewage. In the separate system of sewage disposal, where sewer pipes are small and usually self-cleansing, the late Colonel Waring proposed to ventilate the sewers through the house pipes, omitting the usual disconnection of the house sewer from the house pipes. But in the combined system such a procedure would be dangerous, as the sewer air would be apt to enter the house.

Rain storms are the usual means by which a thorough flushing of the street sewers is effected. There are, however, many devices proposed for flushing sewers; e. g., by special flushing tanks, which either automatically or otherwise discharge a large volume of water, thereby flushing the contents of the street sewers.

CHAPTER VI

Plumbing

Purpose and Requisites for House Plumbing.—A system of house plumbing presupposes the existence of a street sewer, and a water-supply distribution within the house. While the former is not absolutely essential, as a house may have a system of plumbing without there being a sewer in the street, still in the water-carriage system of disposal of sewage the street sewer is the outlet for the various waste and excrementitious matter of the house. The house-water distribution serves for the purpose of flushing and cleaning the various pipes in the house plumbing.

The purposes of house plumbing are: (1) to get rid of all excreta and waste water; (2) to prevent any foreign matter and gases in the sewer from entering the house through the pipes; and (3) to dilute the air in the pipes so as to make all deleterious gases therein innocuous.

To accomplish these results, house plumbing demands the following requisites:

(1) *Receptacles* for collecting the waste and excreta. These receptacles, or plumbing fixtures, must

Plumbing

be adequate for the purpose, small, noncorrosive, self-cleansing, well flushed, accessible, and so constructed as to easily dispose of their contents.

(2) *Separate Vertical Pipes* for sewage proper, for waste water, and for rain water; upright, direct, straight, noncorrosive, water- and gas-tight, well flushed, and ventilated.

(3) Short, direct, clean, well-flushed, gas-tight branch pipes to connect receptacles with vertical pipes.

(4) *Disconnection* of the house sewer from the house pipes by the main trap on house drain, and disconnection of house from the house pipes by traps on all fixtures.

(5) *Ventilation* of the whole system by the fresh-air inlet, vent pipes, and the extension of all vertical pipes.

Definitions.—The *House Drain* is the horizontal main pipe receiving all waste water and sewage from the vertical pipes, and conducting them outside of the foundation walls, where it joins the house sewer.

The *Soil Pipe* is the vertical pipe or pipes receiving sewage matter from the water-closets in the house.

The *Main Waste Pipe* is the pipe receiving waste water from any fixtures except the water-closets.

Branch Soil and Waste Pipes are the short pipes between the fixtures in the house and the main soil and waste pipes.

George M. Price

Traps are bends in pipes, so constructed as to hold a certain volume of water, called the water seal; this water seal serves as a barrier to prevent air and gases from the sewer from entering the house.

Vent Pipes are the special pipes to which the traps or fixtures are connected by short-branch vent pipes, and serve to ventilate the air in the pipes, and prevent siphonage.

The *Rain Leader* is the pipe receiving rain and storm water from the roof of the house.

Materials Used for Plumbing Pipes.—The materials from which the different pipes used in house plumbing are made differ according to the use of each pipe, its position, size, etc. The following materials are used: cement, vitrified pipe, lead; cast, wrought, and galvanized iron; brass, steel, nickel, sheet metal, etc.

Cement and Vitrified Pipes are used for the manufacture of street and house sewers. In some places vitrified pipe is used for house drains, but in most cities this is strongly objected to; and in New York City no earthenware pipes are permitted within the house. The objection to earthenware pipes is that they are not strong enough for the purpose, break easily, and cannot be made gas-tight.

Lead Pipe is used for all branch waste pipes and short lengths of water pipes. The advantage of lead pipes is that they can be easily bent and shaped, hence their use for traps and connections. The dis-

Plumbing

advantage of lead for pipes is the softness of the material, which is easily broken into by nails, gnawed through by rats, etc.

Brass, Nickel, Steel, and other such materials are used in the manufacture of expensive plumbing, but are not commonly employed.


Sheet Metal and *Galvanized Iron* are used for rain leaders, refrigerator pipes, etc.

Wrought Iron is used in the so-called Durham system of plumbing. Wrought iron is very strong; the sections of pipe are twenty feet long, the connections are made by screw joints, and a system of house plumbing made of this material is very durable, unyielding, strong, and perfectly gas-tight. The objections to wrought iron for plumbing pipes are that the pipes cannot be readily repaired and that it is too expensive.

Cast Iron is the material universally used for all vertical and horizontal pipes in the house. There are two kinds of cast-iron pipes manufactured for plumbing uses, the "standard and the extra heavy."

The following are the relative weights of each:


Standard.				Extra Heavy.
2-inch pipe,	4 lbs. per foot.....			5½ lbs.
3 " "	6 " " "			9½ "
4 " "	9 " " "			13 "
5 " "	12 " " "			17 "
6 " "	15 " " "			20 "
7 " "	20 " " "			27 "
8 " "	25 " " "			33½ "

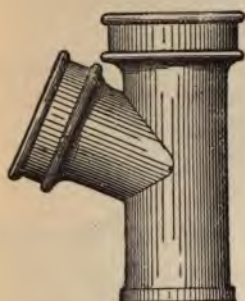


SHORT Y BRANCH.




LONG Y BRANCH.

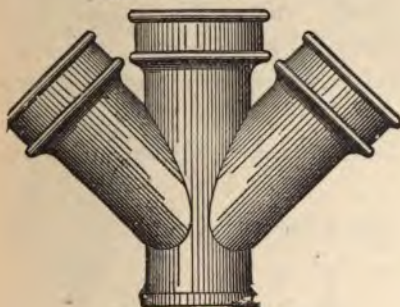


DOUBLE Y BRANCH.

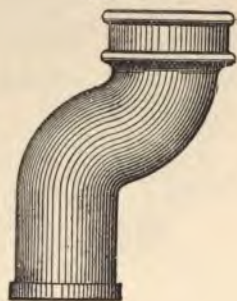

OFFSET.

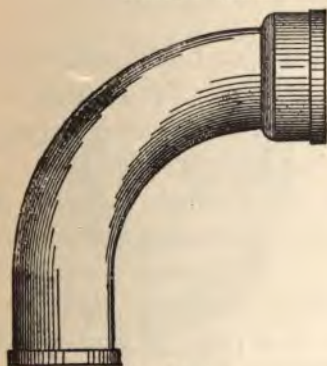

NINETY PER CENT BEND.

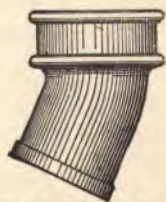

ONE EIGHTH BEND.

FIG. 16.

DIFFERENT FORMS AND FITTINGS.

Plumbing

The light-weight pipe, though extensively used by plumbers, is generally prohibited by most municipalities, as it is not strong enough for the purpose, and it is difficult to make a gas-tight joint with these pipes without breaking them.

Cast-iron pipes are made in lengths of five feet each, with an enlargement on one end of the pipe, called the "hub" or "socket," into which the other, or "spigot," end is fitted. All cast-iron pipe must be straight, sound, cylindrical and smooth, free from sand holes, cracks, and other defects, and of a uniform thickness.

The thickness of cast-iron pipes should be as follows:

2-inch pipe,	$\frac{7}{16}$ inches thick
3 " "	" "
4 " "	$\frac{3}{8}$ " "
5 " "	$\frac{7}{16}$ " "
6 " "	$\frac{1}{2}$ " "

Cast-iron pipes are sometimes coated by dipping into hot tar, or by some other process. Tar coating is, however, not allowed in New York, because it conceals the sand holes and other flaws in the pipes.

Joints and Connections.—To facilitate connections of cast-iron pipes, short and convenient forms and fittings are cast. Some of these connections are named according to their shape, such as L, T, Y, etc.

Iron Pipe is joined to *Iron Pipe* by lead-calked joints. These joints are made as follows: the spigot

George M. Price



ONE FOURTH BEND.




ONE FOURTH BEND.




ONE SIXTEENTH BEND.



ONE SIXTH BEND.

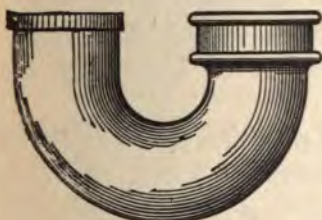

RETURN BEND.

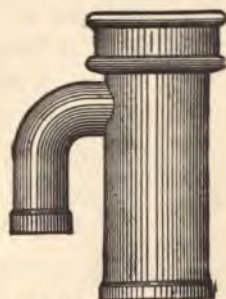

VENT BRANCH FOR BACK
AIR-PIPE.

FIG. 17.

Plumbing

end of one pipe is inserted into the enlarged end, or the "hub," of the next pipe. The space between the spigot and hub is half filled with oakum or dry hemp. The remaining space is filled with hot molten lead, which, on cooling, is well rammed and calked in by special tools made for the purpose. To make a good, gas-tight, lead-calked joint, experience and skill are necessary. The ring of lead joining the two lengths of pipe must be from 1 to 2 inches deep, and from $\frac{1}{2}$ to $\frac{3}{4}$ of an inch thick; 12 ounces of lead must be used at each joint for each inch in the diameter of the pipe. Iron pipes are sometimes connected by means of so-called rust joints. Instead of lead, the space between the socket and spigot is filled in with an iron cement consisting of 98 parts of cast-iron borings, 1 part of flowers of sulphur, and 1 part of sal ammoniac.

All connections between *Lead Pipes* and between *Lead* and *Brass* or *Copper* pipes must be made by means of "wiped" solder joints. A wiped joint is made by solder being poured on two ends of the two pipes, the solder being worked about the joint, shaped into an oval lump, and wiped around with a cloth, giving the joint a bulbous form.

All connections between *Lead Pipes* and *Iron Pipes* are made by means of brass ferrules. Lead cannot be soldered to iron, so a brass fitting or ferrule is used; it is jointed to the lead pipe by a wiped joint, and to the iron pipe by an ordinary lead-calked joint.

George M. Price

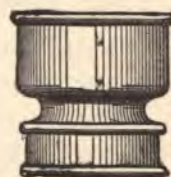
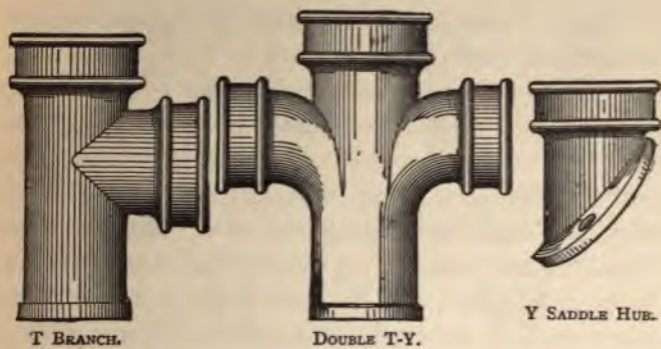


FIG. 18.

Plumbing

Putty, Cement, and Slip joints should not be tolerated on any pipes.

Traps.—We have seen that a trap is a bend in a pipe so constructed as to hold a quantity of water sufficient to interpose a barrier between the sewer and the fixture. There are many and various kinds of traps, some depending on water alone as their “seal,” others employing mechanical means, such as balls, valves, lips, also mercury, etc., to assist in the disconnection between the house and sewer ends of the pipe system.

The value of a trap depends: (1) on the depth of its water seal; (2) on the strengths and permanency of the seal; (3) on the diameter and uniformity of the trap; (4) on its simplicity; (5) on its accessibility; and (6) on its self-cleansing character.

The depth of a trap should be about three inches for water-closet traps, and about two inches for sink and other traps.

Traps must not be larger in diameter than the pipe to which they are attached.



The simpler the trap, the better it is.

Traps should be provided with cleanout screw openings, caps, etc., to facilitate cleaning.


The shapes of traps vary, and the number of the various kinds of traps manufactured is very great.

Traps are named according to their use: gully, grease, sediment, intercepting, etc.; according to their shape: D, P, S, V, bell, bottle, pot, globe, etc.;

George M. Price

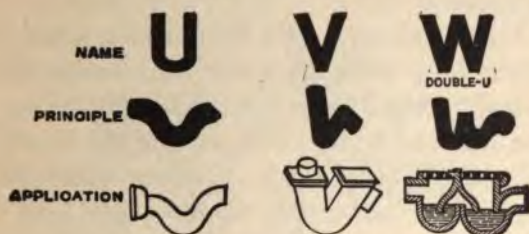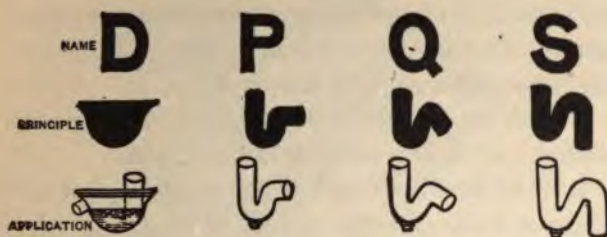

NOMENCLATURE. (KNIGHT.)

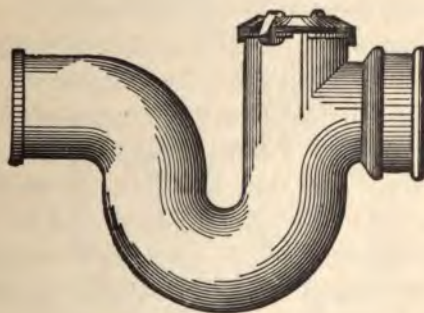

RUNNING TRAP.

FIG. 19.

FORMS OF TRAPS.

Plumbing

and according to the name of their inventor: Buchan, Cottam, Dodd, Antill, Renk, Hellyer, Croydon, and others too numerous to mention.


The S trap is the best for sink waste pipes; the running trap is the best on house drains.

Loss of Seal by Traps.—The seals of traps are not always secure, and the causes of unsealing of traps are as follows:


(1) *Evaporation.*—If a fixture in a house is not used for a long time, the water constituting the seal in the trap of the fixture will evaporate; the seal will thus be lost, and ingress of sewer air will result. To guard against evaporation, fixtures must be frequently flushed; and during summer, or at such times as the house is unoccupied and the fixtures not used, the traps are to be filled with oil or glycerine, either of which will serve as an efficient seal.

(2) *Momentum.*—A sudden flow of water from the fixture may, by the force of its momentum, empty all water in the trap and thus leave it unsealed. To prevent the unsealing of traps by momentum, they must be of a proper size, not less than the waste pipe of the fixture, the seal must be deep, and the trap in a perfectly straight position, as a slight inclination will favor its emptying. Care should also be taken while emptying the fixture to do it slowly so as to preserve the seal.


(3) *Capillary Attraction.*—If a piece of paper, cotton, thread, hair, etc., remain in the trap, and a part

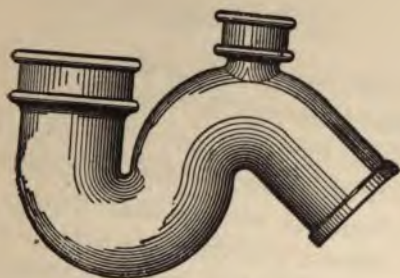

THREE QUARTER S TRAP.

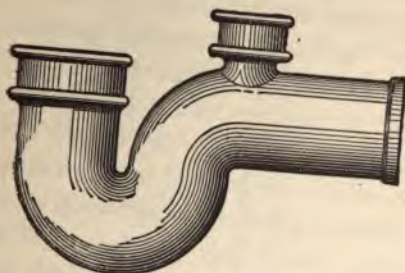

ONE HALF S TRAP.

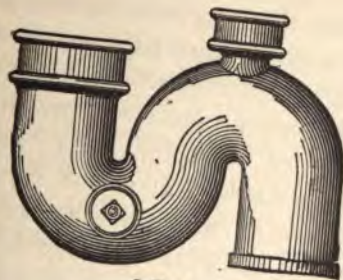

S TRAP.

FIG. 20.

FORMS OF TRAPS.

Plumbing

of the paper, etc., projects into the lumen of the pipe, a part of the water will be withdrawn by capillary attraction from the trap and may unseal it. To guard against unsealing of traps by capillary attraction, traps should be of a uniform diameter, without nooks and corners, and of not too large a size, and should also be well flushed, so that nothing but water remains in the trap.

Siphonage and Back Pressure.—The water in the trap, or the “seal,” is suspended between two columns of air, that from the fixture to the seal, and from the seal of the trap to the seal of the main trap on house drain. The seal in the trap is therefore not very secure, as it is influenced by any and all currents and agitations of air from both sides, and especially from its distal side. Any heating of the air in the pipes with which the trap is connected, any increase of temperature in the air contents of the vertical pipes with which the trap is connected, and any evolution of gases within those pipes will naturally increase the weight and pressure of the air within them, with the result that the increased pressure will influence the contents of the trap, or the “seal,” and may dislodge the seal backward, if the pressure is very great, or, at any rate, may force the foul air from the pipes through the seal of the traps and foul the water therein, thus allowing foul odors to enter the rooms from the traps of the fixtures. This condition, which in practice exists oftener than it is ordinarily thought,

George M. Price

is called "back pressure." By "back pressure" is therefore understood the *forcing back*, or, at least, the *fouling*, of the water in traps, due to the increased pressure of the air within the pipes back of the traps;

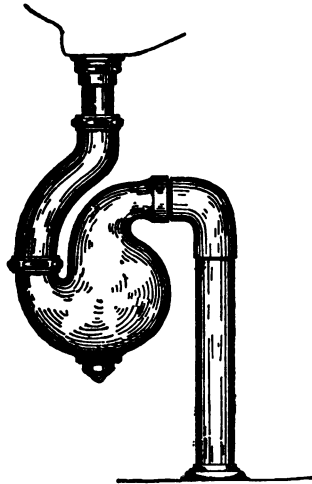


FIG. 21.

NON-SYPHONING TRAP.

Copyright by the J. L. Mott Iron Works.

the increase in air pressure being due to heating of pipes by the hot water occasionally circulating within them, or by the evolution of gases due to the decomposition of organic matter within the pipes.

A condition somewhat similar, but acting in a reverse way, is presented in what is commonly termed "siphonage." Just as well as the seal in traps may

Plumbing

be forced back by the increased pressure of the air within the pipes, the same seal may be *forced out*, pulled out, aspirated, or siphoned out by a sudden withdrawal of a large quantity of air from the pipes with which the trap is connected. Such a sudden withdrawal of large quantities of air is occasioned every time there is a rush of large column of water through the pipes, e. g., when a water-closet or similar fixture is suddenly discharged; the water rushes through the pipes with a great velocity and creates a strong down current of air, with the result that where the down-rushing column passes by a trap, the air in the trap and, later, its seal are aspirated or siphoned out, thus leaving the trap without a seal. By "siphonage" is therefore meant the emptying of the seal in a trap by the aspiration of the water in the trap due to the downward rush of water and air in the pipes with which the trap is connected.

To guard against the loss of seal through siphonage "nonsiphoning" traps have been invented, that is, the traps are so constructed that the seal therein is very large, and the shape of the traps made so that siphonage is difficult. These traps are, however, open to the objection that in the first place they do not prevent the fouling of the seals by back pressure, and in the second place they are not easily cleansable and may retain dirt in their large pockets. The universal method of preventing both siphonage and back pressure is by the system of vent pipes, or

George M. Price

what plumbers call "back-air" pipes. Every trap is connected by branches leading from the crown or near the crown of the trap to a main vertical pipe which runs through the house the same as the waste and soil pipes, and which contains nothing but air, which air serves as a medium to be pressed upon by the "back-pressure" air, or to be drawn upon by the siphoning, and thus preventing any agitation and influence upon the seal in the traps; for it is self evident that as long as there is plenty of air at the distal part of the seal, the seal itself will remain uninfluenced by any agitation or condition of the air within the pipes with which the trap is connected.

The vent-pipe system is also an additional means of ventilating the plumbing system of the house, already partly ventilated by the extension of the vertical pipes above the roof and by the fresh-air inlet. The principal objection urged against the installation of the vent-pipe system is the added expense, which is considerable; and plumbers have sought therefore to substitute for the vent pipes various mechanical traps, also nonsiphoning traps. The vent pipes are, however, worth the additional expense, as they are certainly the best means to prevent siphonage and back pressure, and are free from the objections against the cumbersome mechanical traps and the filthy nonsiphoning traps.

CHAPTER VII

Plumbing Pipes

The House Drain.—All waste and soil matter in the house is carried from the receptacles into the waste and soil pipes, and from these into the house drain, the main pipe of the house, which carries all waste and soil into the street sewer. The house drain extends from the junction of the soil and waste pipes of the house through the house to outside of the foundations two to five feet, whence it is called "house sewer." The house drain is a very important part of the house-plumbing system, and great care must be taken to make its construction perfect.

Material.—The material of which house drains are manufactured is extra heavy cast iron. Lighter pipes should never be used, and the use of vitrified pipes for this purpose should not be allowed.

Size.—The size of the house drain must be proportional to the work to be performed. Too large a pipe will not be self-cleansing, and the bottom of it will fill with sediment and slime. Were it not for the need of carrying off large volumes of storm water, the house drain could be a great deal smaller than it

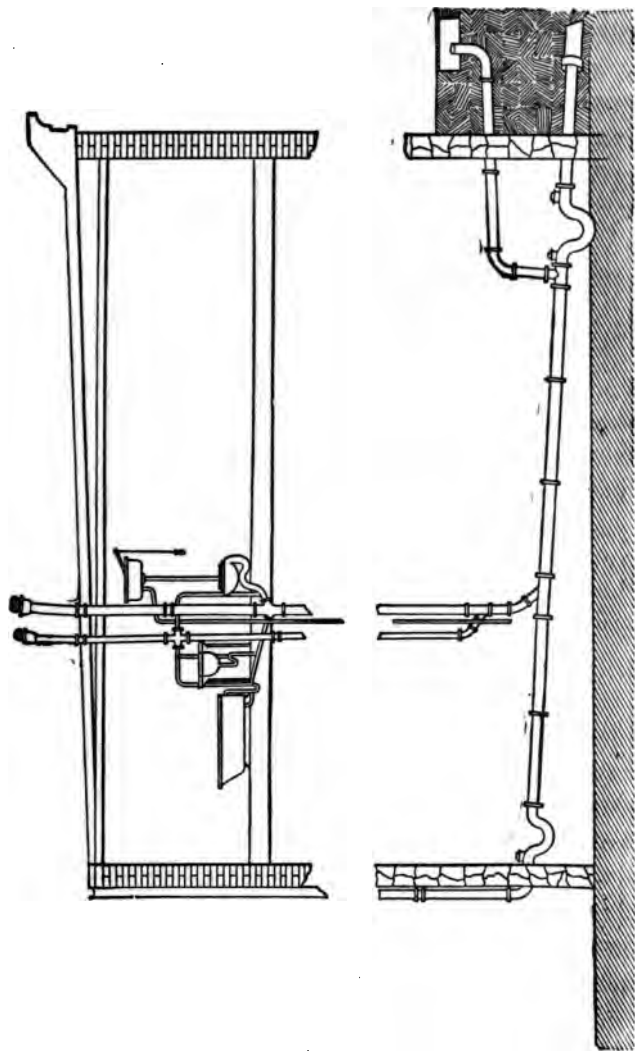


FIG. 22.

SYSTEM OF HOUSE DRAINAGE, SHOWING THE PLUMBING OF A HOUSE. (H. BRAMLEY.)

Plumbing Pipes

usually is. A three-inch pipe is sufficient for a small house, though a four-inch pipe is made obligatory in most cities. In New York City no house drains are allowed of smaller diameter than six inches.

Fall.—The fall or inclination of the house drain depends on its size. Every house drain must be laid so that it should have a certain inclination toward the house sewer, so as to increase the velocity of flow in it and make it self-flushing and self-cleansing. The rate of fall should be as follows:

For 4-inch pipe.....	1 in 40 feet
" 5 " "	1 " 50 "
" 6 " "	1 " 60 "

Position.—The house drain lies in a horizontal position in the cellar, and should, if possible, be exposed to view. It should be hung on the cellar wall or ceiling, unless this is impracticable, as when fixtures in the cellar discharge into it; in this case, it must be laid in a trench cut in a uniform grade, walled upon the sides with bricks laid in cement, and provided with movable covers and with a hydraulic-cement base four inches thick, on which the pipe is to rest. The house drain must be laid in straight lines, if possible; all changes in direction must be made with curved pipes, the curves to be of a large radius.

Connections.—The house drain must properly connect with the house sewer at a point about two feet outside of the outer front vault or area wall of the

George M. Price

building. An arched or other proper opening in the wall must be provided for the drain to prevent damage by settling.

All joints of the pipe must be gas-tight, lead-calked joints, as stated before. The junction of the vertical soil, waste, and rain-leader pipes must not be made by right-angle joints, but by a curved elbow fitting of a large radius, or by "Y" branches and 45° bends.

When the house drain does not rest on the floor, but is hung on the wall or ceiling of the cellar, the connection of the vertical soil and waste pipes must have suitable supports, the best support being a brick pier laid nine inches in cement and securely fastened to the wall.

Near all bends, traps, and connections of other pipes with the house drain suitable hand-holes should be provided, these hand-holes to be tightly covered by brass screw ferrules, screwed in, and fitted with red lead.

"No steam exhaust, boiler blow-off, or drip pipe shall be connected with the house drain or sewer. Such pipes must first discharge into a proper condensing tank, and from this a proper outlet to the house sewer outside of the building must be provided."

Main Traps.—The disconnection of the house pipes from the street sewer is accomplished by a trap on the house drain near the front wall, inside the house, or just outside the foundation wall but

Plumbing Pipes

usually inside of the house. The best trap for this purpose is the siphon or running trap. This trap must be constructed with a cleaning hand-hole on the inside or house side of the trap, or on both sides, and the hand-holes are to be covered gas-tight by brass screw ferrules.

Extension of Vertical Pipes.—By the main trap the house-plumbing system is disconnected from the sewer, and by the traps on each fixture from the air in the rooms; still, as the soil, waste, and drain pipes usually contain offensive solids and liquids which contaminate the air in the pipes, it is a good method to ventilate these pipes. This ventilation of the soil, waste, and house drain pipes prevents the bad effects on health from the odors, etc., given off by the slime and excreta adhering in the pipes, and it is accomplished by two means: (1) by extension of the vertical pipes to the fresh air above the roof, and (2) by the fresh-air inlet on the house drain.

By these means a current of air is established through the vertical and horizontal pipes.

Every vertical pipe must be extended above the roof at least two feet above the highest coping of the roof or chimney. The extension must be far from the air shafts, windows, ventilators, and mouths of chimneys, so as to prevent air from the pipes being drawn into them. The extension must be not less than the full size of each pipe, so as to avoid friction from the circulation of air. The use of covers, cowl,

George M. Price

return bends, etc., is reprehensible, as they interfere with the free circulation of air. A wire basket may be inserted to prevent foreign substances from falling into pipes.

Fresh-air Inlet.—The fresh-air inlet is a pipe of about four inches in diameter; it enters the house drain on the house side of the main trap, and extends to the external air at or near the curb, or at any convenient place, at least fifteen feet from the nearest window. The fresh-air inlet pipe usually terminates in a receptacle covered by an iron grating, and should be far from the cold-air box of any hot-air furnace. When clean, properly cared for, and extended above the ground, the fresh-air inlet, in conjunction with the open extended vertical pipe, is an efficient means of ventilating the air in the house pipes; unfortunately most fresh-air inlets are constantly obstructed, and do not serve the purpose for which they are made.

The Soil and Waste Pipes.—The soil pipe receives liquid and solid sewage from the water-closets and urinals; the waste pipe receives all waste water from sinks, washbasins, bath tubs, etc.

The material of which the vertical soil and waste pipes are made is cast iron.

The size of main waste pipes is from three to four inches; of main soil pipes, from four to five inches. In tenement houses with five water-closets or more, not less than five inches.

Plumbing Pipes

The joints of the waste and soil pipe should be lead calked. The connections of the lead branch pipes or traps with the vertical lines must be by Y joints, and by means of brass ferrules, as explained above.

The location of the vertical pipes must never be within the wall, built in, nor outside the house, but preferably in a special three-foot square shaft adjacent to the fixtures, extending from the cellar to the roof, where the air shaft should be covered by a louvered skylight; that is, with a skylight with slats outwardly inclined, so as to favor ventilation.

The vertical pipes must be accessible, exposed to view in all their lengths, and, when covered with boards, so fitted that the boards may be readily removed.

Vertical pipes must be extended above the roof in full diameter, as previously stated. When less than four inches in diameter, they must be enlarged to four inches at a point not less than one foot below the roof surface by an "increaser," of not less than nine inches long.

All soil and waste pipes must, whenever necessary, be securely fastened with wrought-iron hooks or straps.

Vertical soil and waste pipes must not be trapped at their base, as the trap would not serve any purpose, and would prevent a perfect flow of the contents.

Branch Soil and Waste Pipes.—The fixtures must be near the vertical soil and waste pipes in order that the branch waste and soil pipes should be as short as

George M. Price

possible. The trap of the branch soil and waste pipes must not be far from the fixture, not more than two feet from it, otherwise the accumulated foul air and slime in the waste and soil branch will emit bad odors.

The minimum sizes for branch pipes should be as follows:

Kitchen sinks.....	2 inches
Bath tubs.....	1½ to 2 “
Laundry tubs.....	1½ to 2 “
Water-closets.....	not less than 4 “

Branch soil and waste pipes must have a fall of at least one-quarter inch to one foot.

The branch waste and soil pipes and traps must be exposed, accessible, and provided with screw caps, etc., for inspection and cleaning purposes.

Each fixture should be separately trapped as close to the fixture as possible, as two traps on the same line of branch waste or soil pipes will cause the air between the traps to be closed in, forming a so-called “cushion,” that will prevent the ready flow of contents.

“All traps must be well supported and rest true with respect to their water level.”

Vent Pipes and Their Branches.—The purpose of vent pipes, we have seen, is to prevent siphoning of traps and to ventilate the air in the traps and pipes. The material of which vent pipes are made is cast iron.

The size of vent pipes depends on the number of

Plumbing Pipes

traps with which they are connected; it is usually two or three inches. The connection of the branch vent to the trap must be at the crown of the trap, and the connection of the branch vent to the main vent pipe must be above the trap, so as to prevent friction of air. The vent pipes are not perfectly vertical, but with a continuous slope, so as to prevent condensation of air or vapor therein.

The vent pipes should be extended above the roof, several feet above the coping, etc.; and the extension



FIG. 23.
LEADER PIPE.

above the roof should not be of less than four inches diameter, so as to avoid obstruction by frost. No return bends or cowls should be tolerated on top of the vent pipes. Sometimes the vent, instead of running above the roof, is connected with the soil pipe several feet above all fixtures.

Rain Leaders.—The rain leader serves to collect the rain water from the roof and eaves gutter. It usually discharges its contents into the house drain, although some leaders are led to the street gutter, while others are connected with school sinks in the yard. The latter practice is objectionable, as it may lead the foul air from the school sink into the rooms, the windows

George M. Price

of which are near the rain leader; besides, the stirring up of the contents of the school sink produces bad odors. When the rain leader is placed within the house, it must be made of cast iron with lead-calked joints; when outside, as is the rule, it may be of sheet metal or galvanized-iron pipe with soldered joints. When the rain leader is run near windows, the rules and practice are that it should be trapped at its base, the trap to be a deep one to prevent evaporation, and it should be placed several feet below the ground, so as to prevent freezing.

CHAPTER VIII

Plumbing Fixtures

THE receptacles or fixtures within the house for receiving the waste and excrementitious matter and carrying it off through the pipes to the sewer are very important parts of house plumbing. Great care must be bestowed upon the construction, material, fitting, etc., of the plumbing fixtures, that they be a source of comfort in the house instead of becoming a curse to the occupants.

Sinks.—The waste water from the kitchen is disposed of by means of sinks. Sinks are usually made of cast iron, painted, enameled, or galvanized. They are also made of wrought iron, as well as of earthenware and porcelain. Sinks must be set level, and provided with a strainer at the outlet to prevent large particles of kitchen refuse from being swept into the pipe and obstructing it. If possible the back and sides of a sink should be cast from one piece; the back and sides, when of wood, should be covered by nonabsorbent material, to prevent the wood from becoming saturated with waste water.¹ No woodwork should

¹ Waterproof paint or tiling should be used for this purpose.—
EDITOR.

George M. Price

inclose sinks; they should be supported on iron legs and be open beneath and around. The trap of a sink is usually two inches in diameter, and should be near the sink; it should have a screw cap for cleaning and inspection, and the branch vent pipe should be at the crown of the trap.

Washbasins.—Washbasins are placed in bathrooms, and, when properly constructed and fitted, are a source of comfort. They should not be located in bedrooms, and should be open, without any woodwork around them. The washbowls are made of porcelain or marble, with a socket at the outlet, into which a plug is fitted.

Wash Tubs.—For laundry purposes wooden, iron-enameled, stone, and porcelain tubs are fitted in the kitchen or laundry room. Porcelain is the best material, although very expensive. The soapstone tub is the next best; it is clean, nonabsorbent, and not too expensive. Wood should never be used, as it soon becomes saturated, is foul, leaks, and is offensive. In old houses, wherever there are wooden tubs, they should be covered with zinc or some nonabsorbent material. The wash tubs are placed in pairs, sometimes three in a row, and they are generally connected with one lead waste pipe one and a half to two inches in diameter, with one trap for all the tubs.

Bath Tubs.—Bath tubs are made of enameled iron or porcelain, and should not be covered or inclosed by any woodwork. The branch waste pipe should be

Plumbing Fixtures

trapped and connected with the main waste or soil pipe. The floor about the tub in the bathroom should be of nonabsorbent material.¹

Refrigerators.—The waste pipes of refrigerators should not connect with any of the house pipes, but should be emptied into a basin or pail; or, if the refrigerator is large, its waste pipe should be conducted to the cellar, where it should discharge into a properly trapped, sewer-connected and water-supplied open sink.

Boilers.—The so-called sediment pipe from the hot-water boiler in the kitchen should be connected with the sink trap at the inlet side of the trap.

Urinals.—As a rule, no urinals should be tolerated within a house; they are permissible only in factories and office buildings. The material is enameled iron or porcelain. They must be provided with a proper water supply to flush them.

Overflows.—To guard against overflow of wash-basins, bath tubs, etc., overflow pipes from the upper portion of the fixtures are commonly provided. These pipes are connected with the inlet side of the trap of the same fixture. They are, however, liable to become a nuisance by being obstructed with dirt and not being constantly flushed; whenever possible they should be dispensed with.

Safes and Wastes.—A common usage with plumb-

¹ Tiling, linoleum, concrete, etc., as opposed to wood or carpets.—
EDITOR.

George M. Price

ers in the past has been to provide sinks, washbasins, bath tubs, and water-closets, not only with overflow pipes, but also with so-called safes, which consist of sheets of lead turned up several inches at the edge so as to catch all drippings and overflow from fixtures; from these safes a drip pipe or waste is conducted to the cellar, where it empties into a sink. Of course, when such safe wastes are connected with the soil or waste pipes, they become a source of danger, even if they are trapped, as they are not properly cared for or flushed; and their traps are usually not sealed. Even when discharging into a sink in the cellar, safes and safe waste are very unsightly, dirty, liable to accumulate filth, and are offensive. With open plumbing, and with the floors under the fixtures of non-absorbent material, they are useless.

Water-closets.—The most important plumbing fixtures within the house are the water-closets. Upon the proper construction and location of the water-closets greatly depends the health of the inhabitants of the house. Water-closets should be placed in separate, well-lighted, perfectly ventilated, damp-proof, and clean compartments, and no water-closet should be used by more than one family in a tenement house. The type and construction of the water-closets should be carefully attended to, as the many existing, old, and obsolete types of water-closets are still being installed in houses, or are left there to foul the air of rooms and apartments. There are many water-closets

Plumbing Fixtures

on the market, some of which will be described; the best are those made of one piece, of porcelain or enameled earthenware, and so constructed as always to be and remain clean.

The Pan Closet.—The water-closet most commonly used in former times was a representative of the group

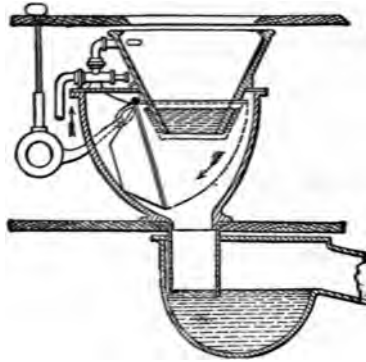


FIG. 24.

PAN WATER-CLOSET. (GERHARD.)

of water-closets with mechanical contrivances. This is the *pan closet*, now universally condemned and prohibited from further use. The pan closet consists of four principal parts: (1) basin of china, small and round; (2) a copper six-inch pan under the basin; (3) a large iron container, into which the basin with the pan under it is placed; and (4) a D trap, to which the container is joined. The pan is attached with a lever to a handle, which, when pulled, moves the pan; this describes a half circle and drops the contents into the

George M. Price

container and trap. The objections to pan closets are the following:

(1) There being a number of parts and mechanical contrivances, they are liable to get out of order.

(2) The bowl is set into the container and cannot be inspected, and is usually very dirty beneath.

(3) The pan is often missing, gets out of order, and is liable to be soiled by adhering excreta.

(4) The container is large, excreta adhere to its upper parts, and the iron becomes corroded and coated with filth.

(5) With every pull of the handle and pan, foul air enters rooms.

(6) The junctions between the bowl and container, and the container and trap, are usually not gas-tight.

(7) The pan breaks the force of the water flush, and the trap is usually not completely emptied.

Valve and Plunger Closets are an improvement upon the pan closets, but are not free from several objections enumerated above. As a rule, all water-closets with mechanical parts are objectionable.

Hopper Closets are made of iron or earthenware. Iron hopper closets easily corrode; they are usually enameled on the inside. Earthenware hoppers are preferable to iron ones. Hopper closets are either long or short; when long, they expose a very large surface to be fouled, require a trap below the floor, and are, as a rule, very difficult to clean or to keep clean. Short hopper closets are preferable, as they are easily kept

Plumbing Fixtures

clean and are well flushed. When provided with flushing rim, and with a good water-supply cistern and large supply pipe, the short hopper closet is a good form of water-closet.

The washout and washdown water-closets are an improvement upon the hopper closets. They are manu-

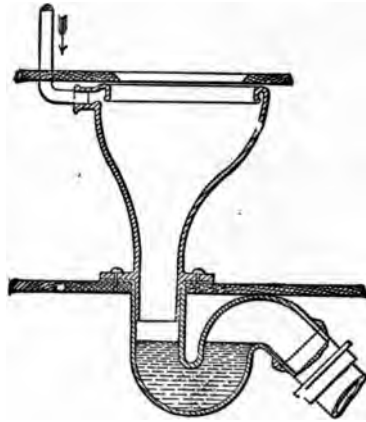


FIG. 25.

LONG HOPPER WATER-CLOSET. (GERHARD.)

factured from earthenware or porcelain, and are so shaped that they contain a water seal, obviating the necessity of a separate trap under the closet.

Flush Tanks.—Water-closets must not be flushed directly from the water-supply pipes, as there is a possibility of contaminating the water supply. Water-closets should be flushed from flush tanks, either of iron or of wood, metal lined; these cisterns should be

George M. Price

placed not less than four feet above the water-closet, and provided with a straight flush pipe of at least one and one-quarter inch diameter.

The cistern is fitted with plug and handle, so that by pulling at the handle the plug is lifted out of the socket of the cistern and the contents permitted to rush through the pipe and flush the water-closet. A separate ball arrangement is made for closing the water supply when the cistern is full. The cistern must have

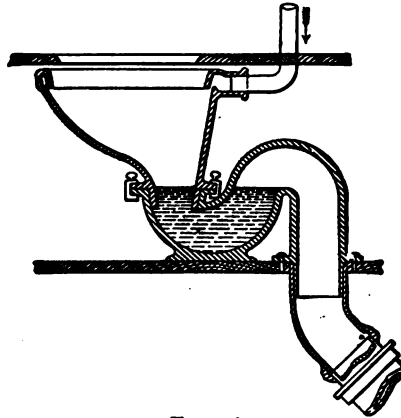


FIG. 26.

SHORT HOPPER WATER-CLOSET. (GERHARD.)

a capacity of at least three to five gallons of water; the flush pipe must have a diameter of not less than one and one-quarter inch, and the pipe must be straight, without bends, and the arrangement within the closets such as to flush all parts of the bowl at the same time.

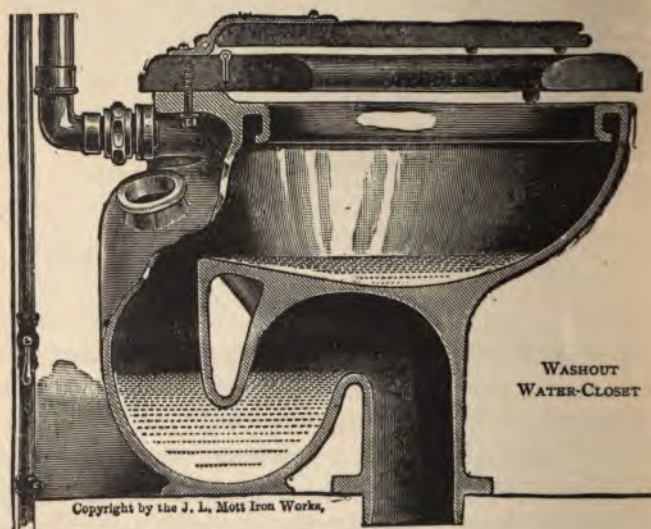


FIG. 27.
STYLES OF WATER-CLOSETS.

George M. Price

Yard Closets.—In many old houses the water-closet accommodations are placed in the yard. There are two forms of these yard closets commonly used—the school sink and the yard hopper.

The *school sink* is an iron trough from five to twelve or more feet long, and one to two feet wide and

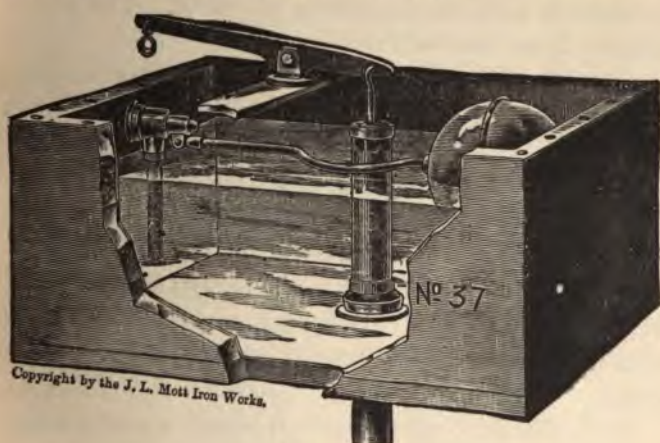


FIG. 28.

FLUSHING CISTERN.

one foot deep, set in a trench several feet below the surface with an inclination toward the exit; on one end of the trough there is a socket fitted with a plug, and on the other a flushing apparatus consisting simply of a water service-pipe. Above the iron trough brick walls are built up, inclosing it; over it are placed wooden seats, and surrounding the whole is a wooden

Plumbing Fixtures

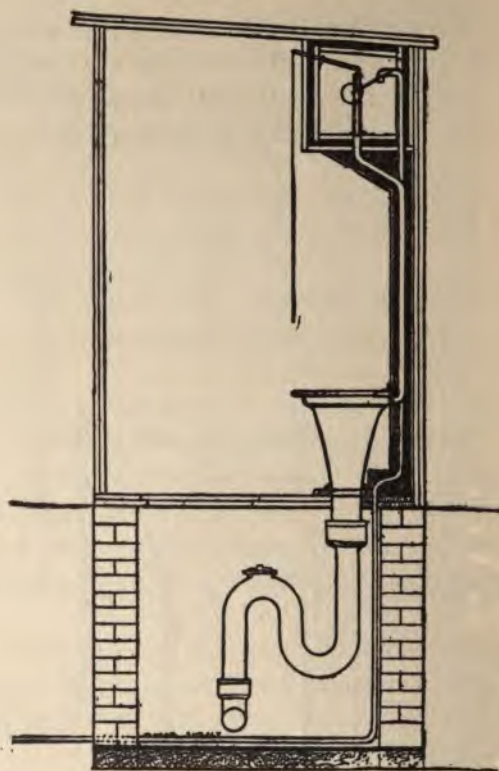


FIG. 30.

J. SULLIVAN'S IMPROVED YARD HOPPER CLOSET.

houses by putting the yard hopper near the house and placing the cistern within the house; however, this can hardly be done where several hoppers must be employed. In most cases, yard hoppers are flushed by

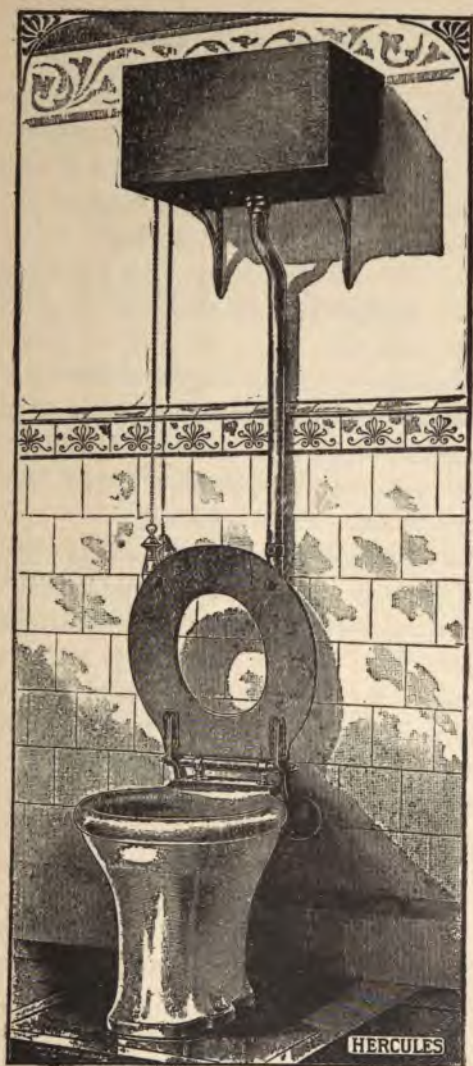


FIG. 31.
A MODERN WATER-CLOSET.
(J. L. Mott Iron Works.)

Plumbing Fixtures

automatic rod valves, so constructed as to flush the bowl of the hopper whenever the seat is pressed upon. These valves, as a rule, frequently get out of order and leak, and care must be taken to construct the vault under the hopper so that it be perfectly water-tight. An improved form of yard hopper has been suggested by Inspector J. Sullivan, of the New York Health Department, and used in a number of places with complete satisfaction. The improvement consists in the doors and walls of the privy apartment being of double thickness, lined with builders' lining on the inside, and the water service-pipes and cistern being protected by felt or mineral wool packing.

Yard and Area Drains.—The draining of the surface of the yard or other areas is done by tile or iron pipes connecting with the sewer or house drain in the cellar. The "bell" or the "lip" traps are to be condemned and should not be used for yard drains. The gully and trap should be made of one piece; the trap should be of the siphon type and should be deep enough in the ground to prevent the freezing of seal in winter.

CHAPTER IX

Defects in Plumbing

THE materials used in house plumbing are many and various, the parts are very numerous, the joints and connections are frequent, the position and location of pipes, etc., are often inaccessible and hidden, and the whole system quite complicated. Moreover, no part of the house construction is subjected to so many strains and uses, as well as abuses, as the plumbing of the house. Hence, in no part of house construction can there be as much bad work and "scamping" done as in the plumbing; and no part of the house is liable to have so many defects in construction, maintenance, and condition as the plumbing. At the same time, the plumbing of a house is of very great importance and influence on the health of the tenants, for defective materials, bad workmanship, and improper condition of the plumbing of a house may endanger the lives of its inhabitants by causing various diseases.

Defects in Plumbing.—The defects usually found in plumbing are so many that they cannot all be enumerated here. Among the principal and most common defects, however, are the following:

Defects in Plumbing

Materials.—Light-weight iron pipes; these crack easily and cannot stand the strain of calking. Sand-holes made during casting; these cannot always be detected, especially when the pipes are tar-coated. Thin lead pipe; not heavy enough to withstand the bending and drawing it is subjected to.

Location and Position.—Pipes may be located within the walls and built in, in which case they are inaccessible, and may be defective without anyone being able to discover the defects. Pipes may be laid with a wrong or an insufficient fall, thus leaving them unflushed, or retarding the proper velocity of the flow in the pipes. Pipes may be put underground and have no support underneath, when some parts or lengths may sink, get out of joint, and the sewage run into the ground instead of through the pipes. The pipes may be so located as to require sharp bends and curves, which will retard the flow in them.

Joints.—Joints in pipes may be defective, leaking, and not gas-tight because of imperfect calking, insufficient lead having been used; or, no oakum having been used and the lead running into the lumen of the pipe; or, not sufficient care and time being taken for the work. Joints may be defective because of iron ferrules being used instead of brass ferrules; through improperly wiped joints; through bad workmanship, bad material, or ignorance of the plumber. Plumbers often use T branches instead of Y branches; sharp bends instead of bends of forty-five degrees or more;

George M. Price

slip joints instead of lead-calked ones; also, they often connect a pipe of larger diameter with a pipe of small diameter, etc.

Traps.—The traps may be bad in principle and in construction; they may be badly situated or connected, or they may be easily unsealed, frequently obstructed, inaccessible, foul, etc.

Ventilation.—The house drain may have no fresh-air inlet, or the fresh-air inlet may be obstructed; the vent pipes may be absent, or obstructed; the vertical pipes may not be extended.

Condition.—Pipes may have holes, may be badly repaired, bent, out of shape, or have holes patched up with cement or putty; pipes may be corroded, gnawed by rats, or they may be obstructed, etc.

The above are only a few of the many defects that may be found in the plumbing of a house. It is, therefore, of paramount importance to have the house plumbing regularly, frequently, and thoroughly examined and inspected, as well as put to the various tests, so as to discover the defects and remedy them.

Plumbing Tests.—The following are a few minor points for testing plumbing:

(1) To test a trap with a view to finding out whether its seal is lost or not, knock on the trap with a piece of metal; if the trap is empty, a hollow sound will be given out; if full, the sound will be dull. This is not reliable in case the trap is full or half-full with slime, etc. Another test for the same purpose is as

Defects in Plumbing

follows: hold a light near the outlet of the fixture; if the light is drawn in, it is a sign that the trap is empty.

(2) Defects in leaded joints can be detected if white lead has been used, as it will be discolored in case sewer gas escape from the joints.

(3) The connection of a waste pipe of a bath tub with the trap of the water-closet can sometimes be discovered by suddenly emptying the bath tub and watching the contents of the water-closet trap; the latter will be agitated if the waste pipe is discharged into the trap or on the inlet side of trap of the water-closet.

(4) The presence of sewer gas in a room can be detected by the following chemical method: saturate a piece of unglazed paper with a solution of acetate of lead in rain or boiled water, in the proportion of one to eight; allow the paper to dry, and hang up in the room where the escape of sewer gas is suspected; if sewer gas is present, the paper will be completely blackened.

The main tests for plumbing are: (1) the *Hydraulic*, or water-pressure test; (2) the *Smoke*, or sight test, and (3) the *Scent*, or peppermint, etc., test.

The Water-pressure Test is used to test the vertical and horizontal pipes in new plumbing before the fixtures have been connected. It is applied as follows: the end of the house drain is plugged up with a proper air-tight plug, of which there are a number on the market. The pipes are then filled with water to a

George M. Price

certain level, which is carefully noted. The water is allowed to stand in the pipes for half an hour, at the expiration of which time, if the joints show no sign of leakage, and are not sweating, and if the level of the water in the pipes has not fallen, the pipes are water-tight. This is a very reliable test, and is made obligatory for testing all new plumbing work.

The Smoke Test is also a very good test. It is applied as follows: by means of bellows, or some exploding, smoke-producing rocket, smoke is forced into the system of pipes, the ends plugged up, and the escape of the smoke watched for, as wherever there are defects in the pipes the smoke will appear. A number of special appliances for this test are manufactured, all of them more or less ingenious.

The Scent Test is made by putting into the pipes a certain quantity of some pungent chemical, like peppermint oil, etc., the odor of which will escape from the defects in the pipes, if there are any. Oil of peppermint is commonly used in this country for the test. The following is the way this test is applied: all the openings of the pipes on the roof, except one, are closed up tightly with paper, rags, etc. Into the one open pipe is poured from two to four ounces of peppermint oil, followed by a pail of hot water, and then the pipe into which the oil has been put is also plugged up. This is done, preferably, by an assistant. The inspector then proceeds to slowly follow the course of the various pipes, and will detect the smell of the oil wherever

Defects in Plumbing

it may escape from any defects in the pipes. If the test is thoroughly and carefully done, if care is taken that no fixture in the house is used and the traps of same not disturbed during the test, if the openings of the pipes on the roofs are plugged up tightly, if the main house trap is not unsealed (otherwise the oil will escape into the sewer), and if the handling of the oil has been done by an assistant, so that none adheres to the inspector—if all these conditions are carried out, the peppermint test is a most valuable test for the detection of any and all defects in plumbing. Another precaution to be taken is with regard to the rain leader. If the rain leader is not trapped, or if its trap is empty, the peppermint oil may escape from the pipes into the rain leader. Care must be taken, therefore, that the trap at the base of the rain leader be sealed; or, if no trap is existing, to close up the connection of the rain leader with the house drain; or, if this be impossible, to plug up the opening of the leader near the roof.

Instead of putting the oil into the opening of a pipe on the roof, it may be put through a fixture on the top floor of the house, although this is not so satisfactory.

Various appliances have been manufactured to make this test more easy and accurate. Of the English appliances, the Banner patent drain grenade, and Kemp's drain tester are worthy of mention. The former consists "of a thin glass vial charged with pun-

George M. Price

gent and volatile chemicals. One of the grenades, when dropped down any suitable pipe, such as the soil pipe, breaks, or the grenade may be inserted through a trap into the drain, where it is exploded." (Taylor.) Kemp's drain tester consists of a glass tube containing a chemical with a strong odor; the tube is fitted with a glass cover, held in place by a string and a paper band. When the tester is thrown into the pipes and hot water poured after it, the paper band breaks, the spring opens the cover, and the contents of the tube fall into the drain.

Recently Dr. W. G. Hudson, an inspector in the Department of Health of New York, has invented a very ingenious "peppermint cartridge" for testing plumbing. The invention is, however, not yet manufactured, and is not on the market.

CHAPTER X

Infection and Disinfection

DISINFECTION is the destruction of the infective power of infectious material; or, in other words, disinfection is the destruction of the agents of infection.

An infectious material is one contaminated with germs of infection.

The germs of infection are organic microörganisms, vegetable and animal—protozoa and bacteria.

The germs of infection once being lodged within the body cause certain reactions producing specific pathological changes and a variety of groups of symptoms which we know by the specific names of infectious diseases, e. g., typhoid, typhus, etc.

Among the infectious diseases known to be due to specific germs are the following: typhoid, typhus, relapsing fevers, cholera, diphtheria, croup, tuberculosis, pneumonia, malaria, yellow fever, erysipelas, *septicæmia*, anthrax, *tetanus*, gonorrhea, etc.; and among the infectious diseases the germs of which have not as yet been discovered are the following: scarlet fever, measles, smallpox, syphilis, varicella, etc.

The part of the body and the organs in which the

George M. Price

germs first find their entrance, or which they specifically attack, vary with each disease; thus, the mucous membranes, skin, internal organs, secretions, and excretions are, severally, either portals of infection or the places where the infection shows itself the most.

The agents carrying the germs of infection from one person to the other may be the infected persons themselves, or anything which has come in contact with their bodies and its secretions and excretions; thus, the air, room, furniture, vessels, clothing, food and drink, also insects and vermin, may all be carriers of infection.

Sterilization is the absolute destruction of *all* organic life, whether infectious or not; it is therefore *more* than disinfection, which destroys the germs of infection alone.

A **Disinfectant** is an agent which destroys germs of infection.

A **Germicide** is the same; an agent destroying germs.

An **Insecticide** is an agent capable of destroying insects; it is not necessarily a disinfectant, nor is a disinfectant necessarily an insecticide.

An **Antiseptic** is a substance which inhibits and stops the growth of the bacteria of putrefaction and decomposition. A disinfectant is therefore an antiseptic, but an antiseptic may not be a disinfectant.

A **Deodorant** is a substance which neutralizes or destroys the unpleasant odors arising from matter un-

Physical Disinfectants

dergoing putrefaction. A deodorant is not necessarily a disinfectant, nor is every disinfectant a deodorant.

The ideal disinfectant is one which, while capable of destroying the germs of disease, does not injure the bodies and material upon which the germs may be found; it must also be penetrating, harmless in handling, inexpensive, and reliable. The ideal disinfectant has not as yet been discovered.

For successful scientific disinfection it is necessary to know: (1) the nature of the specific germs of the disease; (2) the methods and agents of its spread and infection; (3) the places where the germs are most likely to be found; (4) the action of each disinfectant upon the germs; and (5) the best methods of applying the disinfectant to the materials infected with germs of disease.

Disinfection is not a routine, uniform, unscientific process; a disinfector must be conversant with the basic principles of disinfection, must make a thorough study of the scientific part of the subject, and moreover must be thoroughly imbued with the importance of his work, upon which the checking of the further spread of disease depends.

Physical Disinfectants

The physical disinfectants are sunlight, desiccation, and heat.

Sunlight is a good disinfectant provided the in-

George M. Price

fectured material or germs are directly exposed to the rays of the sun. Bacteria are killed within a short time, but spores need a long time, and some of them resist the action of the sun for an indefinite period. The disadvantages of sunlight as a disinfectant are its superficial action, its variability and uncertainty, and its slow action upon most germs of infection. Sunlight is a good adjunct to other methods of disinfection; it is most valuable in tuberculosis, and should be used wherever possible in conjunction with other physical or chemical methods of disinfection.¹

Desiccation is a good means of disinfection, but can be applied only to very few objects; all bacteria need moisture for their existence and multiplication, hence absolute dryness acts as a good germicide. Meat and fish, certain cereals, and also fruit, when dried, become at the same time disinfected.

Heat is the best, most valuable, all-pervading, most available, and cheapest disinfectant. The various ways in which heat may be used for disinfection are burning, dry heat, boiling, and steam.

Burning is of course the best disinfectant, but it not only destroys the germs in the infected materials, but the materials themselves; its application is therefore limited to articles of little or no value, and to rags, rubbish, and refuse.

Dry Heat.—All life is destroyed when exposed to

¹ Blankets, carpets, and rugs should be frequently hung out on the line in the bright sunlight.—EDITOR.

Physical Disinfectants

a dry heat of 150° C. for one hour, although most of the bacteria of infection are killed at a lower temperature and in shorter time. Dry heat is a good disinfectant for objects that can stand the heat without injury, but most objects, and especially textile fabrics, are injured by it.

Boiling.—Perhaps the best and most valuable disinfectant in existence is boiling, because it is always at command, is applicable to most materials and objects, is an absolutely safe sterilizer and disinfectant, and needs very little if any preparation and apparatus for its use. One half hour of boiling will destroy all life; and most bacteria can be killed at even a lower temperature. Subjection to a temperature of only 70° C. for half an hour suffices to kill the germs of cholera, tuberculosis, diphtheria, plague, etc. Boiling is especially applicable to textile fabrics and small objects, and can readily be done in the house where the infection exists, thus obviating the necessity of conveying the infected objects elsewhere, and perhaps for some distance, to be disinfected.

Steam.—Of all the physical disinfectants steam is the most valuable because it is very penetrating, reliable, and rapid; it kills all bacteria at once and all spores in a few minutes, and besides is applicable to a great number and many kinds of materials and objects. Steam is especially valuable for the disinfection of clothing, bedding, carpets, textile fabrics, mattresses, etc. Steam can be used in a small way, as well as in

George M. Price

very large plants. The well-known Arnold sterilizers, used for the sterilization of milk, etc., afford an example of the use of steam in a small apparatus; while municipal authorities usually construct very large steam disinfecting plants. A steam disinfector is made of steel or of wrought iron, is usually cylindrical in shape, and is covered with felt, asbestos, etc. The disinfector has doors on one or both ends, and is fitted inside with rails upon which a specially constructed car can be slid in through one door and out through the other. The car is divided into several compartments, in which the infected articles are placed; when thus loaded it is run into the disinfector. The steam disinfectors may be fitted with thermometers, vacuum formers, steam jackets, etc.

Gaseous Chemical Disinfectants

Physical disinfectants, however valuable and efficient, cannot be employed in many places and for many materials infected with disease germs, and therefore chemicals have been sought to be used wherever physical disinfectants could not for one or more reasons be employed. Chemicals are used as disinfectants either in gaseous form or in solutions; the gaseous kinds are of especial value on account of their penetrating qualities, and are employed for the disinfection of rooms, holds of ships, etc. There are practically but two chemicals which are used in gaseous

Gaseous Disinfectants

disinfection, and these are sulphur dioxide and formaldehyde.

Sulphur Dioxide.—Sulphur dioxide (SO_2) is a good surface disinfectant, and is very destructive to all animal life; it is one of the best insecticides we have, but its germicidal qualities are rather weak; it does not kill spores, and it penetrates only superficially. The main disadvantages of sulphur dioxide as a disinfectant are: (1) that it weakens textile fabrics; (2) blackens and bleaches all vegetable coloring matter; (3) tarnishes metal; and (4) is very injurious and dangerous to those handling it.

There are several methods of employing sulphur in the disinfection of rooms and objects, e. g., the pot, candle, liquid, and furnace methods.

In the pot methods crude sulphur, preferably ground, is used; it is placed in an iron pot and ignited by the aid of alcohol, and in the burning evolves the sulphur dioxide gas. About five pounds of sulphur are to be used for every 1,000 cubic feet of space. As moisture plays a very important part in developing the disinfecting properties of sulphur dioxide, the anhydrous gas being inactive as a disinfectant, it is advisable to place the pot in a large pan filled with water, so that the evaporated water may render the gas active. For the purpose of destroying all insects in a room an exposure of about two hours to the gas are necessary, while for the destruction of bacteria an exposure of at least fifteen to sixteen hours is required.

George M. Price

In the application of disinfection with sulphur dioxide, as with any other gas, it must not be forgotten that gases very readily escape through the many apertures, cracks, and openings in the room and through the slits near doors and windows; and in order to confine the gas in the room it is absolutely necessary to hermetically close all such apertures, cracks, etc., before generating the gaseous disinfectant. The closing of the openings, etc., is done by the pasting over these strips of gummed paper, an important procedure which must not be overlooked, and which must be carried out in a conscientious manner.

When sulphur is used in candle form the expense is considerably increased without any additional efficiency. When a solution of sulphurous acid is employed, exposure of the liquid to the air suffices to disengage the sulphur dioxide necessary for disinfection. The quantity of the solution needed is double that of the crude drug, i. e., ten pounds for every 1,000 cubic feet of room space.

Formaldehyde.—At present the tendency is to employ formaldehyde gas instead of the sulphur so popular some time ago. The advantages of formaldehyde over sulphur are: (1) its nonpoisonous nature; (2) it is a very good germicide; (3) it has no injurious effect upon fabrics and objects; (4) it does not change colors; and (5) it can be used for the disinfection of rooms with the richest hangings, bric-a-brac, etc., without danger to these. Formaldehyde is evolved either

Gaseous Disinfectants

from paraform or from the liquid formalin; formerly it was also obtained by the action of wood-alcohol vapor upon red-hot platinum.

Formaldehyde gas has not very great penetrating power; it is not an insecticide, but kills bacteria in a very short time, and spores in an hour or two.

Paraform (polymerized formaldehyde; trioxymethylene) is sold in pastilles or in powder form, and when heated reverts again to formaldehyde; it must not burn, for no gas is evolved when the heating reaches the stage of burning. The lamps used for disinfection with paraform are very simple in construction, but as the evolution of the gas is very uncertain, this method is used only for small places, and it demands two ounces of paraform for every 1,000 cubic feet of space, with an exposure of twelve hours. Formaldehyde is also used in the form of the liquid formalin either by spraying and sprinkling the objects to be disinfected with the liquid, and then placing them in a tightly covered box, so that they are disinfected by the evolution of the gas, or by wetting sheets with a formalin solution and letting them hang in the room to be disinfected.

The method most frequently employed is to generate the formaldehyde in generators, retorts, and in the so-called autoclaves, and then to force it through apertures into the room.

Of the other gaseous disinfectants used, hydrocyanic acid and chlorine may be mentioned, although they

George M. Price

are very rarely used because of their irritating and poisonous character.

Hydrocyanic Acid is frequently used as an insecticide in ships, mills, and greenhouses, but its germicidal power is weak.

Chlorine is a good germicide, but is very irritating, poisonous, and dangerous to handle; it is evolved by the decomposition of chlorinated lime with sulphuric acid. Chlorine gas is very injurious to objects, materials, and colors, and its use is therefore very limited.

Chemicals Used as Disinfectants

Solution of chemicals, in order to be effective, must be used generously, in concentrated form, for a prolonged time, and, if possible, warm or hot. The strength of the solution must depend upon the work to be performed and the materials used. The method of applying the solution differs. It may consist in immersing and soaking the infected object in the solution; or the solution may be applied as a wash to surfaces, or used in the form of sprays, atomizers, etc. The most important solutions of chemicals and the ones most frequently employed are those of carbolic acid and bichloride of mercury.

Carbolic Acid.—In the strength of 1:15,000 carbolic acid prevents decomposition; a strength of 1:1,000 is needed for the destruction of bacteria, and a three per cent to five per cent solution for the destruc-

Solutions Used as Disinfectants

tion of spores. Carbolic acid is used, as a rule, in two per cent to five per cent solutions, and is a very good disinfectant for washing floors, walls, ceilings, wood-work, small objects, etc. The cresols, creolin, lysol, and other solutions of the cresols are more germicidal than carbolic acid, and are sometimes used for the same purposes.

Bichloride of Mercury (corrosive sublimate) is a potent poison and a powerful germicide; in solutions of 1:15,000 it stops decomposition; in solutions of 1:2,000 it kills bacteria in two hours; and in a strength of 1:500 it acts very quickly as a germicide for all bacteria, and even for spores. Corrosive sublimate dissolves in sixteen parts of cold and three parts of boiling water, but for disinfecting purposes it should be colored so that it may not be inadvertently used for other purposes, as the normal solutions are colorless and may accidentally be used internally. The action of the bichloride is increased by heat.

Formalin is a forty per cent solution of formaldehyde gas, and its uses and methods of employment have already been considered.

Potassium Permanganate is a good germicide, and weak solutions of it are sufficient to kill some bacteria, but the objections against its use are that solutions of potassium permanganate become inert and decompose on coming in contact with any organic matter. Furthermore, the chemical would be too expensive for disinfecting purposes.

George M. Price

Ferrous Sulphate (copperas) was formerly very extensively used for disinfecting purposes, but is not so used at present, owing to the fact that it has been learned that the germicidal power of this material is very slight, and that its value depends mostly upon its deodorizing power, for which reason it is used on excreta in privy vaults, etc.

Lime.—When carbonate of lime is calcined the product is common lime, which, upon being mixed with water, produces slaked lime; when to the latter considerable water is added, the product is milk of lime, and also whitewash. Whitewash is often used to disinfect walls and ceilings of cellars as well as of rooms; milk of lime is used to disinfect excreta in privy vaults, school sinks, etc. Whenever lime is used for disinfecting excreta it should be used generously, and be thoroughly mixed with the material to be disinfected.

Disinfection of Rooms

Practical disinfection is not a routine, uniform, and thoughtless process, but demands the detailed, conscientious application of scientific data gained by research and laboratory experiments. Disinfection to be thorough and successful cannot be applied to all objects, material, and diseases in like manner, but must be adjusted to the needs of every case, and must be performed conscientiously. Placing a sulphur candle in a room, spilling a quart of carbolic acid or a couple

Disinfection of Rooms

of pounds of chlorinated lime upon the floors or objects, may be regarded as disinfection by laymen, but in municipal disinfection the disinfector must be thoroughly versed in the science of disinfection and be prepared to apply its dictates to practice.

Rooms.—In the disinfection of rooms the disinfectant used varies with the part of the room as well as with the character of the room. When a gaseous disinfectant is to be used sulphur dioxide or formaldehyde is employed, with the tendency lately to replace the former by the latter. Wherever there are delicate furnishings, tapestries, etc., sulphur cannot be used on account of its destructive character; when sulphur is employed it is, as a rule, in the poorer class of tenement houses where there is very little of value to be injured by the gas, and where the sulphur is of additional value as an insecticide. Whenever gaseous disinfectants are used the principal work of the disinfector is in the closing up of the cracks, apertures, holes, and all openings from the room to the outer air, as otherwise the gaseous disinfectant will escape. The closing up of the open spaces is accomplished usually by means of gummed-paper strips, which are obtainable in rolls and need only to be moistened and applied to the cracks, etc. Openings into chimneys, ventilators, transoms, and the like must not be overlooked by the disinfector. After the openings have already been closed up the disinfectant is applied and the disinfector quickly leaves the room, being careful to close the door

George M. Price

behind him and to paste gummed paper over the door cracks. The room must be left closed for at least twelve, or better, for twenty-four hours, when it should be opened and well aired.

Walls and Ceilings of rooms should be disinfected by scrubbing with a solution of corrosive sublimate or carbolic acid; and in cases of tuberculosis and wherever there is fear of infection adhering to the walls and ceilings, all paper, kalsomine, or paint should be scraped off and new paper, kalsomine, or paint applied.

Metal Furniture should first be scrubbed and washed with hot soapsuds, and then a solution of formalin, carbolic acid, or bichloride applied to the surfaces and cracks.

Wooden Bedsteads should be washed with a disinfecting solution and subjected to a gaseous disinfectant in order that all cracks and openings be penetrated and all insects be destroyed.

Bedding, Mattresses, Pillows, Quilts, etc., should be packed in clean sheets moistened with a five per cent solution of formalin, and then carted away to be thoroughly disinfected by steam in a special apparatus.

Sheets, Small Linen and Cotton Objects, Tablecloths, etc., should be soaked in a carbolic-acid solution and then boiled.

Rubbish, Rags, and Objects of Little Value found in an infected room are best burned.

Glassware and Chinaware should either be boiled or subjected to dry heat.

CHAPTER XI

Cost of Conveyed Heating Systems¹

IN our variable climate, with its sudden and extreme changes in temperature, the matter of heating and ventilation demands the serious attention of all houseowners and housebuilders.

The most common method of heating the modern dwelling is by a hot-air furnace in the cellar, with sheet-metal ducts for conveying the heated air to the various rooms. The advantages of a furnace are cheapness of installation and, in moderate weather, a plentiful supply of warm but very dry air. The disadvantages are the cost of fuel consumed, the liability of the furnace to give off gas under certain conditions, and the inability to heat certain rooms with some combinations of temperature and wind. The cost of installing a furnace and its proper ducts in a ten-room house is from \$250 to \$350; such a furnace will consume fifteen to twenty tons of anthracite coal in a season in the latitude of New York City. The hot-air system works better with compact square houses than with long, "rangy" structures. For a

¹ See Chapter III for full discussion.—EDITOR.

Cost of Installation

house fully exposed to the northwest blasts, one of the other systems should be considered.

Perhaps the next most popular arrangement is a sectional cast-iron hot-water heater, with a system of piping to and from radiators in the rooms to be heated. Hot-water heating has many advantages, some of which are the warmth of the radiators almost as soon as the fire is started and after the fire is out; the moderation of the heat; the freedom from sudden changes in amount of heat radiated; the absence of noise in operation, and the low cost in fuel consumed. Some of the disadvantages are the high cost of installation and the lack of easy or ready control (as the hot water cools slowly, and shutting the radiator valves often puts the whole system out of adjustment). A hot-water heating plant for a ten-room house will cost \$400 to \$600, according to the type of boiler; the corresponding fuel consumption will be twelve to sixteen tons of coal per season.

The third system in common use is by steam through radiators or coils of pipe connected to a cast-iron sectional boiler, or a steel tubular boiler set in brickwork. This system is in use in practically all large buildings; and its advantages are the moderate cost of installation (as the single-pipe system is very efficient and the pressure to be provided against in connections and fittings is slight); the ease of control (since any good equipment will furnish steam in twenty minutes from the time the fire is

Conveyed Heating Systems

started, and fresh coal thrown upon the fire with a closing of dampers will stop the steam supply in five minutes—or any radiator may be turned on or off in an instant); the ability to heat the entire house in any weather, or any single room or suite of rooms only; and, lastly, the moderate fuel consumption.

The disadvantages of steam heat are no heat, or next to none, without the production of steam, involving some noise in operation, and danger of explosion. Steam equipment in a ten-room house will cost \$300 to \$550, the lower price being for a sectional boiler and the higher for a steel boiler set in brickwork. The fuel consumed will be from ten to fifteen tons per season.

Both hot-water and steam systems require supplementary means of ventilation. Placing the radiators in exposed places, as beneath windows, in the main hall near the front door, in northwest corners and near outside walls, will insure some circulation of air; and, if one or two open fire places be provided on each floor, there will be, in most cases, sufficient ventilation without the use of special ducts.

1. The first part of the document is a list of names and addresses of the members of the committee.

2. The second part of the document is a list of names and addresses of the members of the committee.

3. The third part of the document is a list of names and addresses of the members of the committee.

4. The fourth part of the document is a list of names and addresses of the members of the committee.

5. The fifth part of the document is a list of names and addresses of the members of the committee.

6. The sixth part of the document is a list of names and addresses of the members of the committee.

7. The seventh part of the document is a list of names and addresses of the members of the committee.

8. The eighth part of the document is a list of names and addresses of the members of the committee.

9. The ninth part of the document is a list of names and addresses of the members of the committee.

10. The tenth part of the document is a list of names and addresses of the members of the committee.

11. The eleventh part of the document is a list of names and addresses of the members of the committee.

12. The twelfth part of the document is a list of names and addresses of the members of the committee.

13. The thirteenth part of the document is a list of names and addresses of the members of the committee.

14. The fourteenth part of the document is a list of names and addresses of the members of the committee.

15. The fifteenth part of the document is a list of names and addresses of the members of the committee.

16. The sixteenth part of the document is a list of names and addresses of the members of the committee.

17. The seventeenth part of the document is a list of names and addresses of the members of the committee.

18. The eighteenth part of the document is a list of names and addresses of the members of the committee.

19. The nineteenth part of the document is a list of names and addresses of the members of the committee.

20. The twentieth part of the document is a list of names and addresses of the members of the committee.

21. The twenty-first part of the document is a list of names and addresses of the members of the committee.

22. The twenty-second part of the document is a list of names and addresses of the members of the committee.

23. The twenty-third part of the document is a list of names and addresses of the members of the committee.

24. The twenty-fourth part of the document is a list of names and addresses of the members of the committee.

25. The twenty-fifth part of the document is a list of names and addresses of the members of the committee.

26. The twenty-sixth part of the document is a list of names and addresses of the members of the committee.

27. The twenty-seventh part of the document is a list of names and addresses of the members of the committee.

28. The twenty-eighth part of the document is a list of names and addresses of the members of the committee.

LANE MEDICAL LIBRARY

To avoid fine, this book should be returned on
or before the date last stamped below.

--	--	--

L81 Winslow, K.
W76 The home medical
v.5 libraryç 74372

1909

NAME

DATE DUE

